
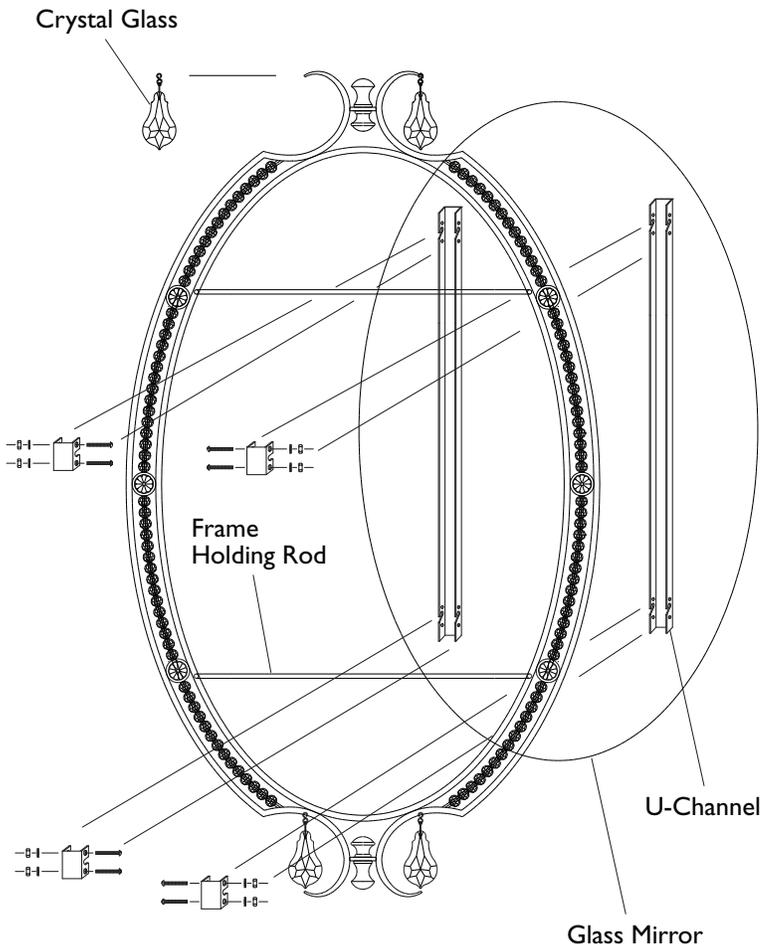


Assembly Instructions For


MR1106 (E) 5/10

		Extra PIN Qty.	PIN PART	PIN DESCRIPTION
Required	X4	X1		Small S- Hook
Extra	1	X1		Head Pin

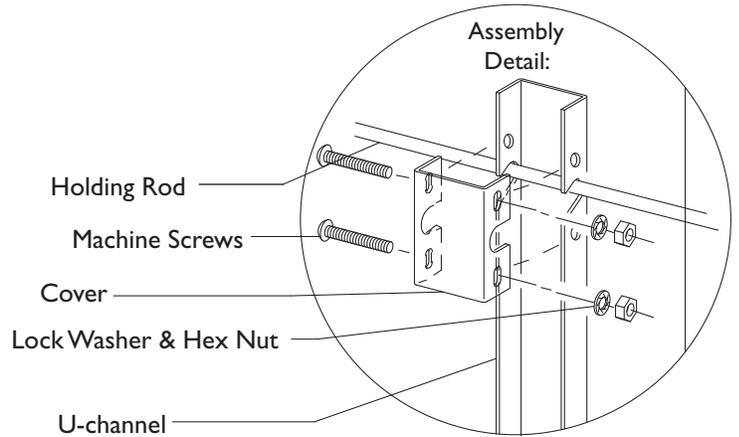

Carefully unpack and identify all parts before assembly.

1. Lay glass mirror, with u-channels facing up, on a non-abrasive and elevated surface.
2. Lay frame on top of glass mirror by aligning frame holding rods into notches in u-channels. Make certain glass mirror is centered within frame.
3. Lock holding rods into u-channel by attaching cover and then fastening with machine screws (from inner-side of u-channel) and lock washer and hex nut (from outer-side of u-channel). See assembly detail graphic.
4. Hang all crystal glass parts as shown on drawing.
5. **WALL MOUNTING:** Requires two 30lbs. or over capacity picture frame hangers or hooks (not included). Screws are not recommended.
 - A. Decide desired wall location to hang mirror.
 - B. Install 2 picture frame hangers or hooks (not included) on wall with approximately 14" distance to each other at location corresponding with upper holding rod.



**MURRAY
FEISS**

GENERATION
BRANDS™ 