
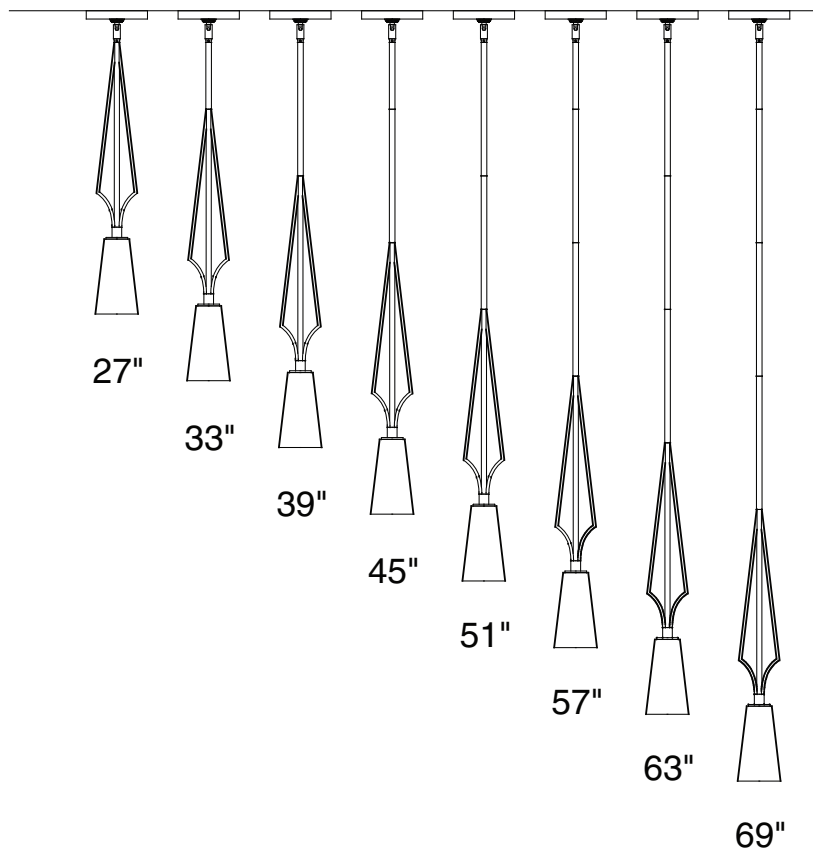


Assembly Instructions For

P1226


(E) 5/10

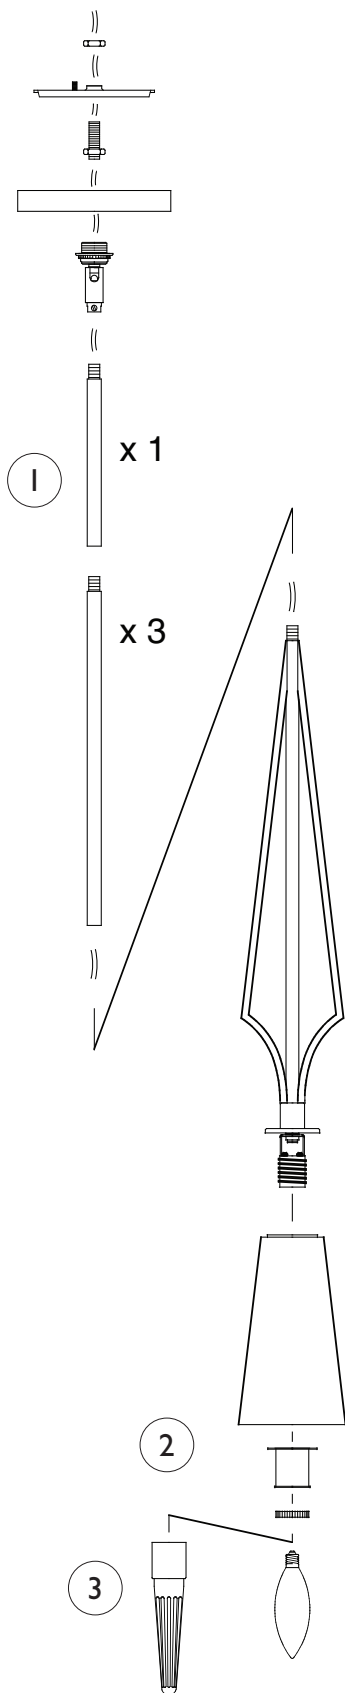

IMPORTANT TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly. Bulbs not included.

1. Follow enclosed supplement installation instructions for electrical and fixture installation onto house outlet box. If you do not have an outlet box at desired location to attach the fixture then hire a qualified electrician to create one.
2. Install shade onto socket by fastening with spacer tube and counter ring. Note correct position of spacer tube from left diagram. Use enclosed wrench to tighten the counter ring.
3. Install light bulb (not included). See relamping label at socket area for type and maximum allowed wattage.



**MURRAY
FEISS**

GENERATION
BRANDS™