

## Assembly Instructions For

## P1120 (E) 10/07

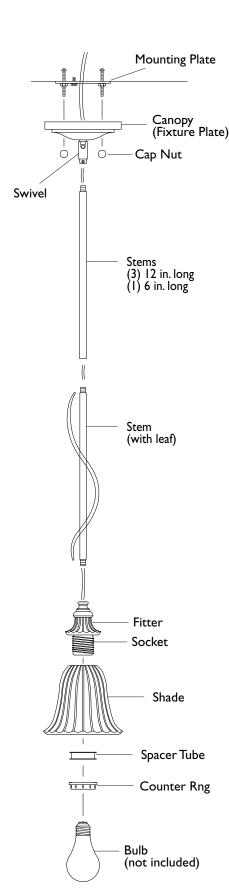

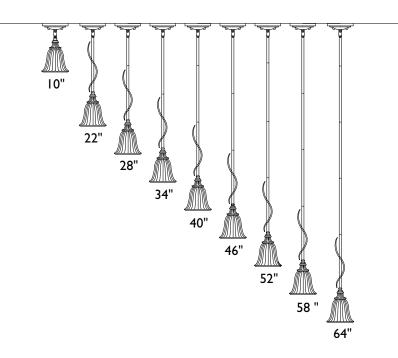

## IMPORTANT TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly. Bulb not included.

I. Install stems:

A. Choose desired installation height from any combination of stems provided. NOTE:Additional stems can be purchased to increase installation height. Do not add more stems than will allow 6" (15 cm) of fixture wires above canopy. Thread fixture wires through each stems to be used. Screw stems together until secure. Screw stem assembly into top of fixture until secure. NOTE: This fixture can be installed without any stems for direct mount onto canopy.

B. Screw swivel securely onto top end of stem assembly (or top end of fixture for without stem installation).

- 2. Measure 6" of wire from end of fixture plate and cut off remaining wire. Split wires and strip off 3/4" of insulation from each end.
- 3. Follow enclosed "Multiple Standard Installation Instructions" for electrical and fixture installation onto ceiling outlet box.
- 4. Install glass shade onto fitters by fastening with spacer tube and counter ring.
- Install bulbs (not included). See relamping label located near socket area for type and maximum allowed wattage.

