
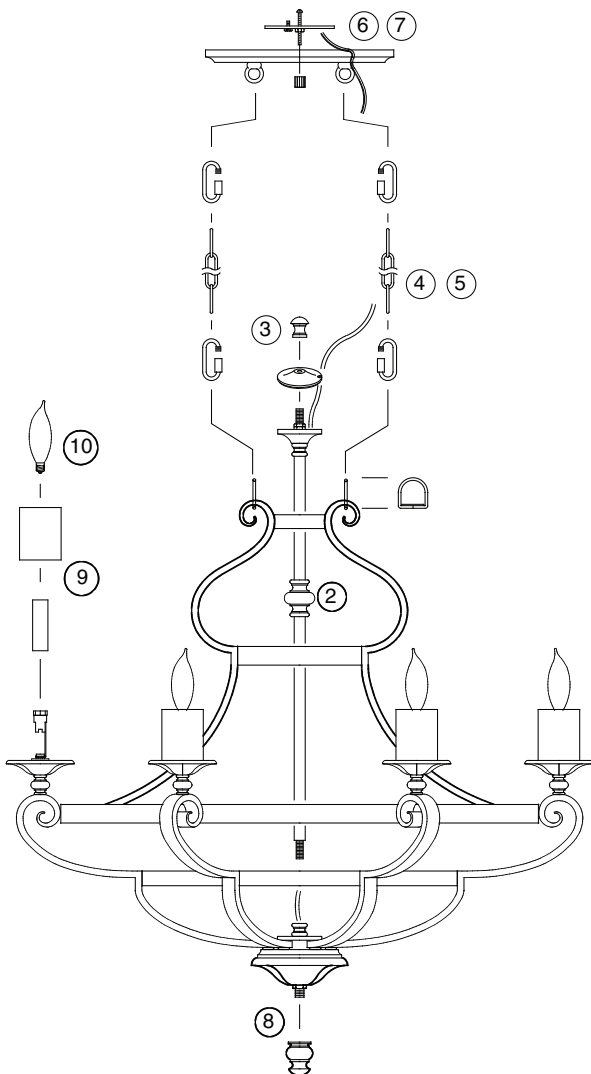



Assembly Instructions For F2517/6 (E) 11/09

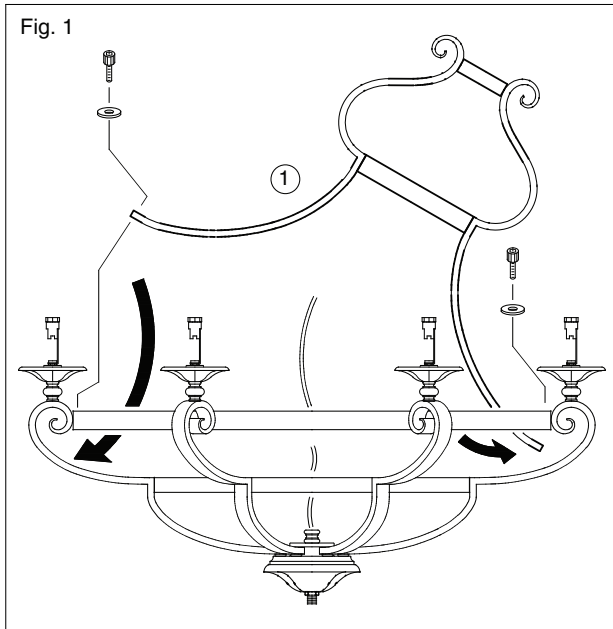

**IMPORTANT
TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT
BREAKER BOX
BEFORE STARTING INSTALLATION**

Carefully unpack and identify all parts before assembly. Bulbs not included.

1. A. Tilt one side of upper frame and insert below mounting tab located at one end of the upper ring. Then bring down the other end of upper frame and locate below opposite mounting tab. See fig. 1.
B. Secure upper frame onto mounting tabs by fastening with round washer and thumb screws.
2. Slip center column through fixture wires, which are located above the top coupler. Then while gently pulling wires from above, install the column by screwing securely onto the coupler.
3. Install cover onto top of center column by fastening with finial. NOTE: Place fixture wires onto notch before closing the cover onto the column.
4. Attach Chains:
A. Open adjustable chain links by turning small round tube at one side.
B. Hook chain onto open adjustable chain link. Then attach adjustable chain link onto loop located at fixture plate. Close adjustable chain link by turning back small round tube.
C. Repeat other side.
D. At this point determine the desired length of chains to hang. Remove any unwanted chain links. Additional chains can be purchased through your local Murray Feiss retailer.
E. Hook another open adjustable chain link at bottom of each chain. Then attach adjustable chain links onto loop located at top of fixture arm curls. Close adjustable chain links by turning back small round tube.
5. Take ground wire (without plastic insulation) and weave through above chain links. Then thread through hole in fixture plate loop. Repeat with fixture wires (with plastic insulation).
6. Cut excess fixture and ground wires leaving only 6" (15 cm) length above canopy. Split the fixture wires into two strands. Then strip 3/4" (19 mm) of outer plastic insulation.
7. Follow enclosed supplement installation instructions for electrical and fixture installation onto house outlet box. If you do not have an outlet box at desired location to attach the fixture then hire a qualified electrician to create one.
8. Install finial by screwing onto bottom of fixture.
9. Slip tube over sockets. And then slip candle over tube. Note: Deeper hollow section of candle must be located at bottom.
10. Install bulb (not included). See relamping label located at socket area for type and maximum allowed wattage.



**MURRAY
FEISS**

GENERATION
BRANDS™