
Assembly Instructions For **WB1570** (E) 12/10

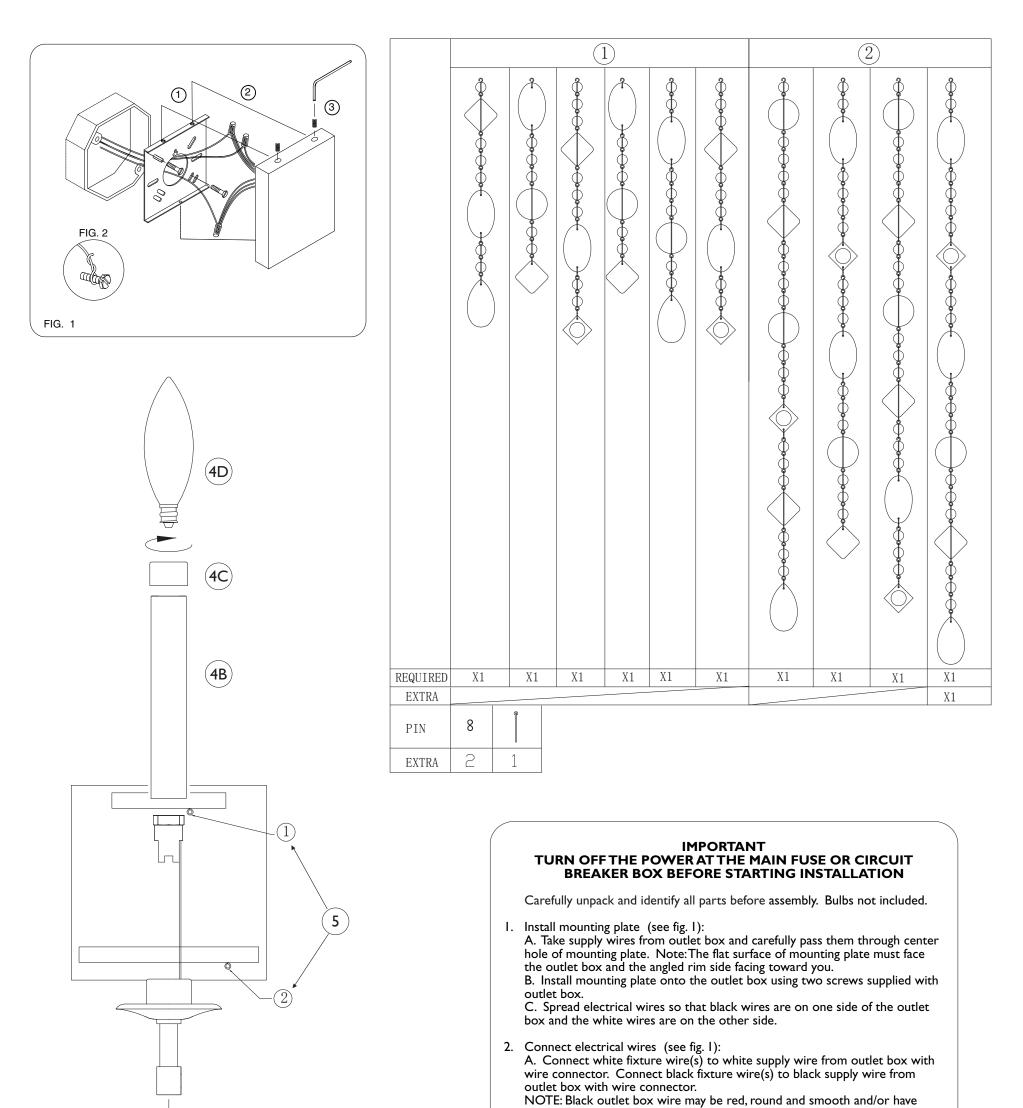



copper conductor. White outlet box wire may be red, round and smooth and/or have have a silver conductor. B. Connect fixture ground wire (without plastic insulation) to ground wire

B. Connect fixture ground wire (without plastic insulation) to ground wire from outlet box (usually with green insulation) with wire connector. Note: If there is no supply ground wire at outlet box then attach fixture ground wire securely onto green grounding screw located at mounting plate. IMPORTANT: Never connect ground wire to black or white supply wires (from outlet box).

- 3. Install fixture plate. While carefully tucking all electrical wires inside of fixture plate, install the fixture plate onto the mounting plate by fastening with set screw. Use provided hex key to tighten.
- 4. A. Install stem onto bottom of fixture.
 B. Install candle tube by slipping through sockets.
 C. Install candle tube cap onto the top of the candle tube.
 D. Install type-B, candelabra base, of 60 Watt maximum bulbs (not included).
- 5. Hang all crystal glass parts as shown on drawing.

NOTE: To replace broken crystal or pin, extras are included in hardware bag. Replace by gently bending open pin, remove broken crystal or pin, hook new one, then close back pin. Avoid bending pin into sharp angle.