

PARTS & ASSEMBLY SHEET

Fixture Name: Accurian 7158-3P PW/RBZ

|--|

Notice: Please review the parts listing and check for all parts before assembling the fixture. If any parts are missing or damaged, please note onthis sheet and contact the place of purchase to arrange for replacement parts.

DADMC I I	rem	Company Name:Co. Account #:			
PARTS LI	151	to be filled out by re	etailer		
Canopy		Wire connectors		Тор Іоор	
1ea @5"X1"		3ea P3 Orange		1ea 80X38X26mm	
Chain		Junction Box Screw	(Spring Washer	
1ea 6ft x3.8mm		2ea 8/32" x 1"		1ea Φ15X3mm	
Chain connector		Canopy Loop with Collar		Nipple	
2ea @4X55mm		1ea Ф23X42.4mm		1ea @3/8 x 45mm	l
Mounting Strap w/ ground screw		Hex Nut		Hex Key	
1ea 100X20X4.5mm	~	2ea @3/8 x 4mm		1ea	
Threaded Rod	O)))))))))))))	Flat washer		Cap	
1ea 3/8-27NX125mm		1ea Ф25X2mm		1ea Ф52.4x5mm	
Bottom cap		Finial			
lea Φ59X9mm		1ea Ф13X15mm			
Part Needed				Quantity	
Part Needed				Quantity	
Reason why Comments	(missing, scratch	ed, broken glass, be	ent, bad finish)	-	


FIXTURE ASSEMBLY INSTRUCTIONS

Read and review installation instruction sheet before assembling the fixture.

ASSEMBLING THE FIXTURE (Fig. 1)

- 1. Gently spread the arms until evenly spaced if arms are packed closed.
- 2. Thread the fixture Center column (T) into the housing nipple (S).

NOTE: INSTALL THE GLASS ASSEMBLY AFTER THE FIXTURE IS HUNG.

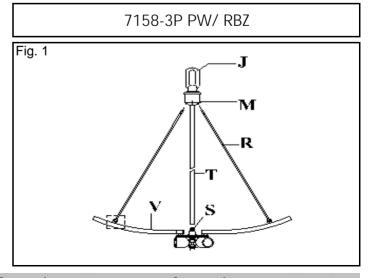


For Customer Service, contact the place of purchase to arrange for replacement parts.

PARTS & ASSEMBLY SHEET

Fixture Name: Accurian 7158-3P PW/RBZ

- 4. Slide the Decorative Rods (R) into the bracket on Arms (V),and tighten the Screws (U) with Hex Key(O) (See Detail: A-A")
- 5. Insert the Decorative Rods (R) into the holes on Top cap housing (M). Turn housing to one side to allow easierr acces, turn back to secure rods in place
- 6. By measuring determine correct number of links needed for proper hanging height. Use a pair of pliers to open one link of the Chain (K) then remove the excess Chain (K) and discard it.
- 7. Use one chain connector (L) to attach one end of the chain to the Top loop (J) and close the chain connector.
- 8. Feed the fixture wires through the Chain (every three links) and pull the wires until taut.
- 9. Slip Canopy loop collar (H) over the chain, then do the same with the canopy (G).
- 10. When ready to complete the installation Use the other chain connector and attach the other end of the chain to the canopy loop (F) and close the chain connector.
- 11. Make sure the weight of the chandelier will be supported by the chain-not the electrical wire.
- * You may now install the fixture. Note: Complete these remaining steps after the fixture is hung.
- 10. Thread the threaded rod/nipple (X) into the socket assembly coupler, securely.
- 11. Install the light bulbs in accordance with the fixture's specifications.
- 12. Slide the Cap (Z) Glass shade (Y) and Flat washer (N) onto the Nipple (X), secure in place with the Hex nut (P). Slide the Bottom cap (Q) over the Nipple (X), secure in place with the Finial (W).

(DO NOT EXCEED MAXIMUM WATTAGE RATING))

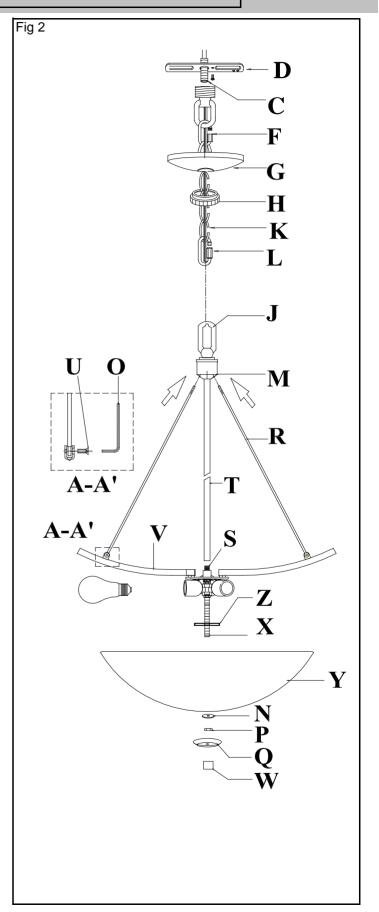



INSTALLATION INSTRUCTIONS

Fixture Name: Accurian 7158-3P/5/9/D5/ND3 PW/RBZ

For Chandelier Light Fixture

WARNING! SHUT OFF POWER AT FUSE OR CIRCUIT BREAKER.

HANGING THE FIXTURE (Fig. 1)


- 1. Carefully remove the new fixture from the carton and the yellow bag that holds all parts. Check that all parts are included as shown in the illustration and parts list.
- 2. Shut off the power at the circuit breaker and remove old fixture from ceiling, including the old mounting strap.
- 3. Thread Nipple (C) into Canopy Loop (F) until snug.
- 4. Thread other end of the Nipple (C) with Canopy Loop attached into Mounting Strap (D).
- 5. Place Lock Washer (B) over end of Nipple (C) protruding through Mounting Strap (D) and thread Hex Nuts (A) onto Nipple until tight.
- 6. Take this mounting strap assembly and mount to ceiling junction box with junction box Screws (E). Tighten screw securely with screw driver.
- 7. Unscrew the Canopy loop collar (H) from the Canopy loop. Take the canopy and pass over the Canopy loop. approximatly one half of the canopy loop exterior threads should be exposed. Adjust until desired height is reached. *the Canopy loop collar should fit snugly on the Canopy loop after the canopy is installed. Remove Canopy and Canopy lock collar.
- 8. Assemble the fixture and have an assistant or secure support hold the weight of the fixture while you complete the wiring connections.
- 9. Thread the fixture wires and ground wire of the assembled fixture through the canopy loop and nipple and into the outlet box.


CONNECTING THE WIRES (Fig. 2)

- 10. Attach the power supply wires to the fixture lead wires by connecting BLACK to BLACK (or SMOOTH) and WHITE to WHITE (or RIBBED).
- 11. Attach the GROUND wire(GREEN or COPPER) from the Junction Box and the fixture Ground wire to the green Ground Screw on the Mounting Bracket (D) or connect both wires together using the correct size of wire connectors.

NOTE: Twist the wires together in the same direction you twist the wire connector onto the wires.

- 12. Tuck these wire connections neatly into the Junction Box.
- 13. Raise Canopy (G) to the ceiling and secure in place by tightening the Canopy loop collar (H) into the Canopy Loop (F).
- 14. Install the light bulbs and shade as per the fixture assembly sheet.

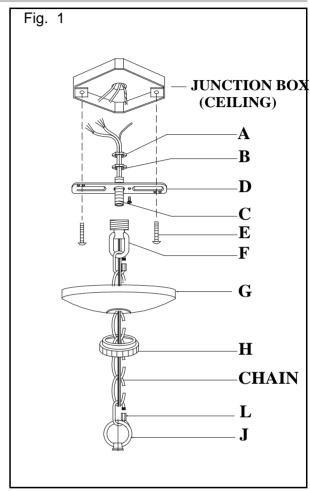

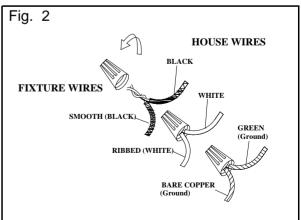

YOUR INSTALLATION IS NOW COMPLETE. RETURN POWER TO THE JUNCTION BOX AND TEST THE FIXTURE.