

# PARTS & ASSEMBLY SHEET

Fixture Name: Pemberly Court 1089-3P RSB

This fixture assembled PO:\_\_\_\_\_ Date: \_\_\_\_

**Notice:** Please review the parts listing and check for all parts before assembling the fixture. If any parts are missing or damaged, please note onthis sheet and contact the place of purchase to arrange for replacement parts.

PARTS LIST		Company Name:to be filled out by retailer		Co. Account #:	
Canopy		Wire connectors		Loop Assembly Top loop & Center of	
1ea @5-1/2"X1-1/4"		3ea P4 Orange		1ea @405mm	Coldinii
Chain		Junction Box Screw	(	Finial	
1ea 6ft x4.2mm		2ea 8/32" x 1"		1ea @3/8 x 25mm	
Chain connector		Canopy Loop with Collar		Nipple/Stem With Hex Nut	
2ea @4.2X50mm	1ea @3/8 x 40mm x 5mm		1ea @3/8 x 55mm/@3/8 x 95mm		
Mounting Strap w/ ground screw		Hex Nut		Spring Washer	9
1ea 3/4"X4"	e e	2ea/1ea @3/8 x 3mm/@3/8 x 5mm		1ea @15 x 2mm	
Bottom Cap		Flat Washer	0	Rubber Washet	
1ea @70 x 26mm		2ea @2" x 2mm		2ea @2" x 2mm	
Deco Nut		Deco Screw			
3ea @10 x 9.5mm		3ea @10 x 22mm			
Part Needed				Quantity	
Part Needed	(missing, scratched, broken glass, bent, bad finish)			Quantity	
Reason why Comments				<del>-</del>	


### FIXTURE ASSEMBLY INSTRUCTIONS

Read and review installation instruction sheet before assembling the fixture.

## ASSEMBLING THE FIXTURE (Fig. 1)

- 1. Feed the fixture wires through the Loop Assembly (J) and pull the wires until taut.
- 2. Then screw the Loop Assembly (J) into the coupling of Socket Assembly (M) until tight.

NOTE: INSTALL THE GLASS ASSEMBLY AFTER THE FIXTURE IS HUNG.

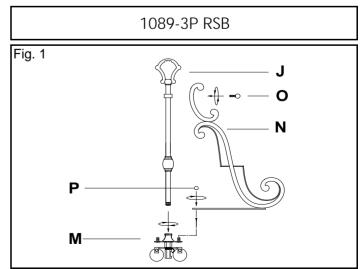

# PARTS & ASSEMBLY SHEET


Fixture Name: Pemberly Court 1089-3P RSB

3. Pass the holes on the bottom of the Side Arms (N) over bolt of the Socket Assembly (M) and line up the holes on the top ends onto mounting holes on the side of the Loop Assembly (J).

Thread Deco Nut (P) onto bolts and thread Deco Screws (O) into mounting holes the secure Side Arms (N) until tight.

- 4. By measuring determine correct number of links needed for proper hanging height. Use a pair of pliers to open one link of the Chain (K) then remove the excess Chain (K) and discard it.
- 5. Use one chain connector (L) to attach one end of the chain to the Top loop (J) and close the chain connector.
- 6. Feed the fixture wires through the Chain (every three links) and pull the wires until taut.
- 7. Slip Canopy loop collar (H) over the chain, then do the same with the canopy (G).
- 8. When ready to complete the installation Use the other chain connector and attach the other end of the chain to the canopy loop (F) and close the chain connector.
- 9. Make sure the weight of the chandelier will be supported by the chain-not the electrical wire.
- \* You may now install the fixture. Note: Complete these remaining steps after the fixture is hung.
- 10. Thread the Stem With Hex Nut (Q) onto the Socket assembly coupler until tight.
- 11. Install the light bulbs in accordance with the fixture's specifications.
- 12. Slide the Flat Washer (R), Rubber Washer (S), Glass shade (T), Rubber Washer (S) and Flat Washer (R) over the Stem With Hex Nut (Q), secure in place with the Hex nut (U). Slide the Bottom cap (V) over the Stem With Hex Nut (Q), secure in place with the Finial (W).

(DO NOT EXCEED MAXIMUM WATTAGE RATING)

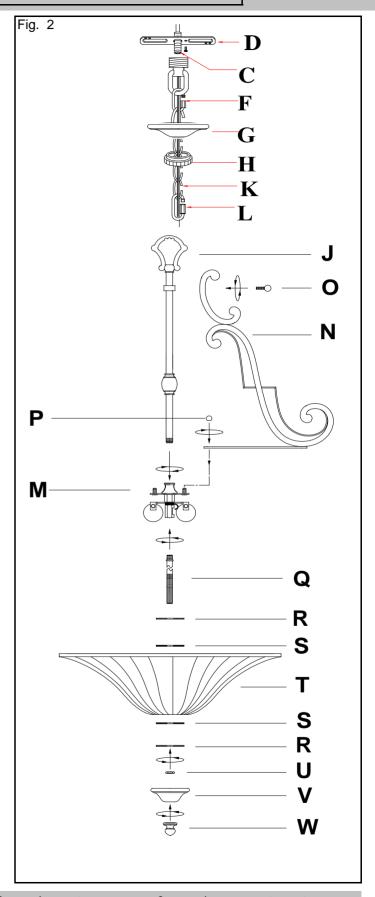

For Customer Service, contact the place of purchase to arrange for replacement parts.

# GOLDEN Zlegan lighting for everydag living

# INSTALLATION INSTRUCTIONS

Fixture Name: Pemberly Court 1089-3P RSB

For Chandelier Light Fixture

## WARNING! SHUT OFF POWER AT FUSE OR CIRCUIT BREAKER.

## HANGING THE FIXTURE (Fig. 1)


- 1. Carefully remove the new fixture from the carton and the yellow bag that holds all parts. Check that all parts are included as shown in the illustration and parts list.
- 2. Shut off the power at the circuit breaker and remove old fixture from ceiling, including the old mounting strap.
- 3. Thread Nipple (C) into Canopy Loop (F) until snug.
- 4. Thread other end of the Nipple (C) with Canopy Loop attached into Mounting Strap (D).
- 5. Place Lock Washer (B) over end of Nipple (C) protruding through Mounting Strap (D) and thread Hex Nuts (A) onto Nipple until tight.
- 6. Take this mounting strap assembly and mount to ceiling junction box with junction box Screws (E). Tighten screw securely with screw driver.
- 7. Unscrew the Canopy loop collar (H) from the Canopy loop. Take the canopy and pass over the Canopy loop. approximatly one half of the canopy loop exterior threads should be exposed. Adjust until desired height is reached. \*the Canopy loop collar should fit snugly on the Canopy loop after the canopy is installed. Remove Canopy and Canopy lock collar.
- 8. Assemble the fixture and have an assistant or secure support hold the weight of the fixture while you complete the wiring connections.
- 9. Thread the fixture wires and ground wire of the assembled fixture through the canopy loop and nipple and into the outlet box.


#### CONNECTING THE WIRES (Fig. 2)

- 10. Attach the power supply wires to the fixture lead wires by connecting BLACK to BLACK (or SMOOTH) and WHITE to WHITE (or RIBBED).
- 11. Attach the GROUND wire(GREEN or COPPER) from the Junction Box and the fixture Ground wire to the green Ground Screw on the Mounting Bracket (D) or connect both wires together using the correct size of wire connectors.

NOTE: Twist the wires together in the same direction you twist the wire connector onto the wires.

- 12. Tuck these wire connections neatly into the Junction Box.
- 13. Raise Canopy (G) to the ceiling and secure in place by tightening the Canopy loop collar (H) into the Canopy Loop (F).
- 14. Install the light bulbs and shade as per the fixture assembly sheet.

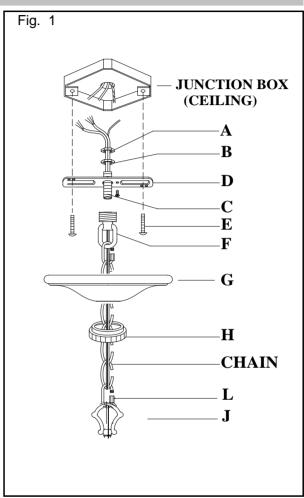

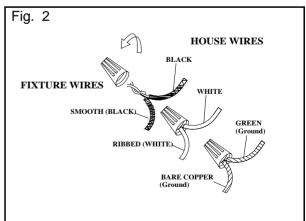

YOUR INSTALLATION IS NOW COMPLETE.
RETURN POWER TO THE JUNCTION BOX
AND TEST THE FIXTURE.