




# ASSEMBLY INSTRUCTIONS FOR 39502

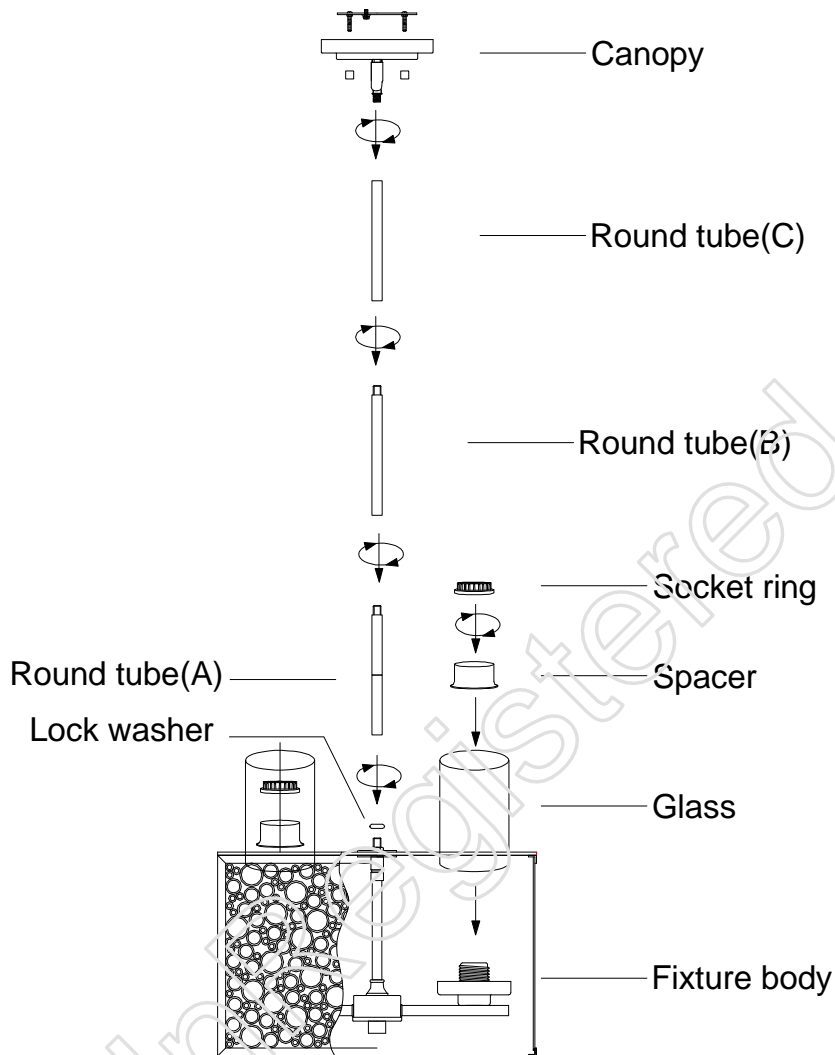

1. Before beginning the assembly, carefully unpack and identify all parts referring to the illustration.
2. Turn the power to the installation point **OFF**.
3. Thread the round tube (A) into the coupling at center of the fixture body, round tube (B) into the protruding nipple at top of the round tube (A) until tighten.
4. Thread one end of the round tube (C) into the protruding nipple at top of the round tube (B), another end of round tube (C) into the protruding nipple at bottom of the canopy.
5. Place the glass, spacer over the socket, secure with the socket ring.
6. Install proper bulbs (not provided) to the socket referring to the markings and labels on fixture for maximum wattage.
7. Referring to the wiring and installation instructions for the fixture body.
8. Restore power to the installation point **ON**. Retain this sheet for future reference.