

INSTALLATION INSTRUCTIONS FOR 6101 For Wall Mount Fixture

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.

MOUNTING THE FIXTURE

Installation (see fig.1)	Wiring (see fig.2)
1. Shut off the power at the circuit breaker and remove old fixture,	1. Connect the electrical wires as follows. Connect the
including the single bar.	black wire from the fixture to the black house (hot)
2. Thread the pipe screw part way into the center hole of the single	Wire. Connect the white wire from the fixture to the
bar and secure with hex nut.	white (neutral) house wire. Make sure all wire nuts are
3. Attach the single bar to the junction box using two box screws.	secured. You may wrap the connections with electrical
The side of the single bar marked "GND" must face out.	tape. If your outlet box has a ground wire (green or bare
4. Follow wiring instructions carefully (see fig.2)	copper) connect fixture's ground wire to it. Otherwise
5. Place the lamp body(A) over the nipple then tighten it with the	attach the bare copper fixture wire to the green ground
ball nut (D).	screw on the single bar.
6. Attach the glass shade(C) onto the lamp socket(E), and using	2. Tuck the wire connections neatly into the wall junction
the ring(B) by turning it clockwise until tight.	box.
7. Install the light bulbs in accordance with the fixture's	
specifications. DO NOT EXCEED THE MAXIMUM	
WATTAGE RATING!	

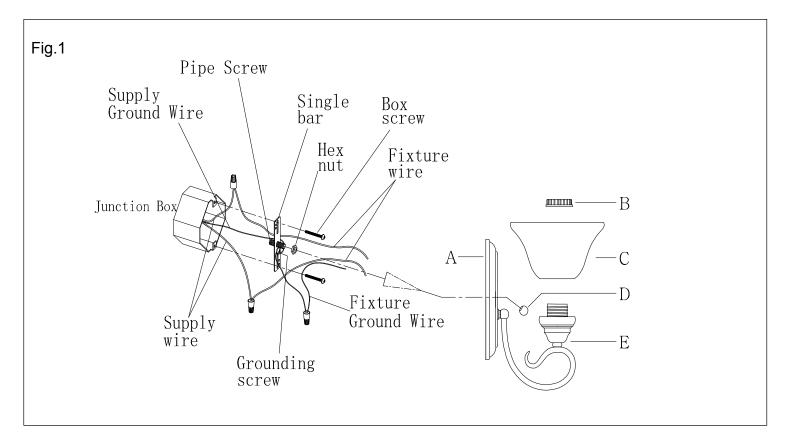

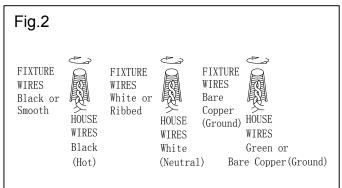

Divex Lighting