


## ASSEMBLY INSTRUCTIONS

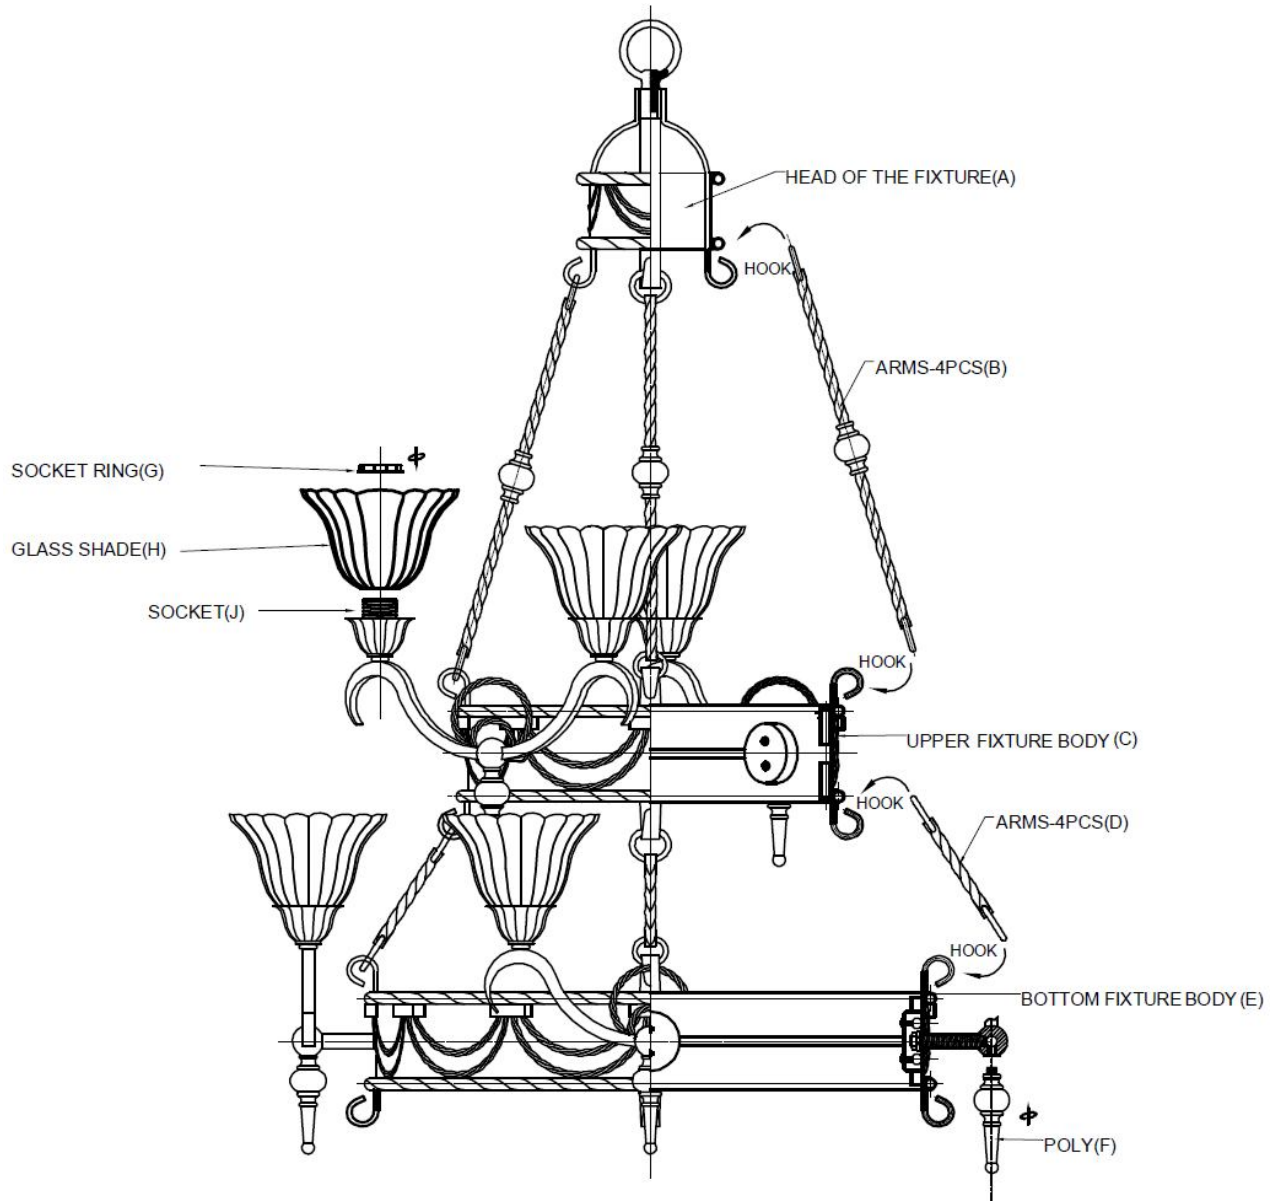

### INSTALLATION PROCEDURE:

1. INSERT BOTH EDGES OF THE ARMS (B) TO THE HOOK OF THE UPPER FIXTURE BODY (C) AND THE HEAD OF THE FIXTURE (A).
2. INSERT BOTH EDGES OF THE ARMS (D) TO THE HOOK OF THE UPPER FIXTURE BODY (B) AND THE HOOK OF BOTTOM FIXTURE BODY (E).
3. THREAD THE POLY (F) TO THE BOTTOM OF THE BODY FIXTURE (E).
4. SCREW THE GLASS SHADE (H) TO THE SOCKET (J) AND SCREW THE GLASS SHADE (H) WITH SOCKET RING (G).