

# **ASSEMBLY INSTRUCTIONS**

Model No.:1986-1P-EBZ,1986-1P-SS


## Tools required:



# **SAFETY PRECAUTIONS:**

- 1. Turn off power at main electrical service box before starting installation.
- 2. Electrical connections must comply with local code ordinances or national electrical codes.

### INSTALLATION:

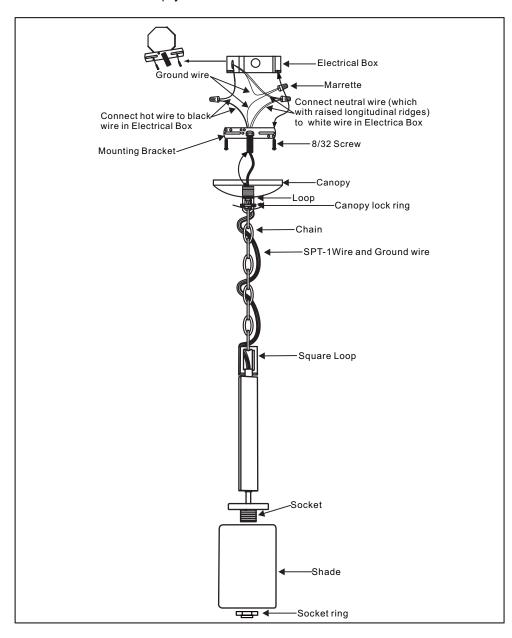

Imported by: Yosemite Home Decor. Address: 4250 West Shaw Avenue Fresno, CA 93722 Telephone: 1-800-305-9872 Fax: 559-276-8738



# INSTRUCTIONS D'ASSEMBLAGE

Numéro de modèle:1986-1P-EBZ,1986-1P-SS

### Outils nécessaires:



### Mesures de sécurité:

- 1. Coupez le courant au coffret de branchement électrique principal avant de commencer l'installation.
- 2. Les connexions électriques doivent se conformer aux ordonnances des codes locaux ou aux normes électriques nationales.

#### Installation:

