

# CRAFTSMAN II

Extra Long-plank, Wide-width PureForm™ Solid Bamboo Flooring



FINE BAMBOO FLOORING, PANELS & WORKTOPS

Our classic PureForm™ bamboo in extra long planks for a traditional look with contemporary versatility. Featuring a tongue and groove profile for flexible installation, including an option to float this floor below grade. The wider, longer planks install faster and draw the eye creating an increased sense of space.



## FEATURES + BENEFITS

### PERFORMANCE

- Durable 7-step UV Cured Polyurethane coating with aluminum oxide wear layer for abrasion resistance
- Premium PureForm bamboo – 40% harder than oak
- Optimum 5.5 Moso Bamboo: Harvested at maturity for peak density, creating a harder and more stable product for lasting beauty and performance
- Approved for installation over radiant heat flooring systems

### VALUE

- Lifetime structural warranty; 10-year heavy-use commercial/25-year residential finish warranties

### ECOSMART

- Certified USDA BioPreferred – 99% biobased content
- FSC-certified material available upon request\*


### INDOOR AIR QUALITY

- Floorscore certified for superior indoor air quality.
- Qualifies for Collaborative for High Performance Schools 2009 Criteria EQ2.2.3 – Low Emitting Materials



## PRODUCT DETAILS

Nominal Dimensions :	<b>75.59" x 5.43" x 0.59" (1920mm x 138mm x 15mm)</b>
Construction:	<b>Solid PureForm™ Traditional Bamboo</b>
Milling:	<b>4 Side Micro-bevel</b>
Profile:	<b>Tongue and Groove</b>
Accessories:	<b>Full line of coordinating 15mm accessories</b>
Color Variation:	<b>Moderate</b>

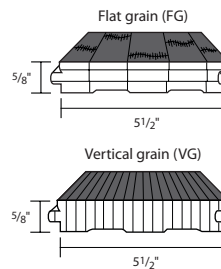


## INSTALLATION + CARE

Installation Environment:	<b>Nail, Staple, Glue and Float installation into environments having 35-55% RH. Can be installed over radiant heat.</b>
Nail & Staple Installation:	<b>On or Above grade. Use vapor retarder over wood subfloor.</b>
Glue Installation:	<b>On or Above grade. Use a vapor barrier over cement subfloor OR vapor retarder over wood subfloor.</b>
Float Installation:	<b>On, Above or Below grade. Use a vapor barrier with pad over cement subfloor OR vapor retarder with pad over wood subfloor.</b>
Recommended Adhesive:	<b>Premium Bamboo Flooring Adhesive</b>
Nailing Guidelines:	<b>15-16 gauge cleat or staple 1 1/2"-2"</b>
Acclimation:	<b>Minimum of 48 hours on-site in box</b>
Maintenance:	<b>BonaKemi Pro Series Hardwood Floor Cleaner or equal</b>


## LEED® CREDITS

- IEQ 4.3 Low Emitting Materials
- MR6 Rapidly Renewable Materials
- Certified Wood: MR7 – \*available upon request

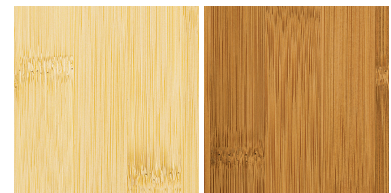

Flat Grain  
Natural

Flat Grain  
Caramelized

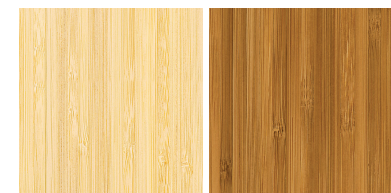

Vertical Grain  
Natural

Vertical Grain  
Caramelized