

### Product Information

Applicable valve:	
Shower and valve trim, with NPT diverter spout	K-T395-4
Complete bath and shower valve trim and K-389-S slip-fit diverter spout (shown)	K-T395-4S
Complete shower valve (not shown)	K-T396-4
Rite-Temp valve trim	K-T397-4
*Rite-Temp® valve must be ordered to complete faucet.	
Applicable bath spout:	
Non-diverter bath spout	K-373
Slip-fit non-diverter bath spout	K-373-S
Non-diverter bath spout	K-389
Slip-fit diverter bath spout	K-389-S

Lever handles are ADA compliant	<b>ADA</b>
---------------------------------	------------

Recommended Accessories:	
HiFlow Rite-Temp® thin wall installation kit	88526

Optional Accessories:	
Deep roughing-in kit for Rite-Temp® valve (lever handles)	1030932

### Installation Notes



**WARNING: Risk of damage to the K-306-KS valve assembly.** When using the K-306-KS valve in a fiberglass or acrylic installation, use the thin wall installation kit (88526).


Install this product according to the installation guide.

Install the Rite-Temp® valve according to the valve installation guide.

Avoid cross-flow conditions. Do not install shut-off device on either valve outlet.

Cap shower outlet if deck-mounted spout, diverter, or handshower is connected to the spout outlet.

Install straight pipe or tube drop of 7" (17.8 cm) to 18" (45.7 cm) with single elbow between valve and wall-mount spout.

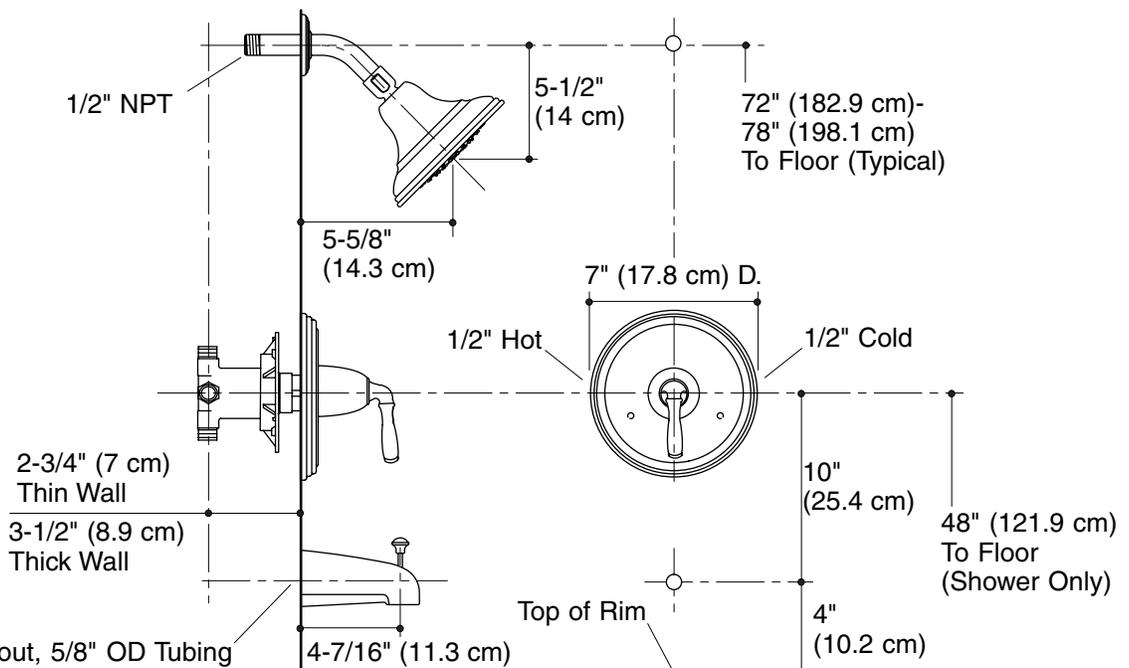

For Slip-Fit Spout, 5/8" OD Tubing Must Extend 1-1/2" (3.8 cm) Min; to 2-7/8" (7.3 cm) Max Beyond the Finished Wall.

Complete Bath and Shower Faucet with Rite-Temp Valve and Slip-Fit Diverter Spout Shown.