


INSTRUCTIONS: G333 Shade

These shades can be installed using the QP-501 socket sets and 303LED socket sets. Consult instructions supplied with socket for detailed instructions.


Installing for 303LED socket sets:

1. Loosen bulb shield, separating it from 303LED socket.
2. Insert threaded 303LED socket into top hole of G333 shade.
3. Screw on bulb shield and secure glass to socket set.

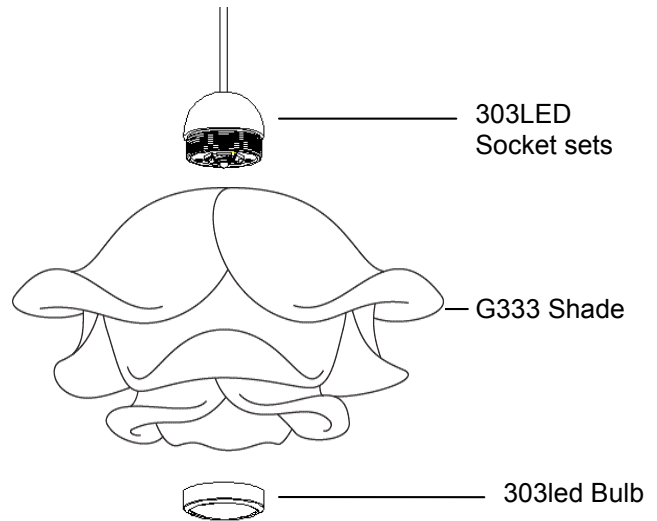

Installing for QP-501 socket sets:

1. Loosen Bulb Shield from QP-501 socket sets.
2. Insert the lamp into the fixture by aligning the pins with the socket holes, and gently pushing until lamp seats.
3. Use 12V 50W bi-pin Halogen lamp with G6.35 base (supplied) with 12V 50-watt Halogen (24V lamp may be used depending on power supply).
4. Insert threaded QP-501 socket set through top hole of G333 shade and into to 501-plate1.
5. Secure 501-plate1 to socket by screwing on bulb shield .

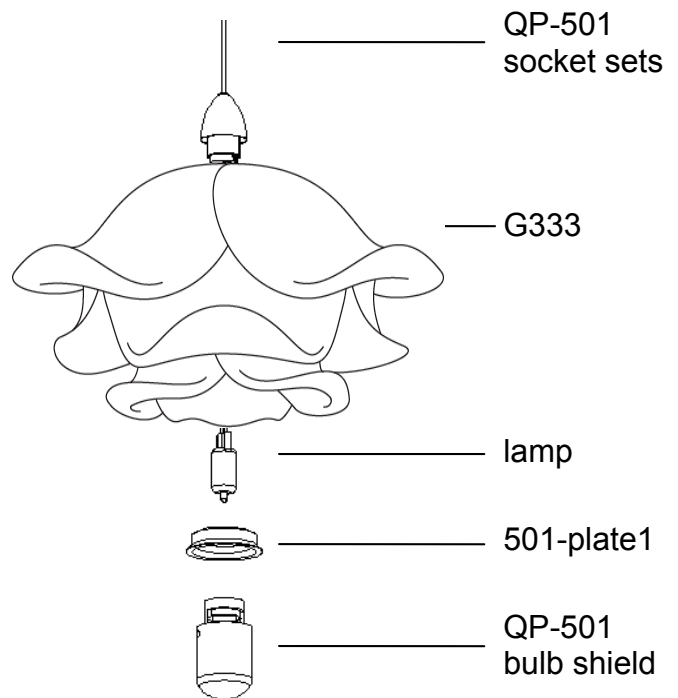

Installing for Line Voltage socket sets:

1. Loosen Bulb Shield from line voltage socket set.
2. Insert the lamp into the fixture by aligning the pins with the socket holes, and gently pushing until lamp seats.
3. Use 120V JCD-50X 50W lamp (supplied).
4. Insert threaded socket sets through top hole of G333 shade and 501-plate1.
5. Secure 501-plate1 to socket by screwing on bulb shield.

