

# INSTRUCTIONS: PLD Models Pendant Shade Installation

## CAUTION

- Always turn off power at main switch prior to installation to prevent electrical shock.


### SINGLE PIECE SHADE:

All components screw clockwise to tighten.

1. Make certain the Nord style socket is screwed fully into the aluminum cone.
2. Note the orientation of the black threaded retaining ring in the diagram.
3. Raise the shade to the level of the Nord socket so that the threaded portion protrudes through the hole.
4. Place the leveling spring on top of the retaining ring, and screw on to the socket until the shade is snug against the aluminum cone.

### LAMPING:

Single piece shades accept "A" or "G" type lamps 150 Watt max.

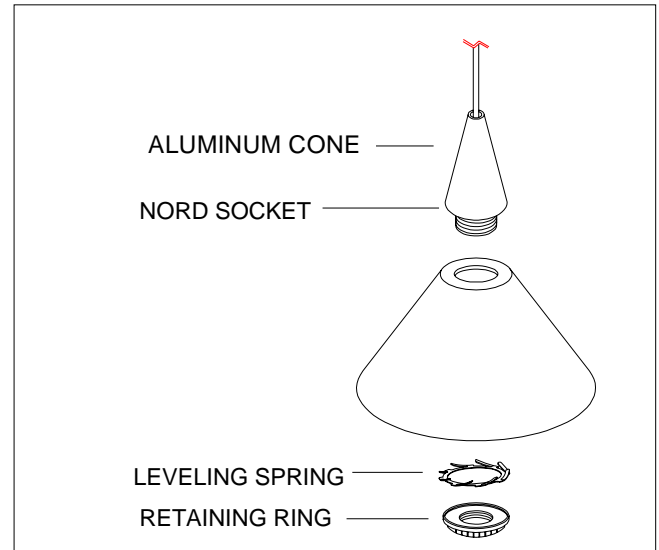

### TWO PIECE SHADES:

All components screw clockwise to tighten.

1. Make certain the Nord style socket is screwed fully into the aluminum cone.
2. The longer aluminum ring retains the outer shade and the short aluminum ring retains the inner shade.
3. Raise the outer shade to the level of the Nord socket so that the threaded portion protrudes through the hole. Place the leveling spring on top of the long retaining ring and screw on the socket until the shade is snug against the aluminum cone.
4. Install one plastic washer between the inner shade and long ring. Install the second plastic washer between the short retaining ring and shade.
5. Secure the inner shade by screwing the short retaining ring onto the threads of the long ring.

### LAMPING:

Double glass shades accept "A" lamps only, 150 Watt max.

