

INSTALLATION INSTRUCTIONS

Item # P918

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER BEFORE INSTALLATION .
AVERTISSEMENT ! COUPER LE COURANT AUNIVEAU DES FUSIBLES OU DU DISJONCTEUR

ASSEMBLING THE FIXTURE (Fig.1)

1. Shut off the power at the circuit breaker box (avertissement! couper le courant au niveau des fusibles ou du disjoncteur) and remove the old fixture, including the mounting hardware..
2. Shut off power at the circuit breaker and remove the old fixture including the mounting hardware.
3. Position the mounting bracket (B) on the ceiling, and mark the location of the two drywall anchors (Q). Pre-drill the holes for the drywall anchors (Q) and insert the drywall anchors (Q) into the ceiling.
4. Attach the mounting bracket (B) to the outlet box with junction box screws (D) (size:8-32*1/2"L) . The side of the mounting bracket marked "GND" must face out.
5. Place the wood screws (C) through the mounting bracket and into the drywall anchors (Q) to secure the mounting bracket (B) to the ceiling.
6. This fixture includes two 6" and six 12" rods. Determine the desired hanging height and connect rods (J:W30-1-077, K:W30-1-077, L:W30-1-077 and M:W30-H-077)). Feed the fixture wire carefully through each rod.
7. Secure swivel (I) to the last section of rod (J).
8. Slide decorative plate (H) and faceplate (G) onto the two swivels (I), and secure tightly with lock washer (S) and hex nuts (E).

CONNECTING THE WIRES (Fig.2)

9. At this point, connect the electrical wires as shown in Fig. 2, making sure that all wire connectors are secured. If your outlet box has a ground wire (green or bare copper), connect the fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the mounting plate using the green Screw provided. After wires are connected, tuck them carefully inside the junction box.

COMPLETING THE INSTALLATION

10. Raise faceplate (G) to mounting bracket (B) and secure with screw (F).
11. Install the 8 – 40W type G9 Xenon bulbs (O) in accordance with the fixture's specifications. **(DO NOT EXCEED THE SPECIFIED WATTAGE!) (NE PAS DEPASSER LA PUISSNCE NOMINALE MAXIMLE!)**
12. Place glass (N) into the decorative holder (T).

Your installation is now complete. Return power to the junction box and test the fixture.

IMPORTANT: FIXTURE SHOULD BE INSTALLED BY A QUALIFIED ELECTRICIAN TO ENSURE PROPER WIRING AND INSTALLATION.

FIG.1

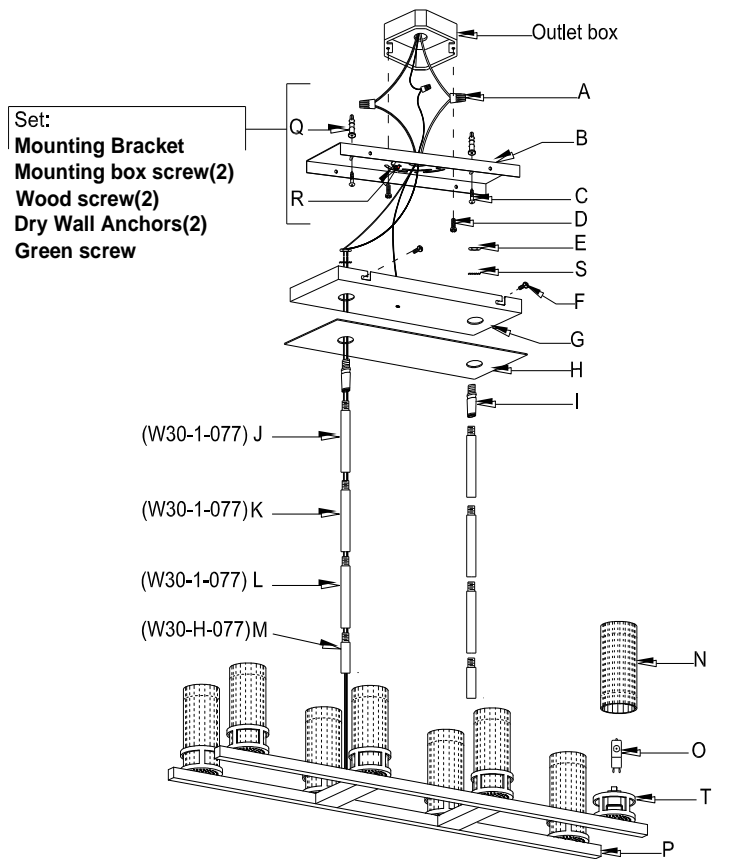


Fig .2

