

Monty Accessory

HAC480_ 1.0




Accessories


GENERAL PRODUCT INFORMATION:




This product must be used with LBL Lighting systems only.

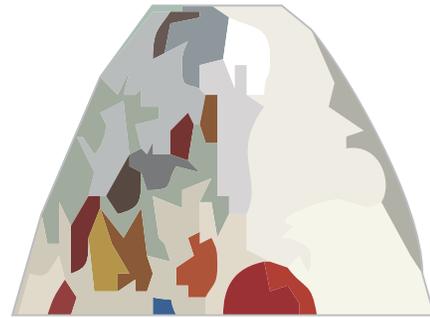

Install the Monty Accessory

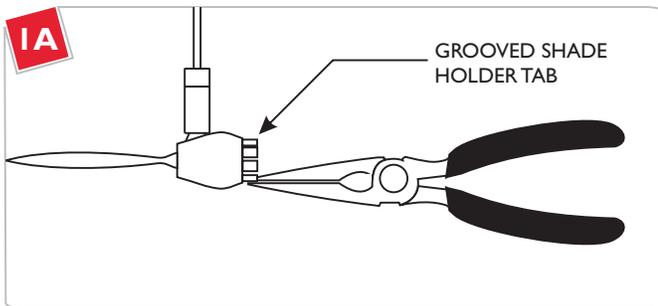


1 If the Monty accessory fits tight onto the fixture, then carefully bend the grooved shade holder tabs in slightly with the needle-nose pliers. If it fits loose, then carefully bend the grooved shade holder tabs out slightly with the needle-nose pliers.

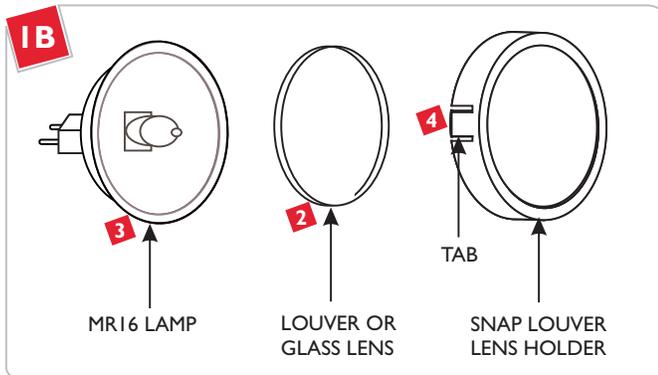


Use MAX 50Watt MR16 Front Cover Halogen Lamp.



- 2** Place the optional louver or glass lens into the Snap Louver Lens Holder.
- 3** Place the MR16 lamp into the Snap Louver Lens Holder.
- 4** Press the tabs on both sides of the Snap Louver Lens Holder against the MR16 lamp to keep it in the position.

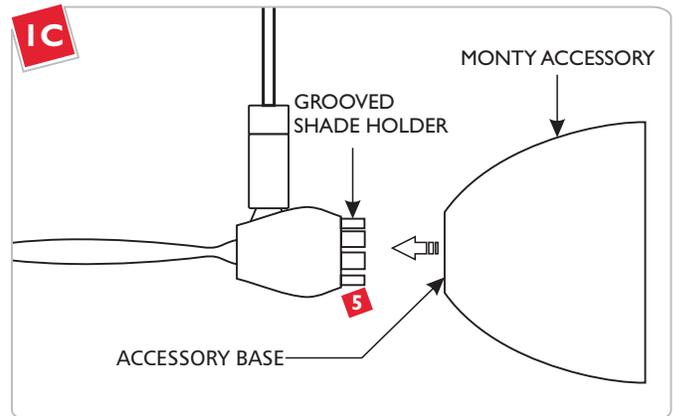

5 Push the Monty accessory base onto the grooved shade holder.

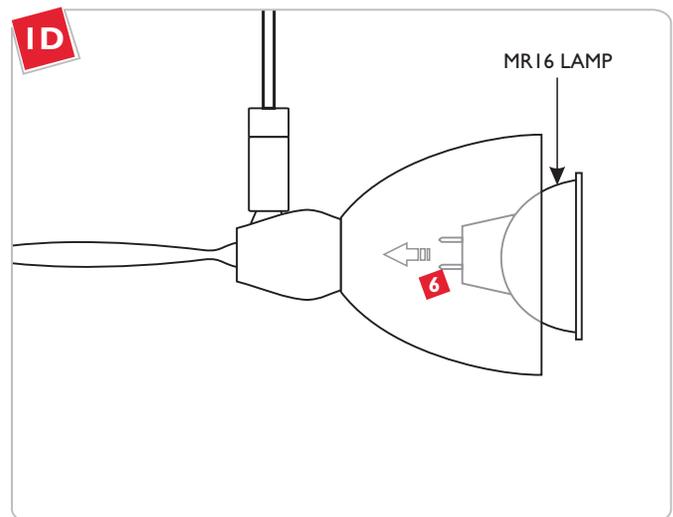

6 Push the lamp pins all the way into the socket holes.

SAVE THESE INSTRUCTIONS!



7400 Linder Ave, Skokie, IL 60077

800.323.3226 - 847.626.6300

www.lblighting.com

© 2008 LBL Lighting. All rights reserved. The "LBL Lighting" graphic is a registered trademark of LBL Lighting. LBL Lighting reserves the right to change specifications for product improvements without notification.

A Generation Brands Company