

# Pendant Compact Fluorescent Fixtures

295TDSFC\_CF

2.2



ENCOMPASS LIGHTING GROUP

## PENDANTS

### GENERAL PRODUCT INFORMATION:




This product is suitable for damp locations.


This product can mount to either a 4" square electrical box with round plaster ring or an octagon electrical box.



### Shorten the Pendant

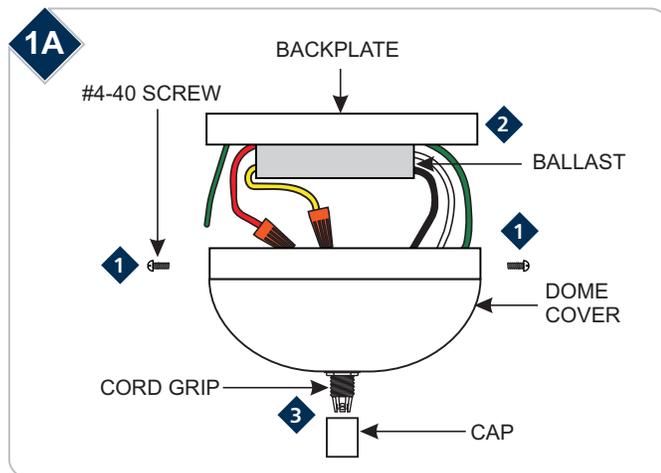


- 1 Remove the #4-40 screws on canopy sides.
- 2 Remove the backplate from the dome cover.
- 3 Remove the cap from the cord grip.

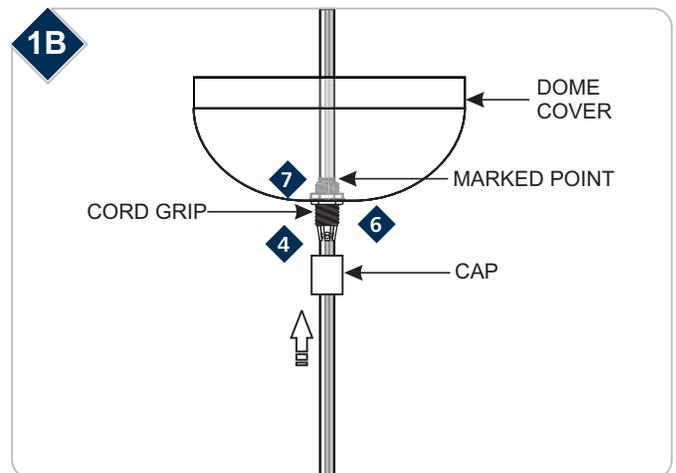


**NOTE:** Refer to the instructions provided with the pendant fixture to install the fixture shade (if needed) before proceeding with these steps.

- 4 Feed end of the pendant cord through the cap, and cord grip into the canopy.
- 5 Adjust the fixture height (from bottom of the fixture shade to top of the canopy) by moving the cord up or down.
- 6 When desired height is achieved, slightly tighten the cap.
- 7 From inside mark the cord right behind the cord grip for the strain relief location.

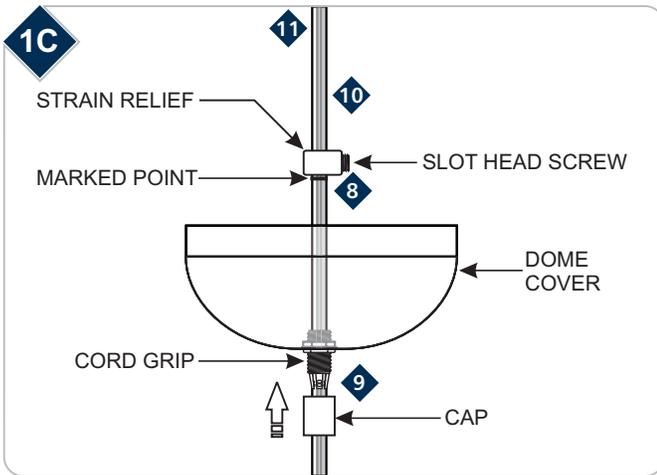


- 8 Loosen the cap and feed the cord through the strain relief. Place the strain relief right above the marked point and tighten the slot head screw.
- 9 Slide the dome cover up against the strain relief and tighten the cap to cord grip.
- 10 For power connection, leave at least 6" of the cord exposed in the back of the dome canopy.
- 11 Cut off the excess cord with a sharp cutter.

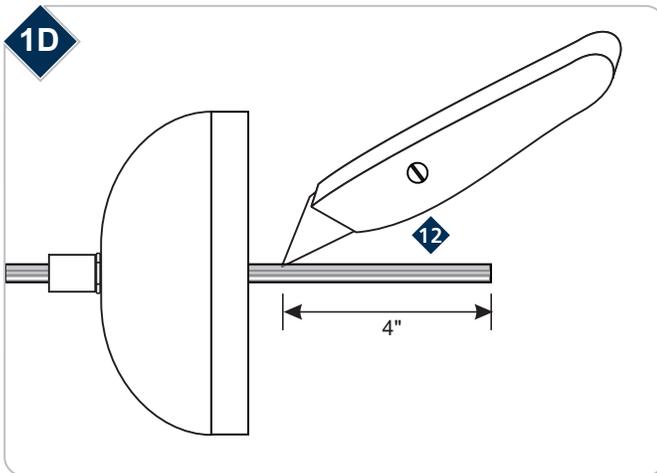

- 12 From the end of the cord, strip the outer insulation 4" using a sharp knife and needlenose pliers. **Make sure not to cut inner wires.**
- 13 Strip 1/4" of insulation from the inner insulated wires. (three inner insulated wires for standard SVT cord). The bare inner wire is the ground wire (green insulated wire in SVT cord).

## Install the Pendant

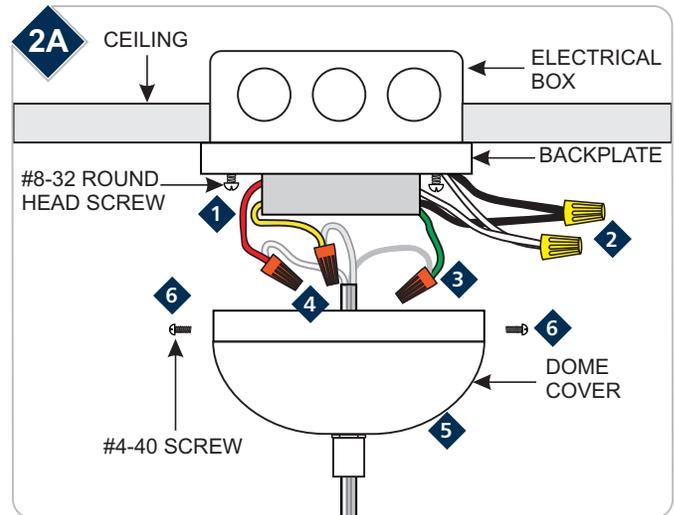

- 1 Mount the backplate to the electrical box with the two #8-32 round head screws. Make sure that the backplate is grounded in accordance with local electrical codes.
- 2 Connect the ballast 120 volt black and white wires to the 120 volt hot and neutral power line wires with wire nuts respectively.
- 3 Connect the fixture bare uninsulated wire (green in SVT cord) to the backplate and the ballast ground wires with a wire nut.
- 4 Connect the yellow and red ballast wires to the two remaining fixture wires (black and white in SVT cord) with wire nuts.
- 5 Place all wires, wire nut connections, and the ballast into the dome cover.
- 6 Replace the dome cover onto the backplate. Replace and tighten the two #4-40 screws.

**SAVE THESE INSTRUCTIONS!**



**ENCOMPASS LIGHTING GROUP**

7400 Linder Ave, Skokie, IL 60077

847.410.4400

[www.encompasslighting.com](http://www.encompasslighting.com)

© 2008 Encompass Lighting Group. All rights reserved. The "Encompass Lighting Group" graphic is a registered trademark of Encompass Lighting Group. Encompass Lighting Group reserves the right to change specifications for product improvements without notification.

A Generation Brands Company