


## 05 Series

### Tub & Shower

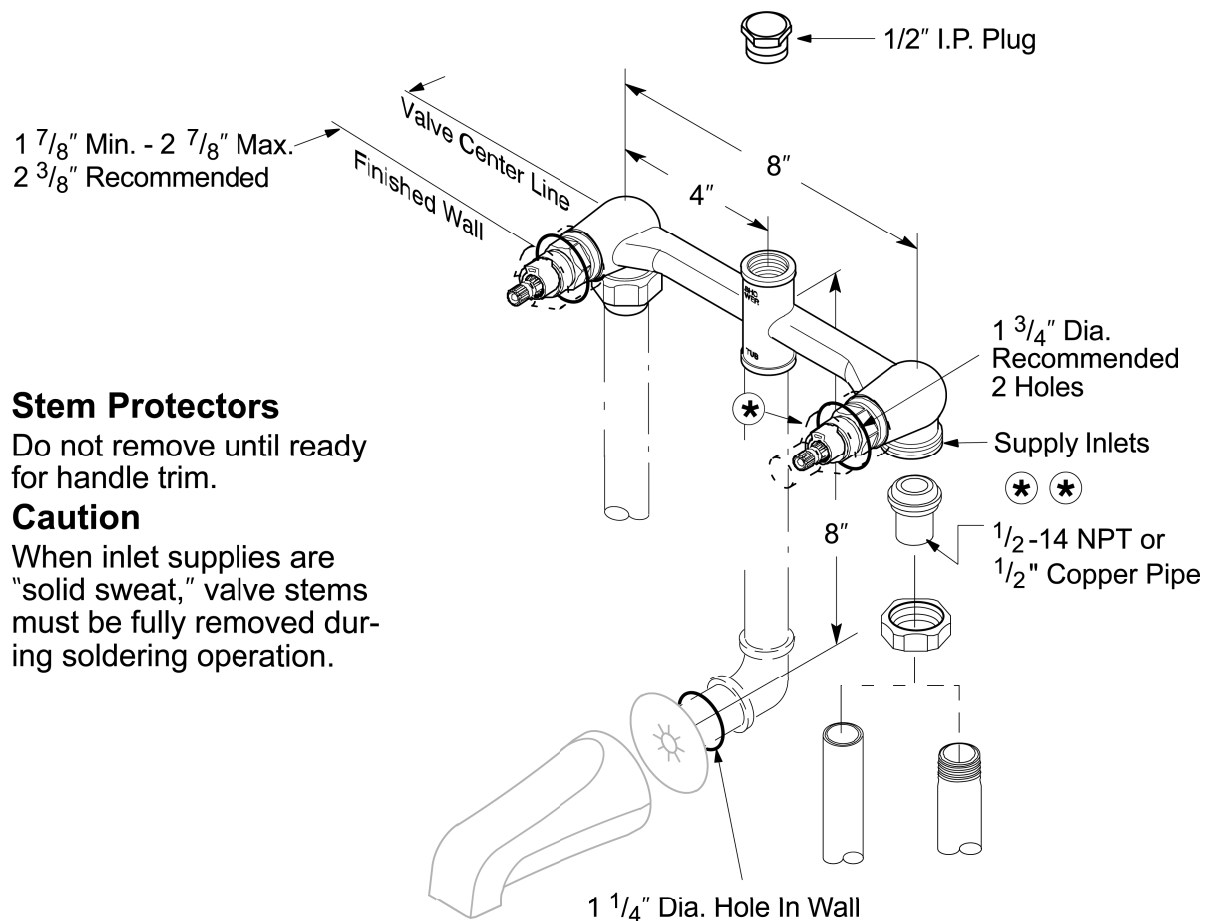

#### \* Stem Protectors

Do not remove until ready for handle trim.

#### \* \* Caution

When inlet supplies are "solid sweat," valve stems must be fully removed during soldering operation.