



IF PARTS ARE MISSING AND OR DEFECTIVE, IF INSTRUCTIONS ARE NOT CLEAR  
OR IF YOU ARE EXPERIENCING PROBLEMS ASSEMBLING OUR PRODUCT.


**BEFORE YOU RETURN THE PRODUCT TO THE STORE,  
PLEASE CALL US TOLL FREE FOR CUSTOMER SERVICE ASSISTANCE**

**(888) 777-8250**

**OR SEND US EMAIL AT**

**[help@spartakent.com](mailto:help@spartakent.com)**





PLEASE HAVE ITEM NUMBER READY, AND A REPRESENTATIVE WILL GLADLY ASSIST YOU

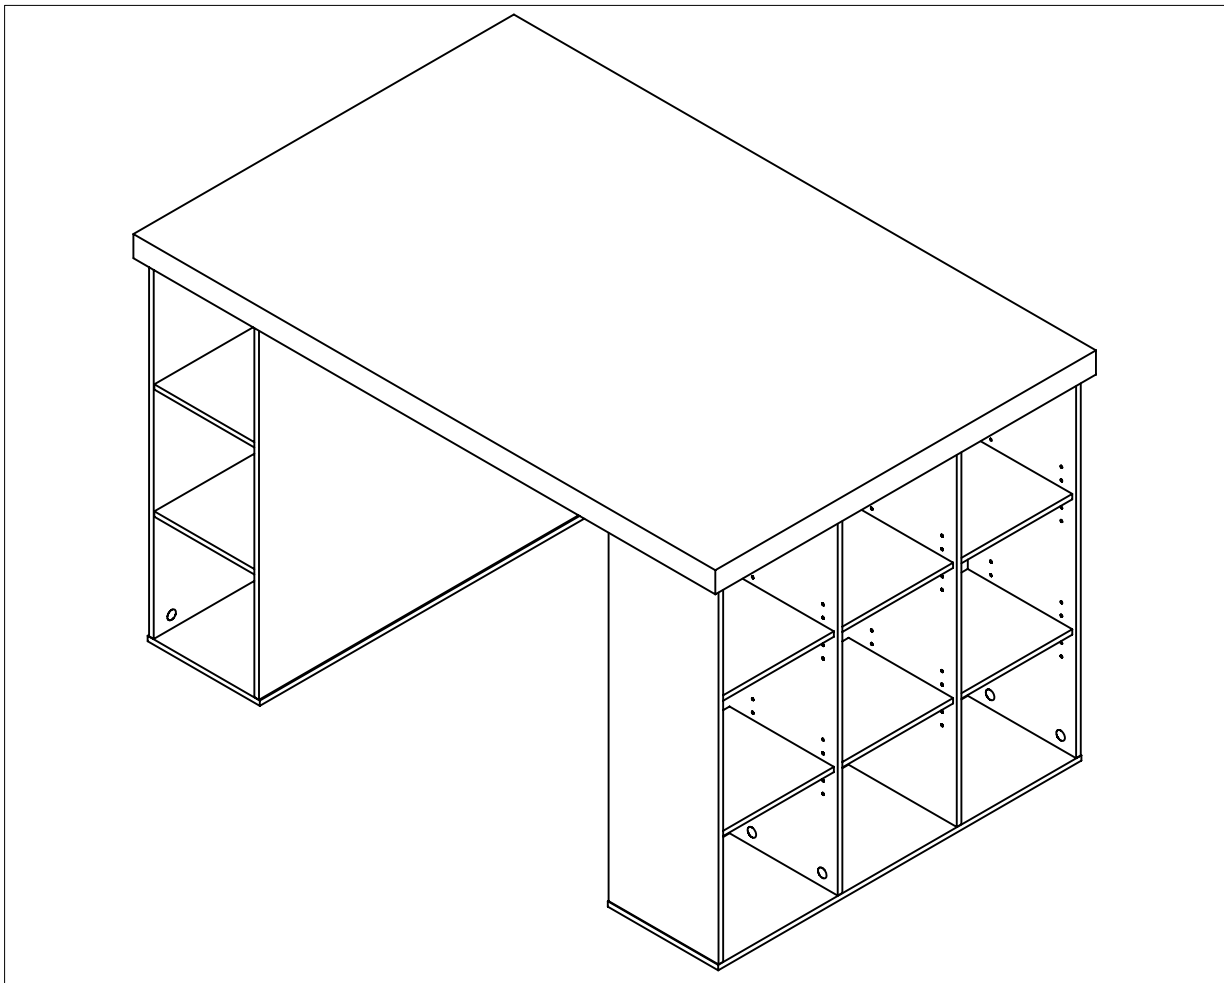

1

Note: Place one side unit at the desired location and then place the other side

unit within 30 and 3/8 inches apart as shown to the left.

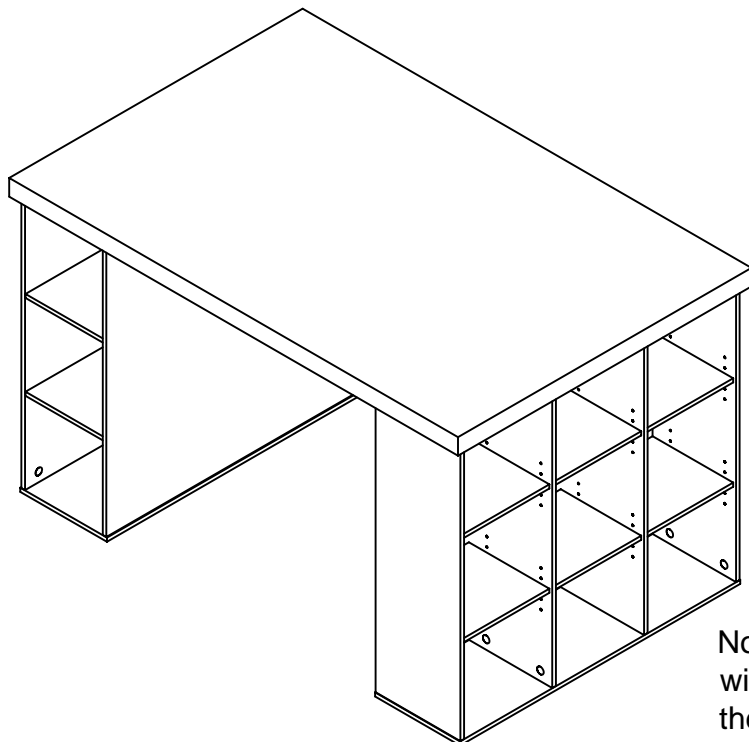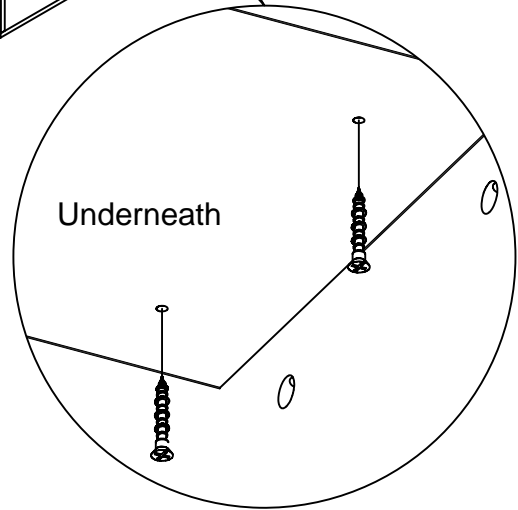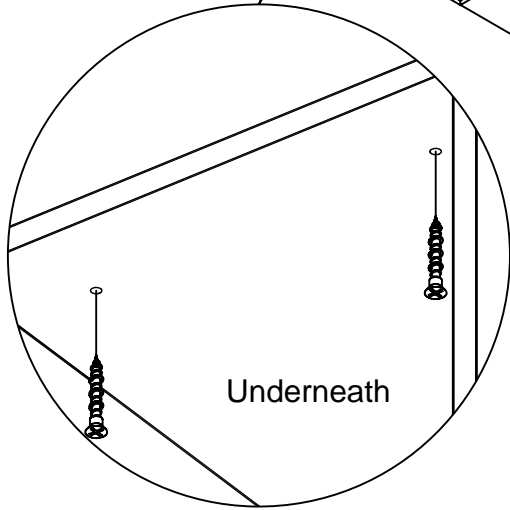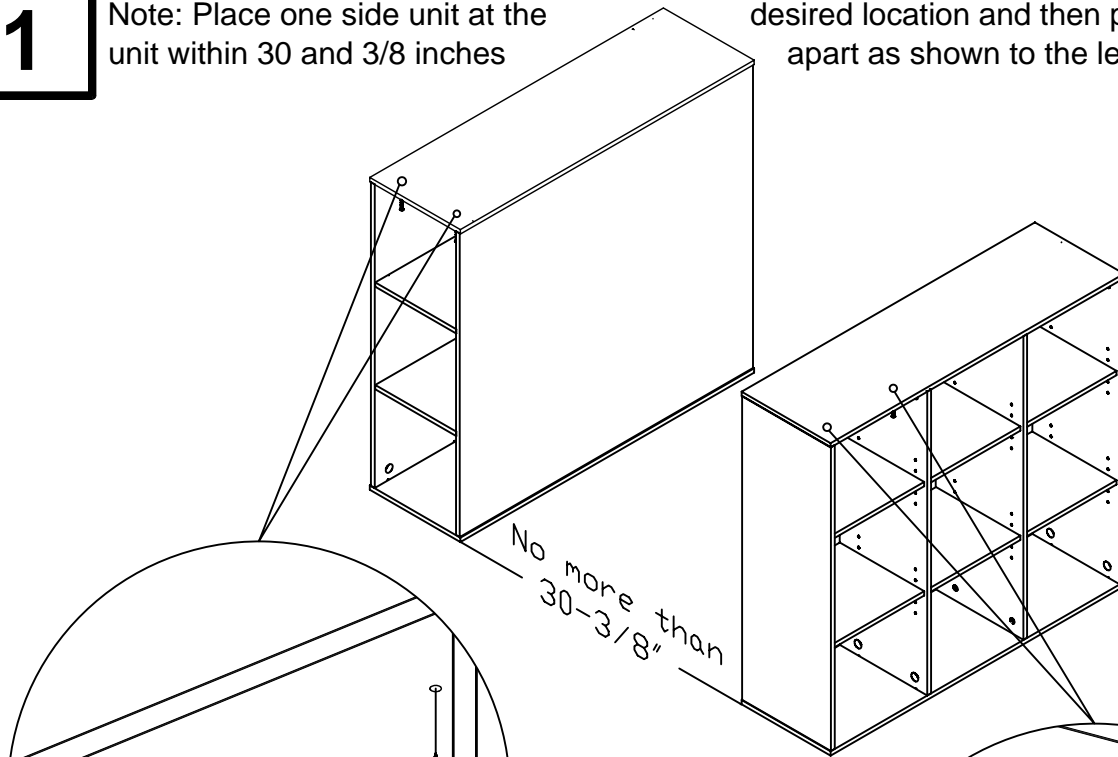

Note: There is a total of 8 half way pre-drilled holes on each side unit. There is a bag of 8 screws that's needed if you want to permanently attach the top to the side units (already provided with the side units hardware.)

Note: Next, once you have placed where the sides will be for the work station, lay the top as you align the sides within the recessed area.