




IF PARTS ARE MISSING AND OR DEFECTIVE, IF INSTRUCTIONS ARE NOT CLEAR  
OR IF YOU ARE EXPERIENCING PROBLEMS ASSEMBLING OUR PRODUCT.

**BEFORE YOU RETURN THE PRODUCT TO THE STORE,  
PLEASE CALL US TOLL FREE FOR CUSTOMER SERVICE ASSISTANCE  
(888) 777-8250**

**OR SEND US EMAIL AT**


**help@spartakent.com**

PLEASE HAVE ITEM NUMBER READY, AND A REPRESENTATIVE WILL GLADLY ASSIST YOU

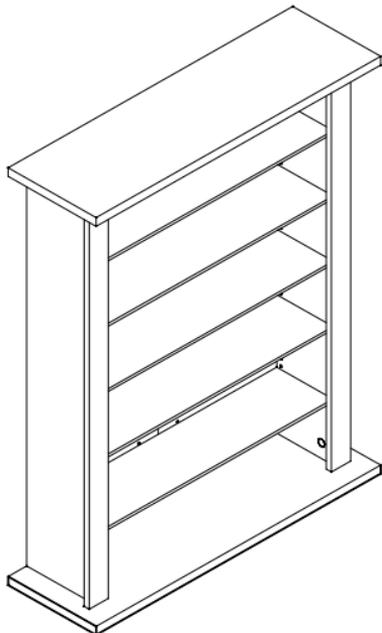


# PARTS IDENTIFICATION

NOTE: FIRST MAKE SURE THAT YOU HAVE ALL OF THE PARTS LISTED ON THIS SHEET. IF YOU ARE MISSING ANY PIECE(S), DO NOT ASSEMBLE THE UNIT. INSTEAD, CALL OUR CUSTOMER SERVICE NUMBER AT: (888) 777-8250. WE WILL BE HAPPY TO ASSIST YOU.



A



B




C



E



FL

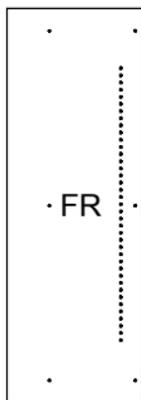


FR



G



I



K

2421A-Top

1pc

2421B-Bottom

1pc

2421C-Front Molding

2pcs

2421E-Outer Side

2pcs

2421FL-Back Left Panel

1pc

2421FR-Back Right Panel

1pc

2421G-Stretcher

3pcs

2421I-Brace


1pc

2421K-Shelf

5pcs

SDUWV #DUH #X VX DOO \ #DUNHG #R Q #WK H #UDZ #IG J H 1

# HARDWARE LIST

HARDWARE	PART #	DESCRIPTION	QTY
 	CAMLT12	CAMLOCK	24
	CAMBT16	BOLT	24
	DOWW830	WOOD DOWEL	22
	SFH833A	WOOD SCREW	6
	BM25	ANGLE BRACKET	2
	SPE610BL	EURO SCREW	4
	SP811BL	PAN HEAD SCREW	6
	CCPZBL	CAMLOCK COVER CAP	8
	BPXX54	SHELF SUPPORT	10


## TOOL REQUIRED



PHILLIPS SCREWDRIVER

1


Note: Insert the wood dowels in the ends of parts (E & G). Also, for part E, insert four dowels on the side as shown to the top left. Next screw the bolts on parts (A, B, & E) as shown at the bottom.

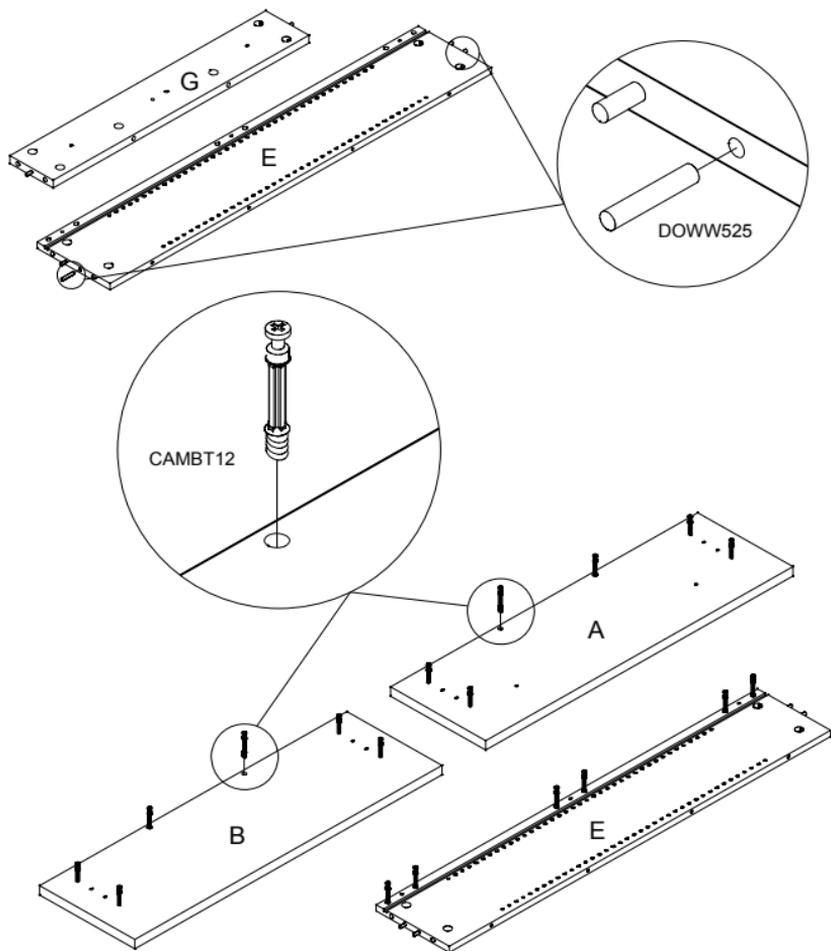

2


Note: When placing camlocks on parts (E and G), make sure the arrow on the camlocks are facing towards the edge of the part as shown to the bottom.

Note: You will notice that you are two camlocks short. Don't worry, you do not need to place two camlocks (Pointed to) on one of the third stretcher (part G.)

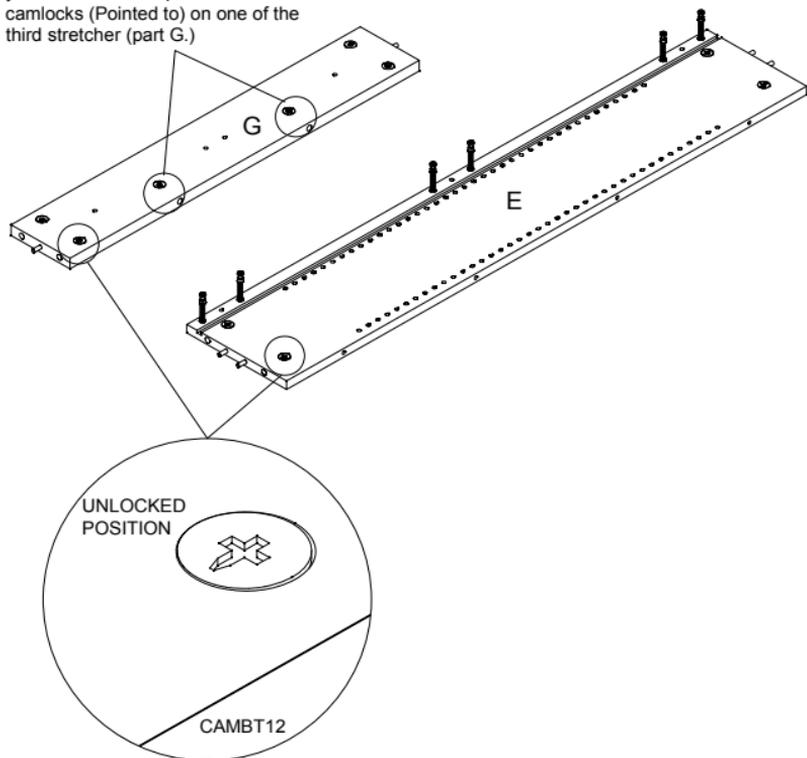


3

Note: Orientate all stretchers (G) on the floor as shown to the bottom and start with attaching the sides (E) by securing the camlocks to the bolts. Then, apply one drop of glue and insert the rest of the wood dowels as shown below.

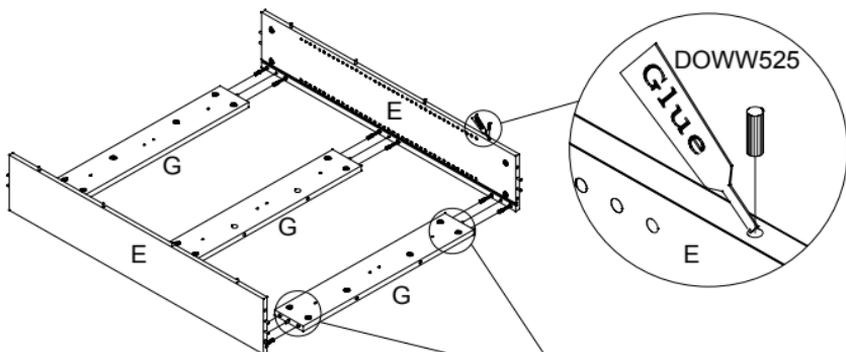


Turn the camlocks a little over half a turn clockwise, until you come to a full stop. Make sure there is no gaps in between the parts your fastening.

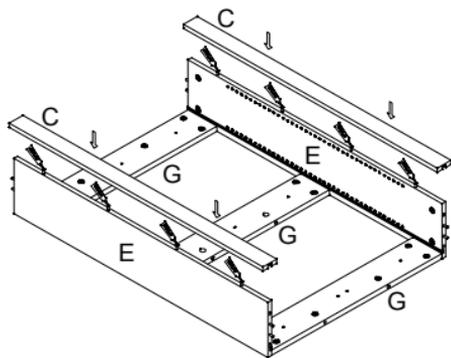



Next, apply a drop of glue on the dowels and place the front modeling, C, on the unit.

4

Note: Attach the bottom piece (B) and top piece (A) by securing the six cam locks as shown below.


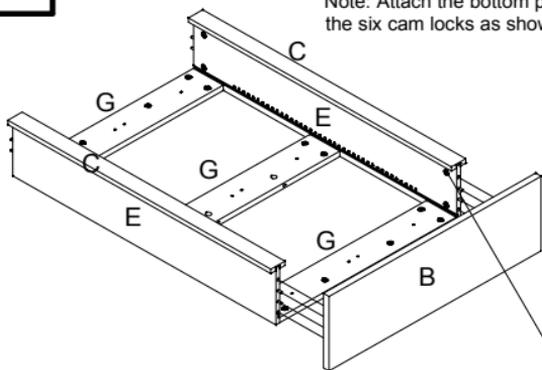


Turn the camlocks a little over half a turn clockwise, until you come to a full stop. Make sure there is no gaps in between the parts your fastening.

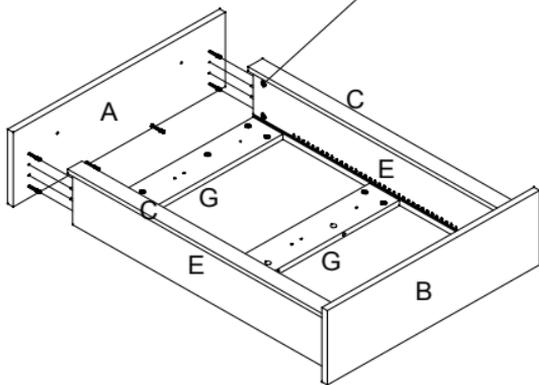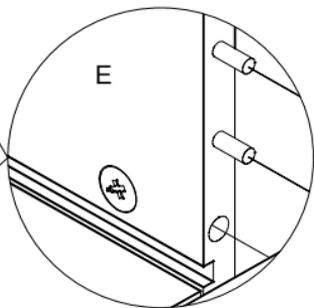


5

Note: Fasten the angle with the euro screw as shown to the right.

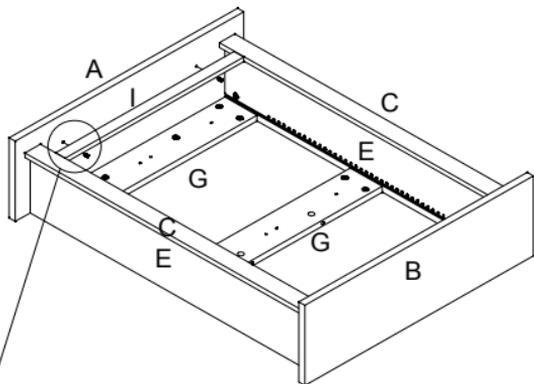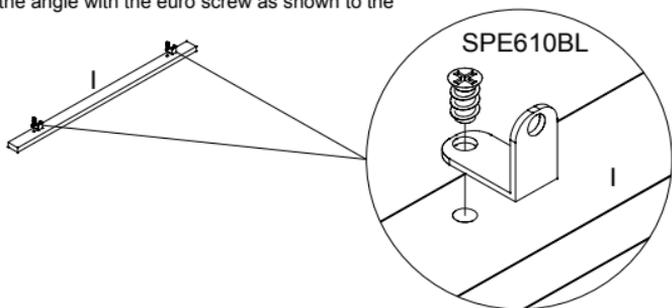


SPE610BL

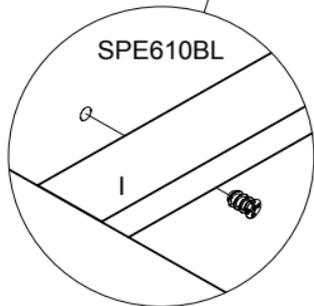


Note: Next, attach (Part I) to the unit. Shown to the left.

6

Please follow steps above on this diagram to erect the assembly in order to avoid breakage of stretchers, (G).

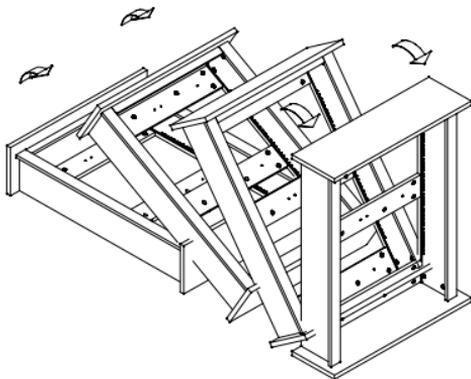


Install Back Panels as shown, with unmarked edges facing down and blue or red marked being atop. Make sure the Blue is on the left side and Red is on the right side of each section. Otherwise you will have problem with leveling of the shelves, they will sag in the middle.

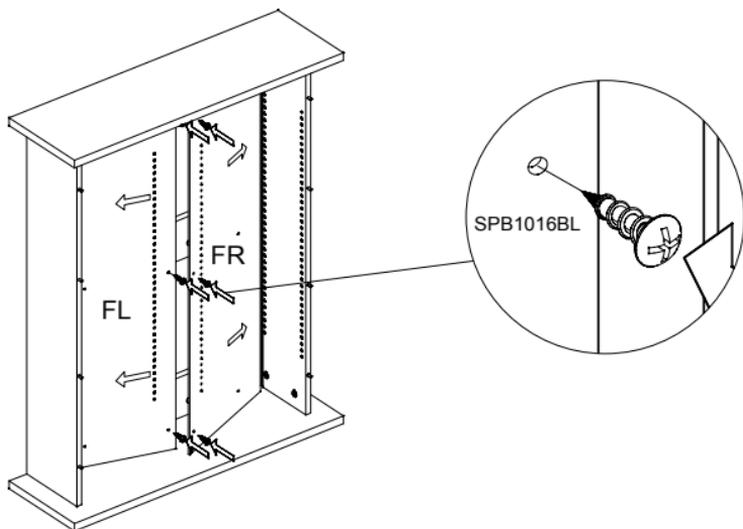

07



At this stage you are ready to screw the unit onto the wall. For the most secure installation drive the screws into the wall studs. The predrilled holes on the horizontal wall mounting rail are spaced on 8" centers. Hence, if studs in your wall are on standard 16" spacing you will be able to fasten the rail. The same applies for 12" and 24" spaced studs. Use a level to assure the unit is parallel with the floor. Otherwise the unit might look crooked. Also keep in mind that the top of the unit will be about 4" higher from where you have secured the wall mounting rail.

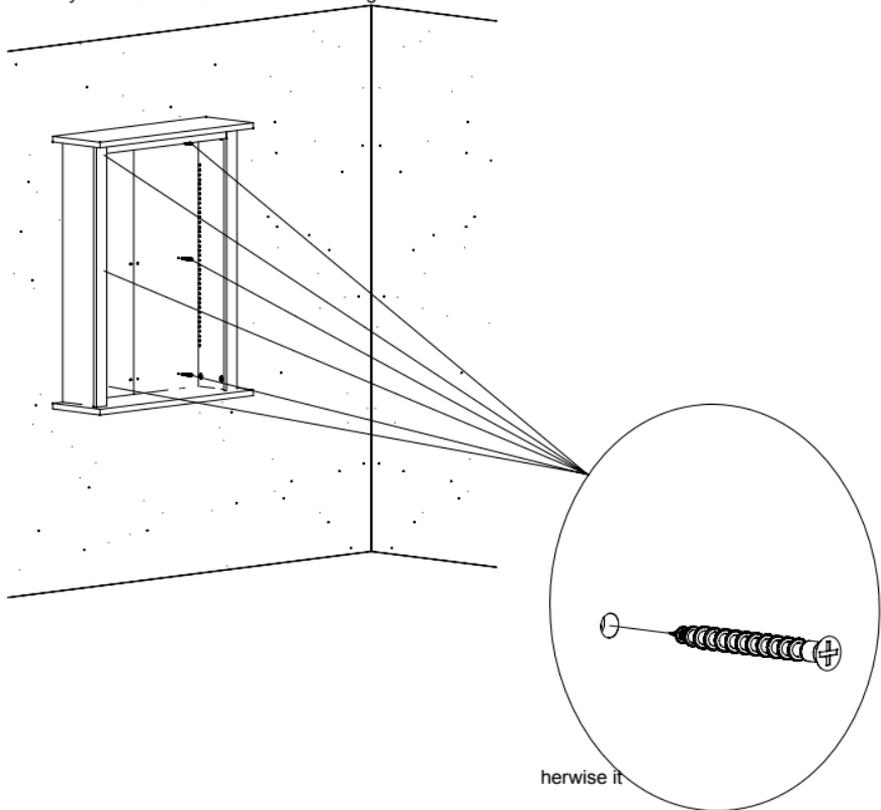

08

Do not tap with hammer onto shelf supports, instead twist them when inserting in. You will be using six shelf supports per shelf, two on each side and two in the back.

Install shelves at desired locations. Use a case of CD or DVD as a template to locate positions for the shelves. Start from the bottom. If you skip a hole or mix in one section with CD or DVD/VHS cases, you may end up with some unused space at the top. In other words, to get the maximum capacity, don't skip any holes or mix different kinds of media in one section.

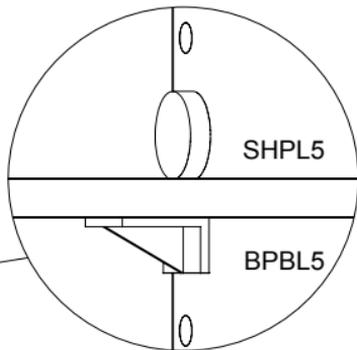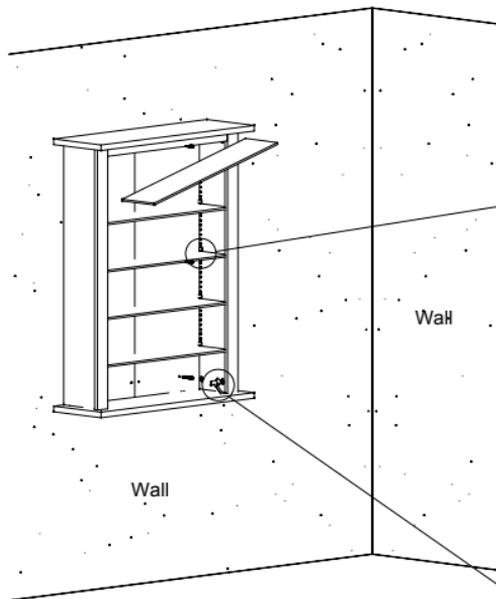

To prevent shelves from sagging, lock the back corners of them from above with two round Shelf Locks.

