
INSTALLATION GUIDE







Please unpack and inspect all packages and components carefully, make sure they are complete. Examine for shipping damage. If some parts are damaged or missing, notify your dealer immediately.

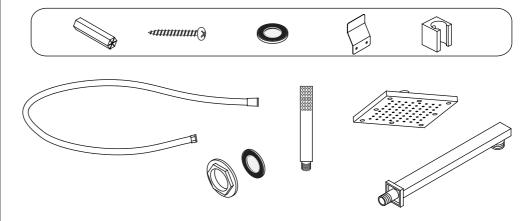



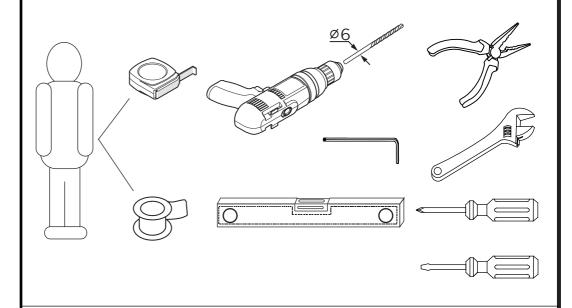


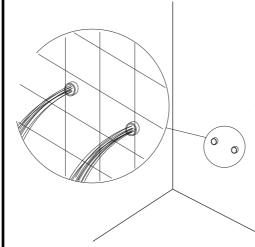

Note!

Before assembly, flush the water supply pipes thoroughly to remove debris(allow the water to run with the main stopcock open for about 3 mins), otherwise dirt particles might affect the function of the shower panel!

PAGE 1

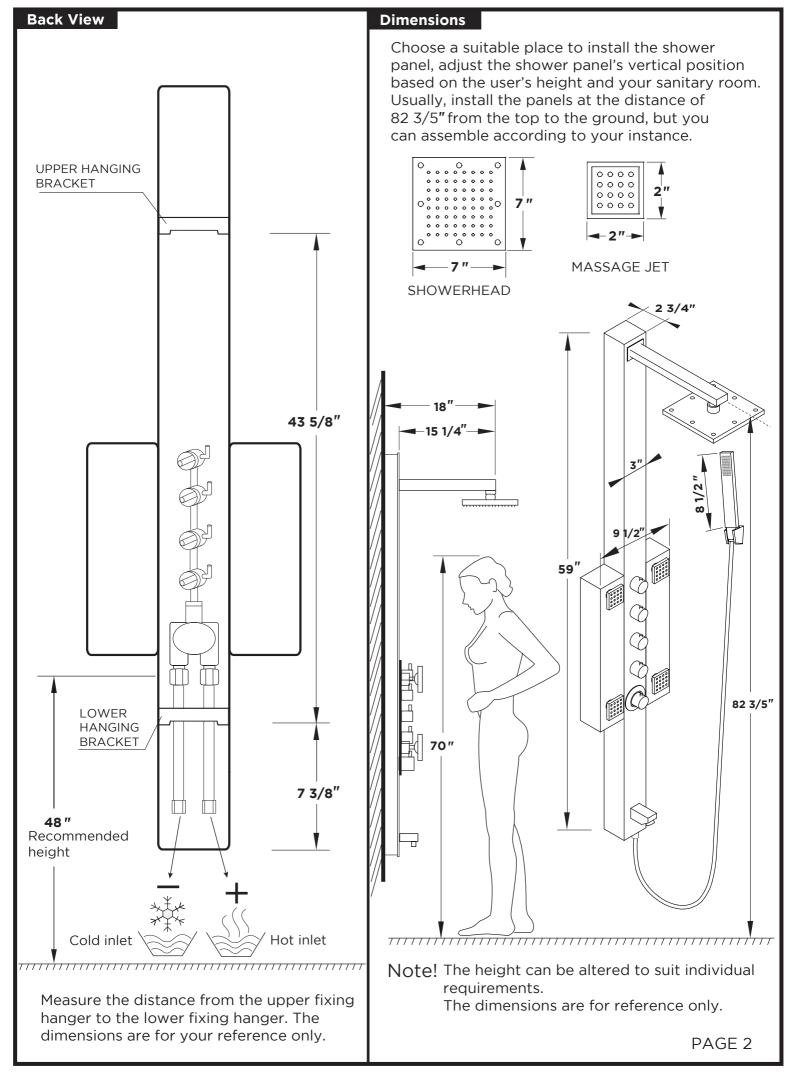


Note! Most of "Fresca" shower panels only can be mounted on the tile, marble or other flat wall.


Your item may appear slightly different from the illustration

Wall-mounting


Note! Before drilling any holes for fixing your shower panel ensure that there are no hidden cables or pipework within the wall.

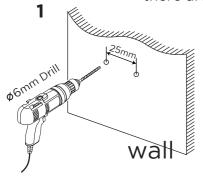




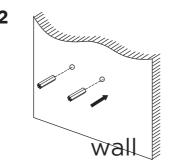


Insert the wall plugs inside the holes

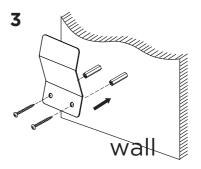

Tighten the screws to the wall with wall mounting brackets

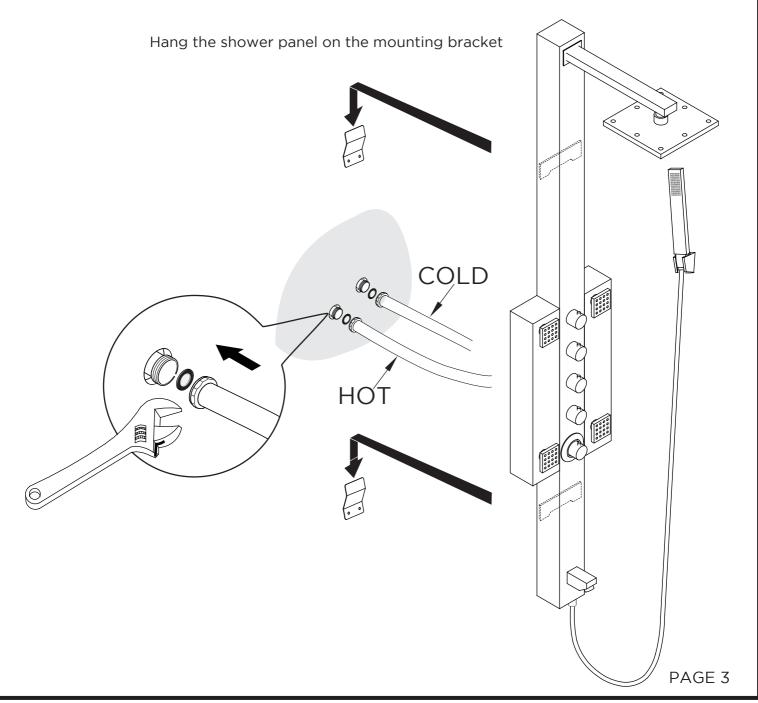


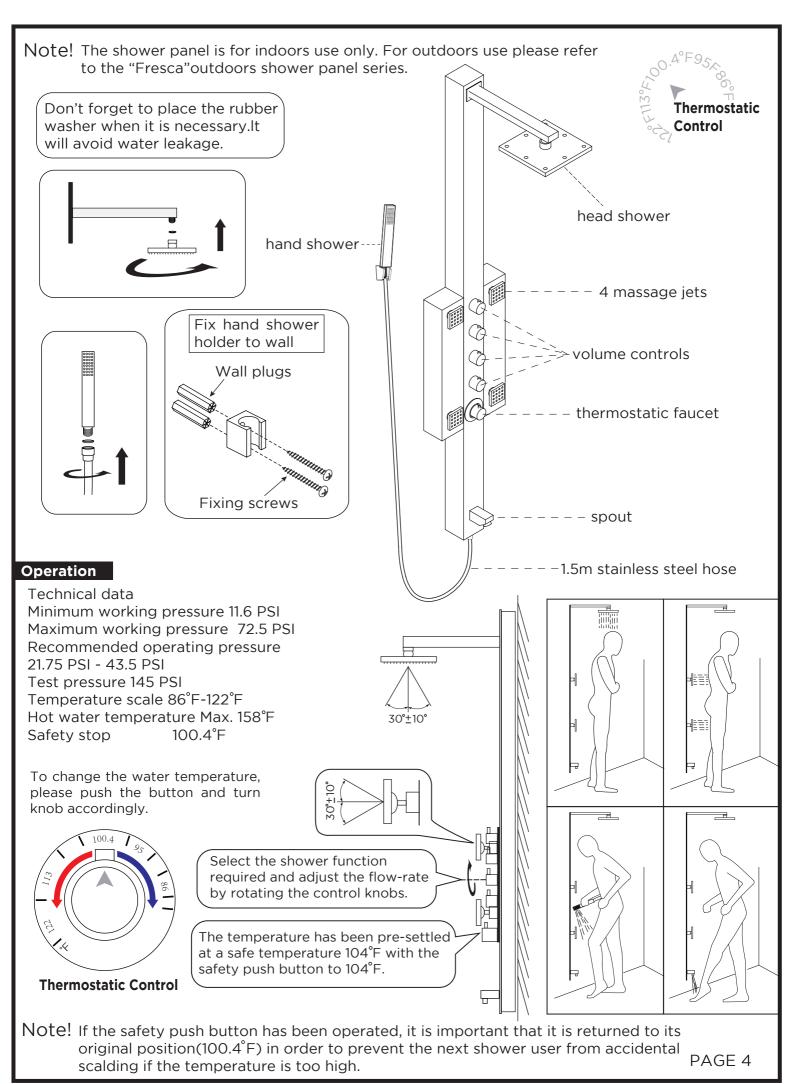

©2013 Fresca MAII rights reserved. This material may not be reproduced, displayed, modified or distributed without the express prior written permission of the copyright holder.


Thermostatic valve removal and installation

1 Take off cap

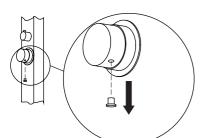


Remove process

2 Loosen HEX screw off with allen wrench

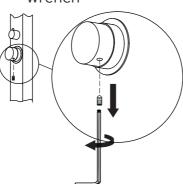



3 Take off head

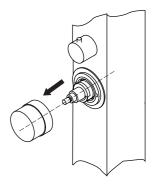


4 Take off plastic ring

5 Position on the golden ring and pull out 6 Remove the valve the valve by needle nose pliers

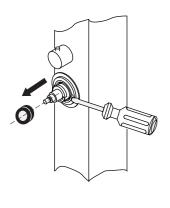

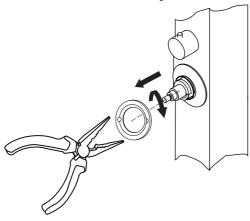


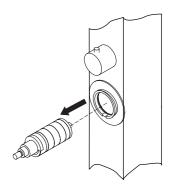


Installation process

 Place valve in place(ensure the screw head pointing to the cut off of the plated ring) 2 Put golden ring on top of valve


3 Put plastic ring in place with a rubber hammer (align the red marks in line)

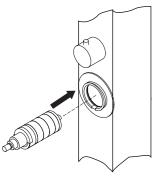


4 Press the button on the head and put on the head as below ensuring the screw hole pointing to the front

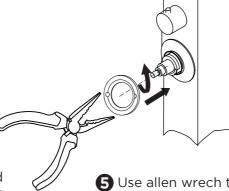



5 Use allen wrech to fix the HEX screw tightenly

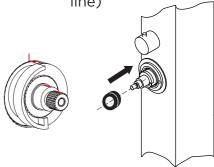

6 Put on cap

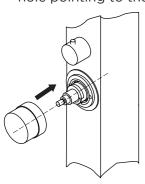

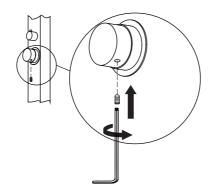

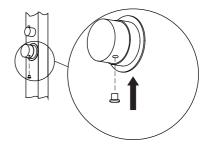

PAGE 5