


OXFORD INSTALLATION GUIDE

PAGE 1

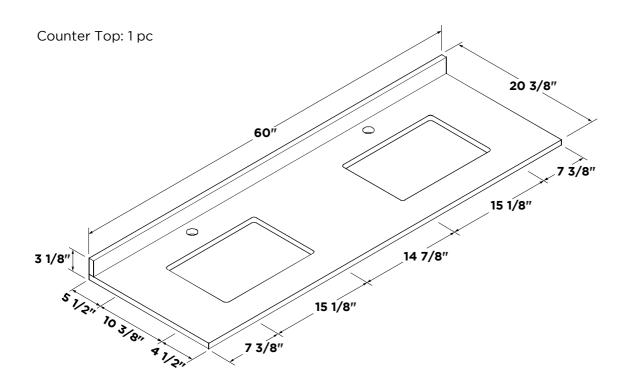


 ${\sf Note}$ : All dimensions and specifications are approximate and subject to change without notice.




## **MIRROR INSTALLATION**


Level the mirror bracket and then mark the installation position

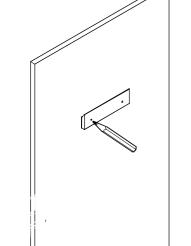

2 Drill the installation holes

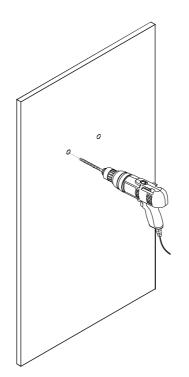



3 Insert the plastic plug

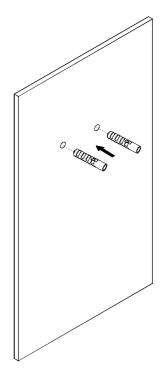






PAGE 2

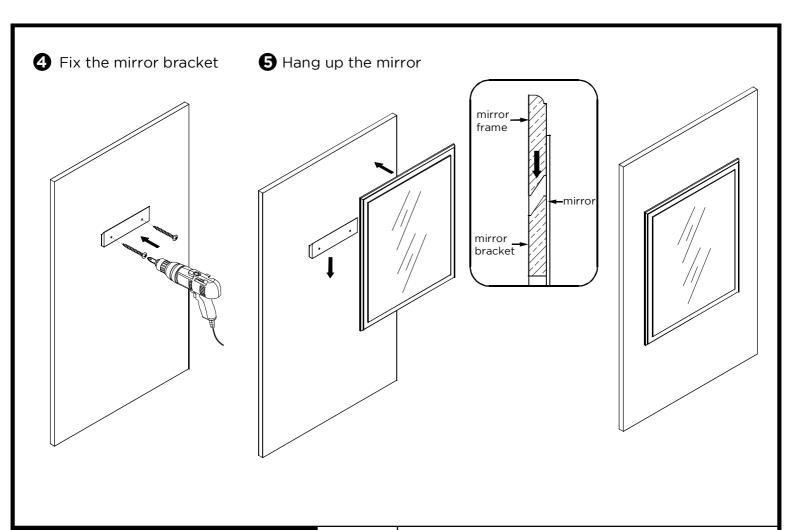

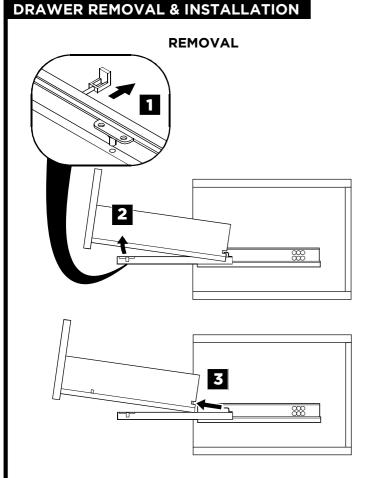

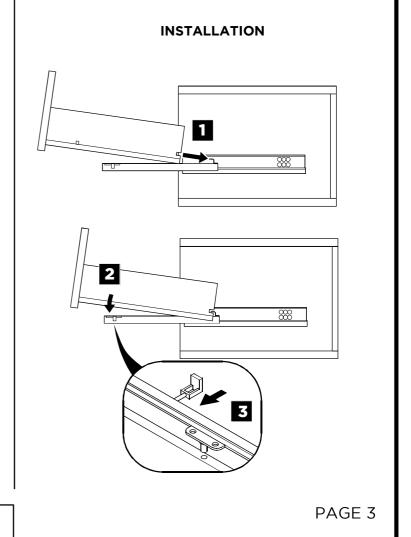

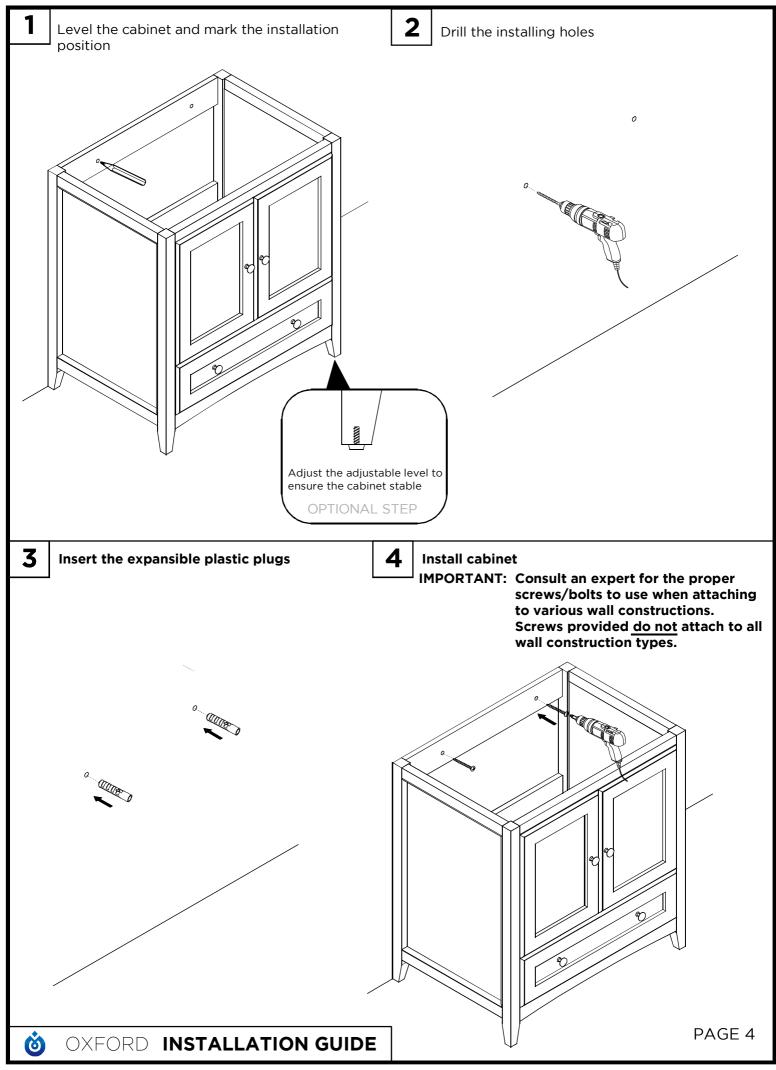


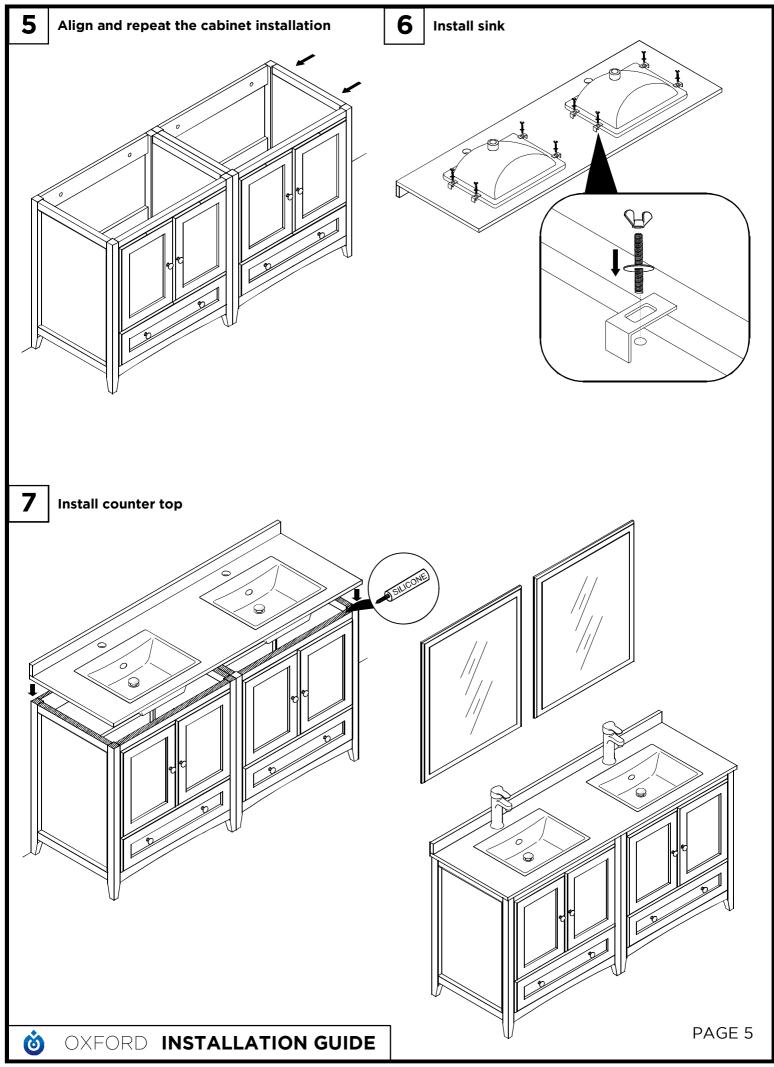

#### P-TRAP AND POP-UP


#### **INSTALLATION INSTRUCTIONS**

#### Your item may appear slightly different from the illustration

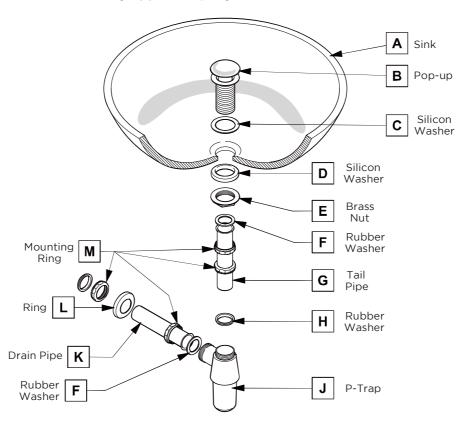


# POP-UP INSTALLATION

## FOR SINKS WITHOUT OVERFLOW

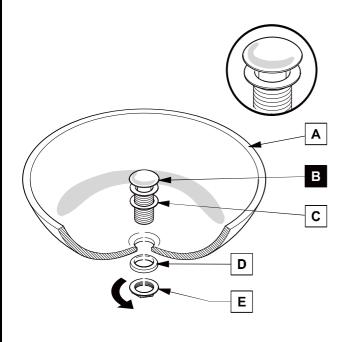

## FOR SINKS WITH OVERFLOW

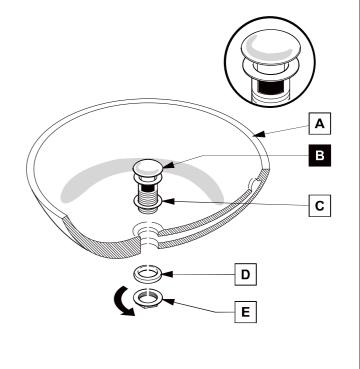

PAGE 6



OR



Install tail pipe (G)

