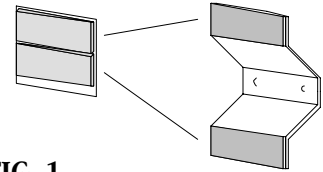


# PLSK30 Side Kit

**Please Note: Follow these instructions for side kit attachment, they may differ from the instructions supplied with the PLM Cabinet or PLL Light.**

1. Apply foam tape to clean and dry Side kit bracket. (Some kits have tape applied to bracket), Fig. 1.
  - A. Peel tape from sheet, leave liner on.
  - B. Apply as shown to side kit brackets, be sure they are clean and dry.
  - C. **DO NOT PEEL RELEASE LINER UNTIL YOU HAVE TEST FIT THE MIRRORS ON THE CABINET!**

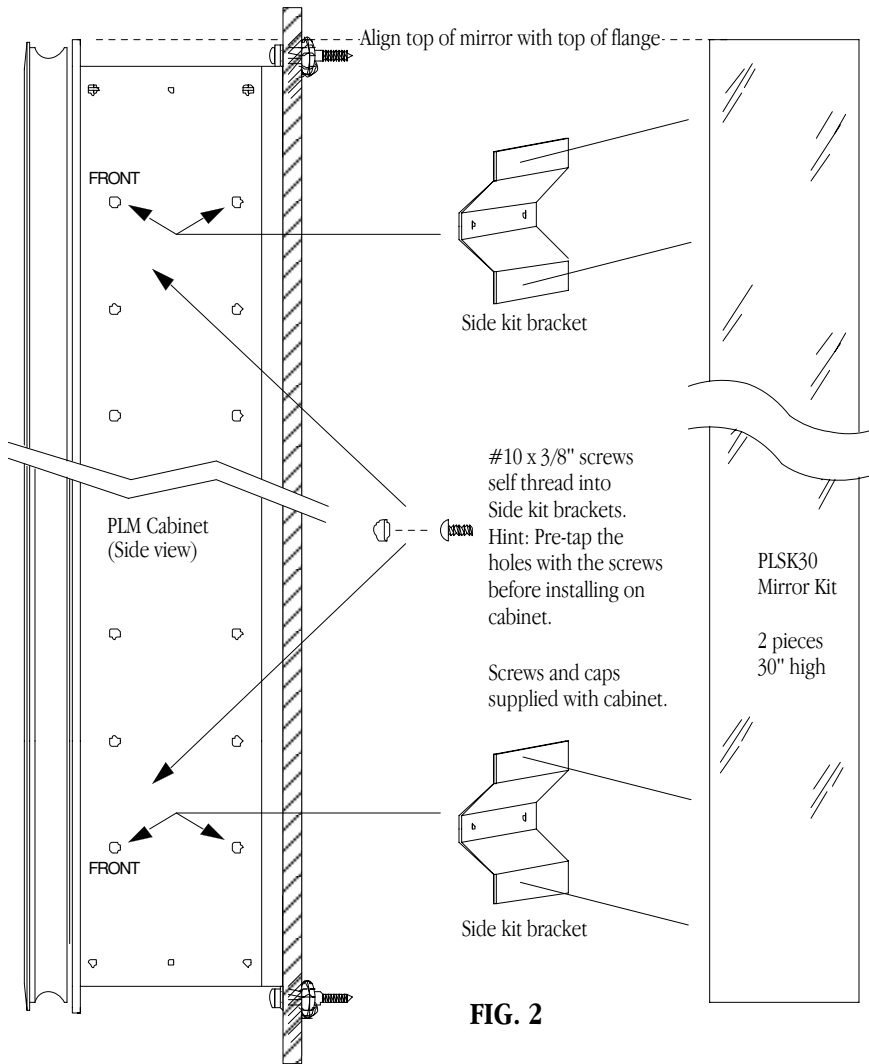
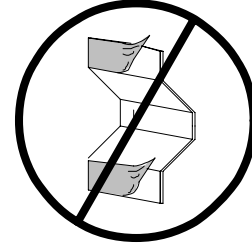


**FIG. 1**

2. Attach the side kit brackets as shown in Fig. 2. Watch for "front" note on bracket.

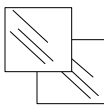
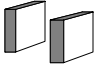
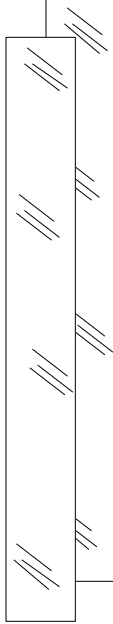
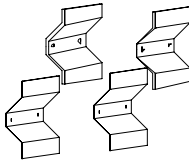
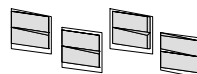
**NOTE: If you are using the PLL Top Light follow the instructions supplied with the fixture for installing the Light Mirrors**

3. Test fit the mirrors, then clean the back of the mirrors with rubbing alcohol.
4. Peel the release tape from the brackets and apply the mirrors, push firmly to set.
5. Cover the screw heads with the screw caps.



**FIG. 2**

## PARTS

-  2 Small Light Mirrors
- &
-  2 Adhesive blocks
-  2 Cabinet Side Mirrors
-  4 PLSK Side kit brackets
-  4 Adhesive tape sets (Tape may be pre-applied to bracket)