

# Adirondack Chair

## ASSEMBLY GUIDE

### Before you Begin:


Please read the instructions completely before beginning. Do not over tighten bolts.

Tools Required: Power drill with square bit, 7/16" wrench, and a hammer.

## ASSEMBLED ADIRONDACK CHAIR



## Components

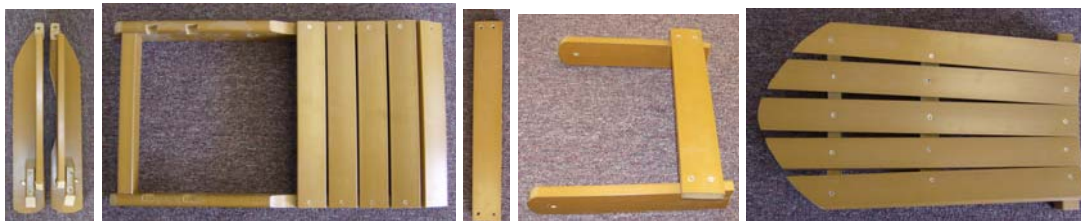

A

B

C

D

E




K




J




I

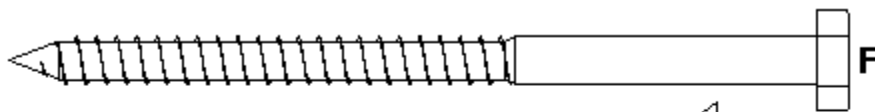

F

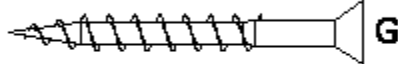

G

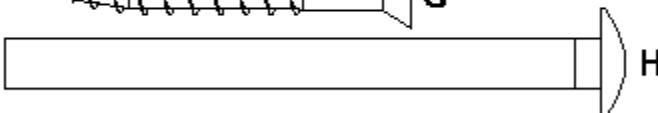

H

- A. Arms (2)
- B. Seat
- C. Front Leg Cross Beam
- D. Back Support
- E. Back
- F. Lag Screws (4)
- G. Wood Screws (4)
- H. Carriage Bolts (2)
- I. Metal Washers (8)
- J. Lock Nuts (2)
- K. Plastic Washers (6)


(Hardware Shown Actual Size)

# Adirondack Chair

## ASSEMBLY GUIDE




### STEP 1

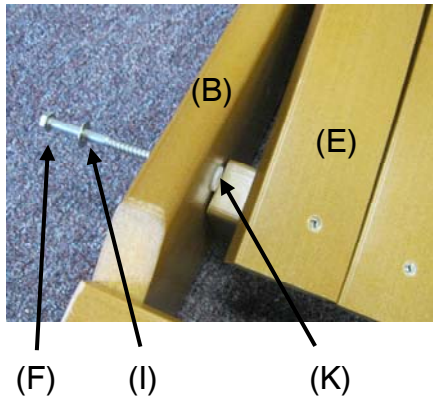

▪Insert a Plastic Washer (K) into the inner hole of the Seat (B). Attach the Back (E) to the Seat (B) using a Lag Bolt (F) and a Metal Washer (I). Repeat on the other side.


### STEP 2

*Tip: Install Back Support (D) with crossbar facing away from Back (E)*

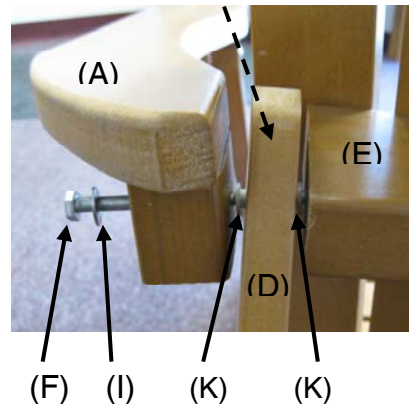

▪Insert Plastic Washers (K) into both sides of the Back Support (D). Attach the Arms (A) and Back Support (D) to the Back (E) using a Lag Bolt (F) and a Metal Washer (I). Repeat on the other side.


### STEP 3

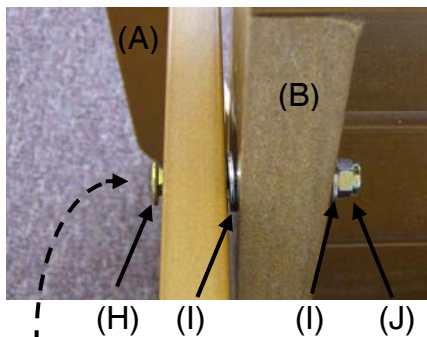

▪Using a Carriage Bolt (H) and a Lock Nut (J), attach the front legs to the Seat (B). Be sure to include a Metal Washer (I) between boards (A) and (B), and under the Lock Nut. Repeat on the other side.

*Tip: Tap Carriage Bolt (H) gently with a hammer until it does not turn when tightening Lock Nut (J).*

### STEP 4

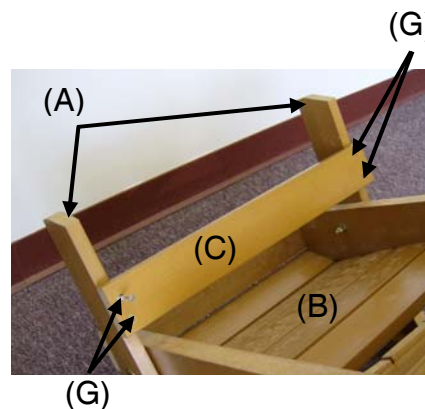

▪Screw the Front Leg Cross Beam (C) to the back of the Front Legs (A) using 4 Wood Screws (G).