



ASSEMBLY GUIDE

Pocono Ottoman, Side table & Conversation table

DSOT2 - DSST1 - DSCT1 [10.11.12]





TOOLS

- 7/16" Wrench
(Socket wrench recommended)
- Hammer

COMPONENTS

| Part # | Description | Qty |
|--------|-------------------|-----|
| (A) | Ottoman/Table top | 1 |
| (B) | Legs | 4 |
| (C) | Carriage bolts | 8 |
| (D) | Flange Nuts | 8 |

This guide is for the Pocono ottoman, side-table AND conversation table... all three items are assembled in the same way.

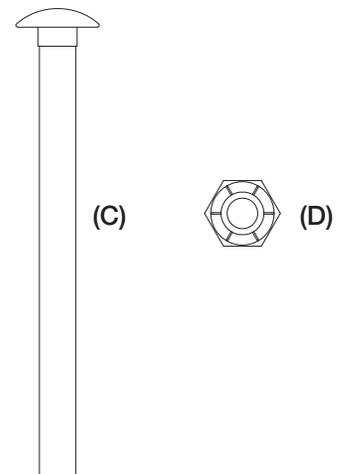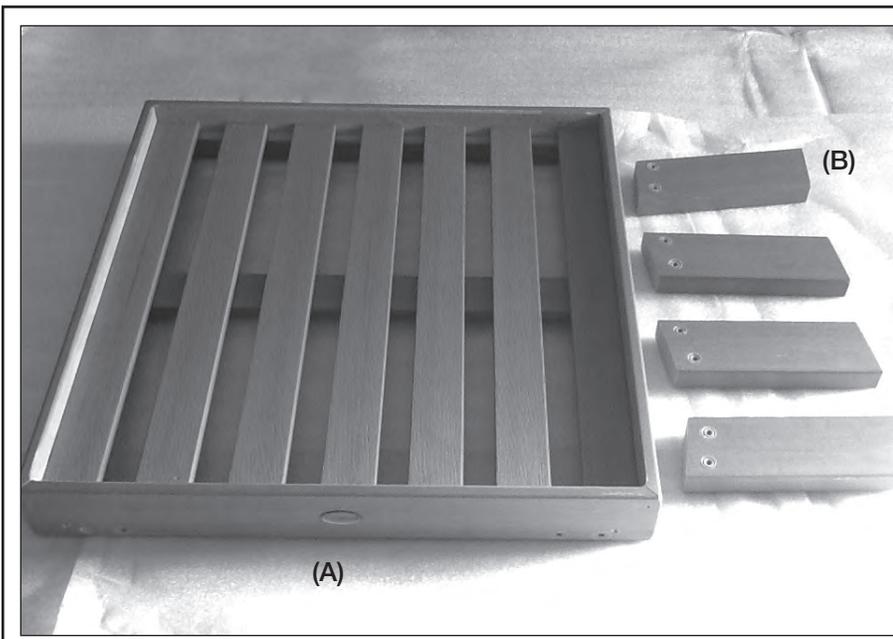


Attaching Legs to Ottoman/Table Top

With the Ottoman/Table Top (A) flipped upside down, position and hold the Leg (B) and Ottoman/Table Top together, and attach by inserting two Carriage Bolts (C) into the pre-drilled holes as shown in Image #1.

Note: Holes are pre-drilled for the Carriage Bolt to pass through, but use a hammer to firmly tap the bolt end several times so that the square neck sinks into the highwood material.

Attach Flange Nut (D) to the Carriage Bolt from the inside of Ottoman/Table Top and tighten so that it further pulls the bolt neck into the material leaving just the dome flush with the surface. **Do not over-tighten bolts, but ensure that a firm and secure connection is made in every instance to avoid excess movement in joints.**

Repeat step for each Leg.

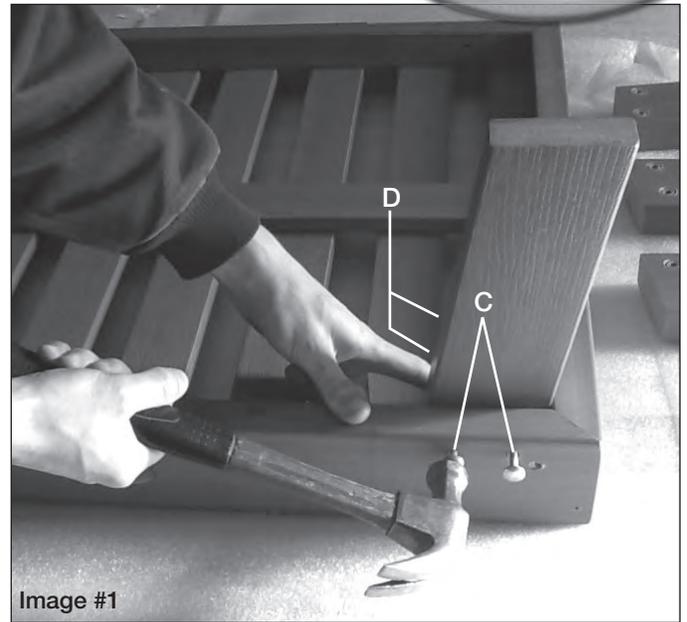

ENJOY YOUR HIGHWOOD FURNITURE!



For information on Care and Cleaning your *highwood*[®] product visit www.highwood-usa.com/care.html

Visit our Website and Facebook page to see more *highwood*[®] products!

www.highwood-usa.com • www.facebook.com/highwoodUSA