

# LEUCOS®

INSTALLATION INSTRUCTIONS for LEUCOS USA

## CELINE S and S 35



A1 Enclosed



One installer



Save instructions



Revised  
23 April 2003

**DISCONNECT POWER BEFORE BEGINNING INSTALLATION.  
FOLLOW INSTRUCTIONS CAREFULLY TO AVOID SCRATCHING THE GLASS DIFFUSER.**


1. **ILL.1** - Before securing the mounting plate to the ceiling, remove the cover "B" from ceiling plate "A".
  2. **ILL.2** - Secure plate "A" to the junction box.
  3. **ILL.2** - Guide the fixture's electrical wires through the large opening "X" and the steel Cable through the small opening "Y" in the center of the plate "B".
  4. **Fig.2** - Unscrew the adjustable pin "S" and guide the steel cable through it. Pin "S" has a self locking system. Push up pin "S" to unlock the steel cable. Having determined the correct height of the fixture, secure the steel cable screwing pin "S". To make sure that the fixture is well secured, place the fitting "J" at the end of the steel cable as shown.
  5. **ILL.2** - Guide the electrical wire through the plastic clamp "H" then lock it with the side Plastic screw.
  6. **ILL.2** - Connect the fixture's electrical wires to the supply wires.
  7. Replace cover "B" into plate "A" pushing up on the three pins "W". During this operation take care that pin "S" be well guide through the hole "Y" of the cover.  
**ATTENTION: TAKE CARE THAT THE CENTRAL BRACKET STAND CORRECTLY INSIDE THE TWO SIDE PINS "K", AS SHOW ILL.3. THIS DEVICE HAS BEEN TORSION.**
  8. **ILL.4 - 5**. Remove the glassholder "N" from the socket assembly "M" by turning counterclockwise to unlock the two parts. Guide the socket assembly "M" through the glass diffuser "C". Slip glassholder "N" through the socket "M" by turning it clockwise to the stop. Then back-out lock screw "P" from the hole in socket "M". Lower glass diffuser onto glassholder.
- PLEASE NOTE: EACH GLASS IS AN INDIVIDUAL HANDBLOWN PLACE.**
9. **ILL.4 - 5**. There fore each may have a different weight distribution. Should the glass not set level after installation, it can be levelled as illustrated by the arrows in **ILL.5** by: 1- rotating the glass while firmly holding the socket assembly and/or. - 2. Sliding the cable retainer slightly with in its slot. After having balanced the glass diffuser properly secure the cable retainer by locking it with the set screw "P".
  10. Install the light bulb. Restore power.

**CELINE S and S 35** max 1x100W 120V - E26 - TYPE A19


For additional informational please contact  
your local dealer or **LEUCOS U.S.A.**  
At: Tel. (732)225-0010 - Fax (732) 225-0250

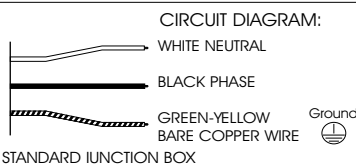


**ILL. 1**

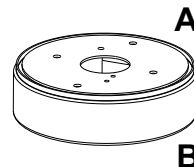


**ILL. 2**

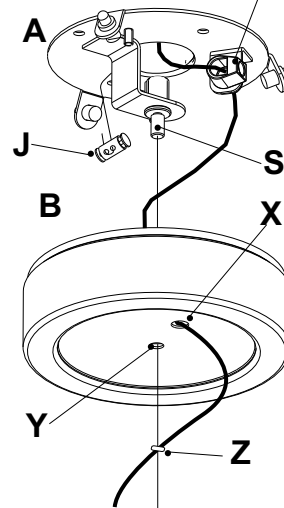

**ILL. 3**

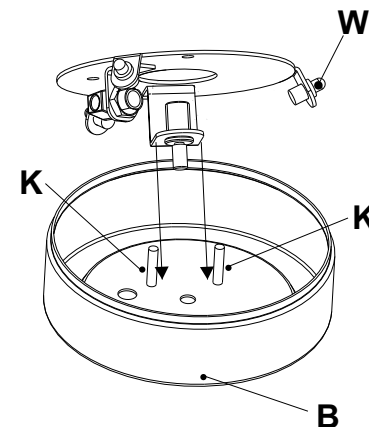

**ILL. 4**

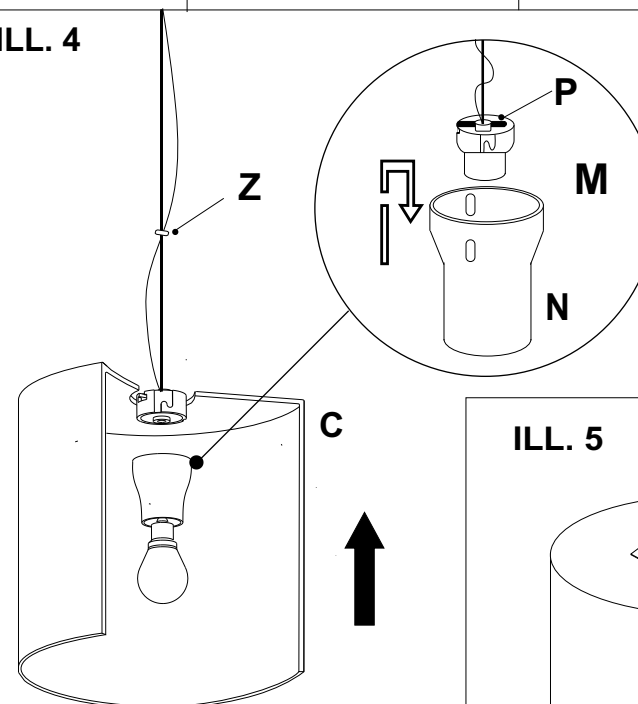

**ILL. 5**

