



**DRAKE CEILING MOUNT FIXTURE  
ASSEMBLY/INSTALLATION INSTRUCTIONS**

**ASSEMBLY AND INSTALLATION (CONT.)**

*Please read carefully and save these instructions, as you may need them at a later date.*

**CAUTION**

**WARNING:** Risk of Fire. Min 90°C supply conductors. Consult a qualified electrician to ensure correct installation.

Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

**GENERAL**


All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

**ASSEMBLY AND INSTALLATION**

- Before installing, preset the NIPPLE length:
  - Thread the HEX NUT onto the NIPPLE, and screw the NIPPLE into the COUPLING on the CANOPY a minimum of four turns.
  - Place the center holes of the GLASS SHADE over the NIPPLE and adjust the NIPPLE so that it protrudes out of the CAP 1/4". Remove the GLASS SHADE & CAP and secure the NIPPLE in place by tightening the HEX NUT.
- Pull the SUPPLY WIRES and the SUPPLY GROUND WIRE out from the JUNCTION BOX and attach the CROSS BAR to the JUNCTION BOX using the slotted holes on the CROSS BAR and the FIXTURE SCREWS provided.
- Thread the FIXTURE SCREWS two full turns into the appropriate threaded holes in the CROSSBAR. (Check the CROSSBAR against the fixture KEY HOLE SLOTS to ensure proper fit.)
- Make wiring connection: Attach the FIXTURE GROUND WIRE to the SUPPLY GROUND WIRE, attach both to the CROSSBAR with the GREEN GROUND SCREW. Connect the BLACK SUPPLY WIRE to the BLACK FIXTURE WIRE and WHITE SUPPLY WIRE to the WHITE FIXTURE WIRE with WIRE NUTS.

- Carefully tuck all wiring back into the JUNCTION BOX. Lift the CANOPY over the JUNCTION BOX, positioning the FIXTURE SCREWS heads through the large openings of the KEY HOLE SLOTS. Rotate the CANOPY until the FIXTURE SCREW heads are seated at the small ends of the KEY HOLE SLOTS, secure them with a screwdriver.
- Install the bulbs (Sold Separately). Risk of fire, Use (2) MAX 60W Type A lamps. DO NOT EXCEED THE MAXIMUM WATTAGE.
- Place the center hole of GLASS SHADE over the NIPPLE. Thread PLASTIC WASHER, METAL WASHER and HEX NUT at the bottom of the NIPPLE and hand tighten. Pass the CAP over NIPPLE and secure it with FINIAL. Restore electric power to installation point.

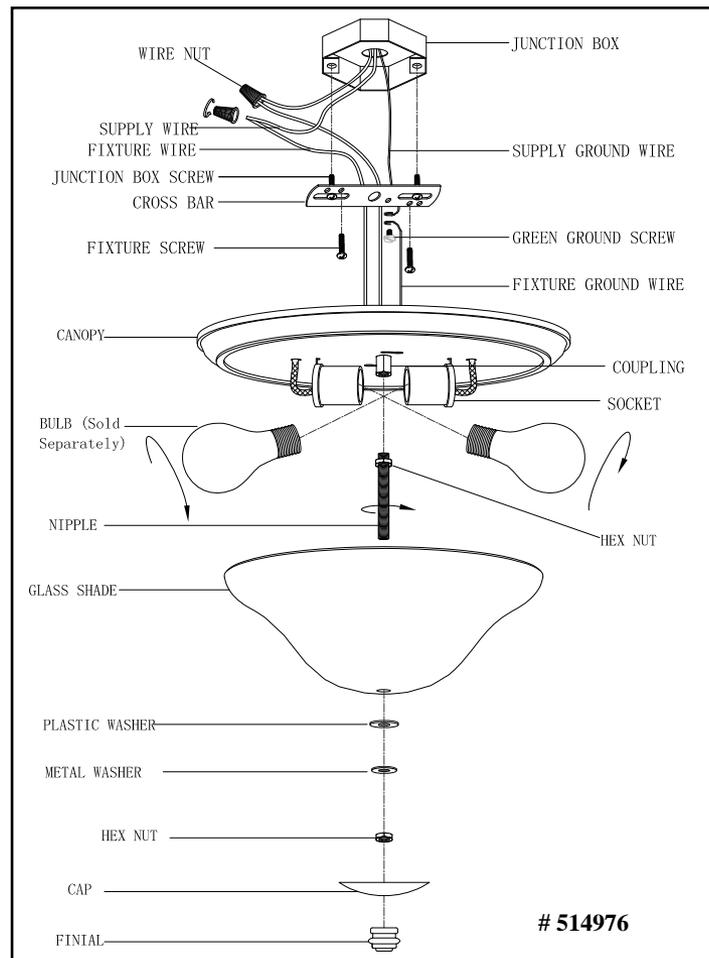

**IF IN DOUBT ABOUT ELECTRICAL INSTALLATION,  
CONSULT A LICENSED ELECTRICIAN.**

*Customer Service 1-800-558-8700*