

OPERATING MANUAL

Please read all instructions before using model 60-2910.



10 motor massage cushion with heat



Power adapter for home and office



Power adapter for car

IMPORTANT SAFEGUARDS

When using electrical products, basic safety precautions should always be followed. To reduce the risk of electric shock:


- Always unplug the product from the electrical outlet immediately after using and before cleaning.
- Do NOT reach for this product if it has fallen into water. Unplug it immediately.
- This product should NEVER be left unattended when plugged in. Unplug from outlet when not in use.
- Close supervision is needed when this product is used near children, or with disabled persons.
- Do NOT use adapters or attachments not recommended by Comfort Products, Inc.
- NEVER operate this product if it has a damaged cord, plug, or power adapter. Do NOT operate this product if it is not working properly, if it is damaged, or if it has been dropped into water.
- Use heated surfaces carefully. Persons with sensory deficiencies should not use this product.
- Keep cord away from heated surfaces.
- NEVER insert objects into any openings of the cushion.
- Do NOT operate where aerosol (spray) products are used or where oxygen is administered.
- Do NOT operate under a blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.
- Do NOT carry this product by the cords.
- Do NOT use outdoors.

CAUTION

- This product is not recommended for medical use.
- Consult your doctor prior to using this product if you are pregnant, have a pace-maker, or if you have concerns regarding your health.
- Do NOT use this product for more than 30 minutes at a time.
- Extensive use could lead to excessive heating and shorter life of product. Allow the unit to cool 30 minutes after use.
- Do NOT use product on swollen or inflamed areas of the skin.
- Do not use this product on any wood surfaces as this may cause damage.
- Avoid contact with sharp edges or pointed objects, which might cut or puncture the fabric.
- Do NOT attempt to repair the massager. There are no user-serviceable parts.

INSTALLATION

- Carefully remove contents from packaging, and check all contents.
- Position the cushion on your chair or car seat.
- Loop the two adjustable straps of the back cushion around the back of your chair or car seat, and then tighten until secure.
- Complete the installation by connecting the small elastic straps together behind your chair or car seat.
- Connect the car adaptor or the home adaptor to the power plug located in the back of the cushion. To change out the car or home adaptors, see illustration below.

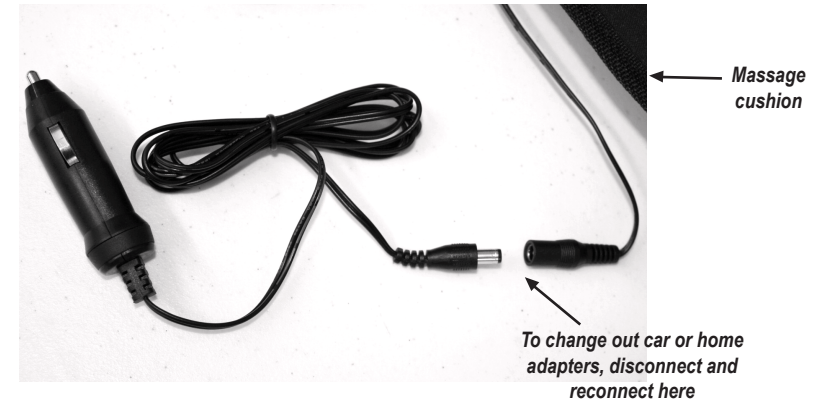

MAINTENANCE

- For long-term storage, place unit in its box or a safe, dry, cool place.
- Do not place cushion in any liquid to clean. To clean, first disconnect cushion from power supply. Test on a small area of fabric. Clean fabric cover by wiping with a damp sponge, using a mild detergent or soap. Pat dry with clean, dry cloth.
- Do not use abrasive cleaners, brushes, gasoline, kerosene, glass/furniture polish, paint thinner or water hotter than 120°F to clean.



Massage cushion

MASSAGE

- Press the POWER button on the LCD controller to start massaging.
- Press the FUNCTION button to cycle through the random massage modes of “Tapping”, “Up&Down”, “Wave”, “All Motors”, and “Random”.
- Select the desired massage area by pressing the NECK, UPPER BACK, THIGHS, LOWER BACK, or LUMBAR buttons.
- Press the TIMER button to select options of 10, 20, or 30 minutes.
- To choose the massage speed, press either the FAST or SLOW buttons to increase or decrease the massage speed.
- To choose the massage intensity, press either the FAST or SLOW buttons to increase or decrease the massage intensity.

HEAT

Press the HEAT button to activate the heat (after you have activated the POWER button). The “HEAT” icon will blink when heat is activated. Press again to deactivate heat.

NOTE: This product uses a warming heat with a maximum temperature of 130°F. It is not intended to be used as a therapeutic heating pad. Please allow a few minutes to reach maximum temperature.



One Year Limited Warranty

Comfort Products warrants this product to be free from defects in material and workmanship for 1 year. This warranty is made by Comfort Products only to the original end-user customer acquiring the product directly from Comfort Products' authorized dealers as shown by the original sales receipt. Any problems arising from misuse, attempts at repair, dropping or extreme wear are not covered by this warranty. If you experience any problems, or have any questions regarding the operation of this unit, please visit www.comfortproducts.net/support. This warranty applies only to end-user customers in the United States. Any authorized return should include original cushion and dated receipt.

MODEL: 60-2910. If you experience any problems or have a question regarding the operation of this unit please visit

www.comfortproducts.net/support.

Or e-mail at **customerservice@comfortproducts.net**.



Comfort Products INC.
P.O. Box 999
Memphis, TN 38101
www.comfortproducts.net
customerservice@comfortproducts.net

Made in China