QUOIZEL

6 CORPORATE PARKWAY
GOOSE CREEK, SC. 29445
www. quoizel. com

INSTRUCTION SHEET IS-KY1508
STYLE NUMBER: KY1508IB

PACKAGE CONTENTS

PART	DESCRIPTION	QUANTITY
A	Crossbar	1 pc
B	Green Ground Screw	1 pc
C	Mounting Screw	2 pcs
D	Lock Washer	2 pcs
E	Hex Nut	2 pcs
F	Mounting Ball	2 pcs
G	Socket Collar Tool	1 pc
H	6" Rod	2 pcs
I	12" Rod	2 pcs
J	Ceiling Canopy	1 pc
K	Socket Assembly	1 pc
L	Shade	1 pc
M	Socket Collar	1 pc
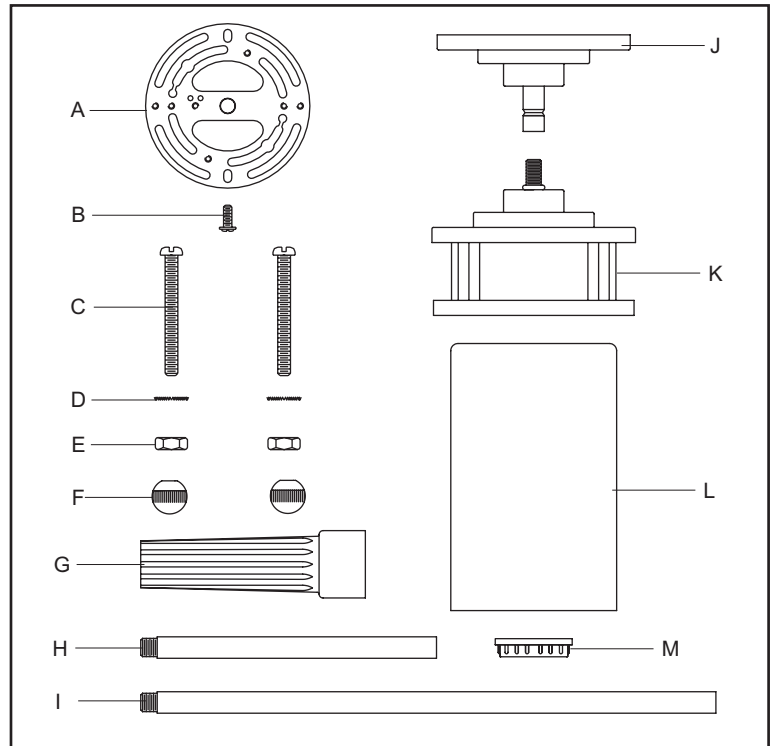
⚠ WARNINGS AND CAUTIONS

WARNING:
● Before beginning the installation, turn off electricity at the circuit breaker box or the main fuse box by switching off the circuit breaker or removing the fuse.

CAUTION:
● These instructions are provided for your safety. It is very important that they are read completely before the installation of your fixture. We strongly recommend that a professional electrician install the fixture.
● Disconnect fixture from the power source before replacing the bulb(s), making sure that bulb9s) had sufficient time to cool down. DO NOT subject the lamp to any shock while lit as shattering of lamp may result.

PREPARATION

● Before beginning installation of product, make sure all parts are present. Compare parts with package contents list and diagram above. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement part.
● Estimated Assembly Time: 20 - 30 minutes
● Tool Required for Assembly (not included): Flathead screwdriver, Phillips screwdriver, Pliers, Electrical tape, Wire cutter, Safety glasses and (1) 100W A19 medium base bulb.
● Helpful Tools (not included): Wire strippers.

INSTALLATION INSTRUCTIONS

STEP 1:
a. Determine the Rods to be assembled according to your desired hanging height.
b. Pass the Supply Wires with Ground Wire through the chosen Rods and then thread Rods and Socket Assembly together as shown. Hand-tighten until snug.

6" Rod

6" Rod

12" Rod

12" Rod

Supply Wires with Ground Wire

Socket Assembly
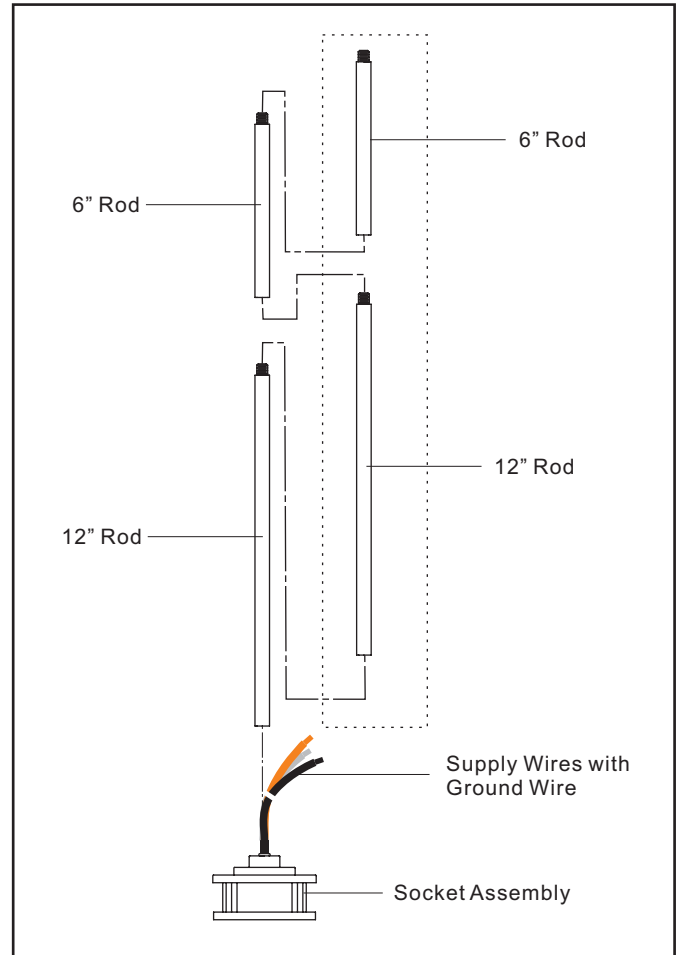
STEP 2:
a. Pass the Supply Wires with Ground Wire through the Swivel and Ceiling Canopy.
b. Thread the Swivel onto the top end of the Upper Rod. Hand-tighten until snug.

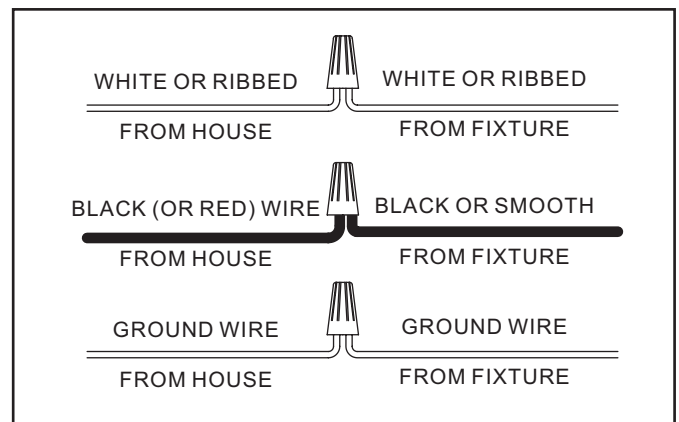Ceiling Canopy

Swivel

Supply Wire with Ground Wire

Upper Rod
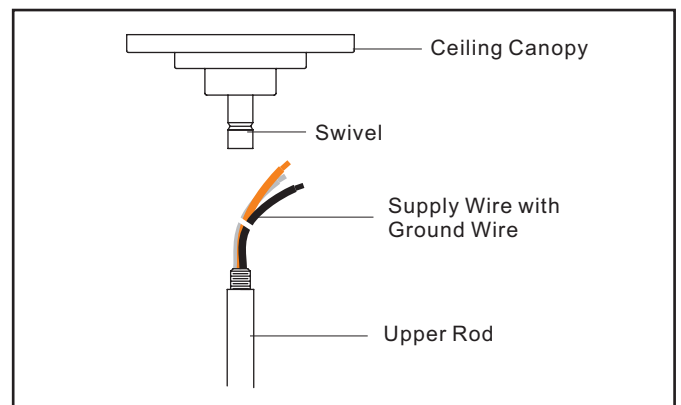
STEP 3:

a. Screw the Mounting Screws into the Crossbar, place the Lock Washers over the Mounting Screws and thread the Hex Nuts onto the Mounting Screws as shown. Secure the position of the Mounting Screws by tightening the Hex Nuts against the Crossbar.

b. Secure the Crossbar to the Outlet Box with Outlet Box Screws.
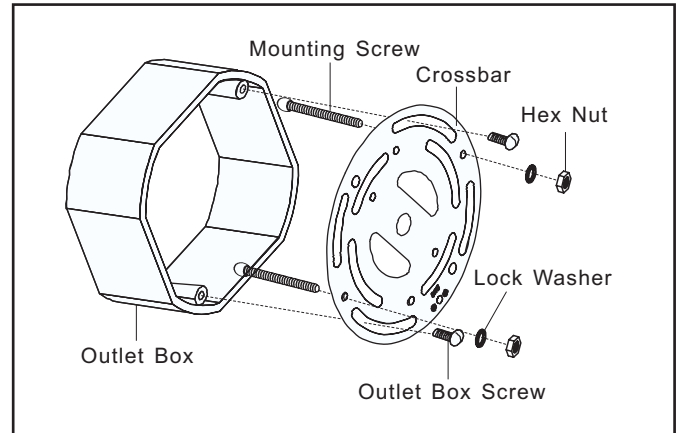
STEP 4:

* Use Wire Connectors (not supplied) to connect the wires.

a. Connect the House Ground Wire to the Fixture Ground Wire.

b. Connect the House White (or Ribbed) Wire to the Fixture Supply Wire (Black or Smooth Side).

c. Connect the House Black (or Red) Wire to the Fixture Supply Wire (Black or Smooth Side).

d. Wrap each connection with approved electrical tape and carefully stuff all of the connected wires into the Outlet Box.
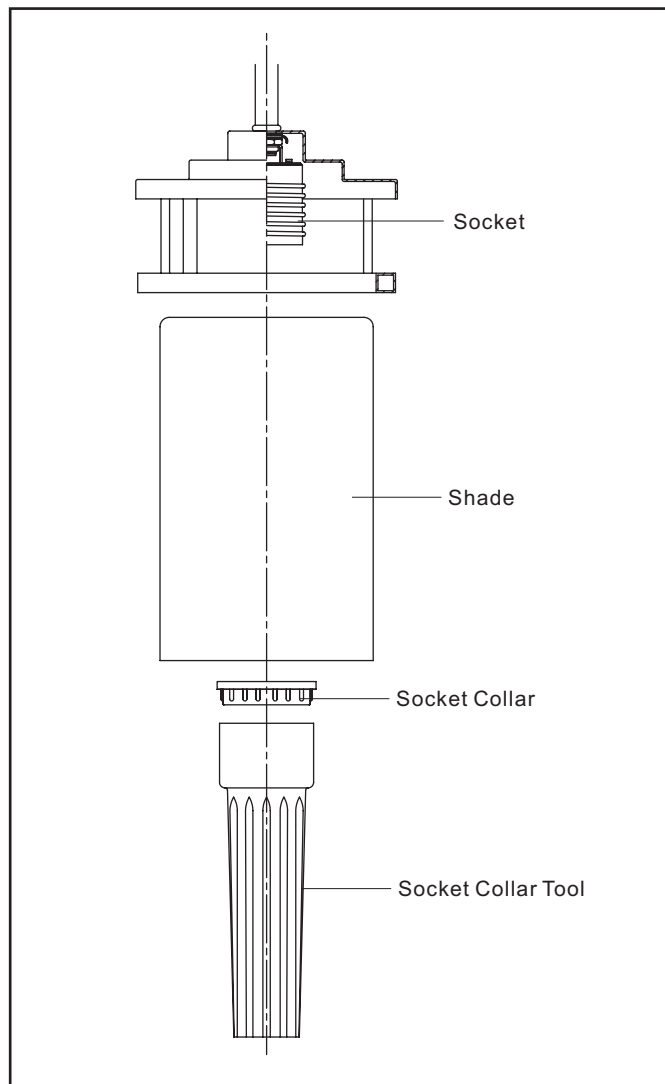
STEP 5:

a. Place the Ceiling Canopy over the Mounting Screws and secure with Mounting Balls. Hand-tighten until snug.
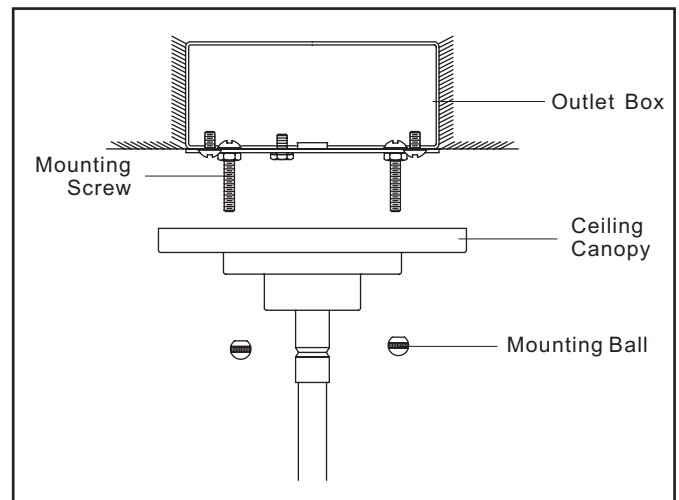
STEP 6:
a. Place the Shade over the Socket as shown. Using Socket Collar Tool, thread the Socket Collar onto the Socket to secure the Shade. Hand-tighten until snug.

Socket

Shade

Socket Collar

Socket Collar Tool

STEP 7:
a. Install the correct bulb referring to fixture markings and/or labels for maximum wattage.

Your installation is completed now. Restore electricity. Retain this sheet for future reference.