## Q UOTZEL 6 CORPORATE PARKWAY GOOSE CREEK, SC. 29445 www. quoizel. com

# INSTRUCTION SHEET IS-IE1717 STYLE NUMBER: IE1717BN

**ISSUED 06-2008** 

Revised 2009-05-31

# PACKAGE CONTENTS

			100020 00 2000	11011000 2000 00
Part	Description	Quantity		
А	Crossbar	1pc		
В	Green Ground Screw	1pc		<b>μ</b>
С	Mounting Screw	2pcs		
D	Lock Washer	2pcs		<u> </u>
Е	Hex Nut (for Mounting Screw)	2pcs	BI	
F	Mounting Ball	2pcs	c−−−	
G	Flat Washer	2pcs	р Т	FF T
Н	Rubber Washer	2pcs		\ <del>\</del> 0
I	Hex Nut (1/8I.P.)	1pc		
J	Stem with Hex Nut	1pc	F • • //	
К	Сар	1pc	G	
L	Finial	1pc	н	
М	Lock Screw	3pcs		
Ν	Steel Ring	1pc		
0	Fxiture Assembly	1pc	J ————————————————————————————————————	
Р	Shade	1pc		
				F



#### WARNING:

• Before beginning the installation, turn off electricity at the circuit breaker box or the main fuse box by switching off the circuit breaker or removing the fuse.

#### CAUTIONS:

• These instructions are provided for your safety. It is very important that they are read completely before the installation of your fixture. We strongly recommend that a professional electrician install the fixture.

• Disconnect fixture from the power source before replacing the bulb(s), making sure the bulb(s) had sufficient time to cool down. DO NOT subject the lamp to any shock while lit as shattering of lamp may result.

#### PREPARATION


- Before beginning installation of product, make sure all parts are present. Compare parts with package contents list and diagram above. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement part.
- Estimated Assembly Time: 15 30 minutes
- Tools Required for Assembly (not included): Flathead screwdriver, Phillips screwdriver, pliers, electrical tape, wire cutters, safety glasses &2, 100 Watt, Type-A Medium Base Bulbs.

• Helpful Tools (not included): Wire Strippers.

# INSTALLATION INSTRUCTIONS


#### STEP 1:

- a. Unfold Side Arms at the 120 degree locations.
- b. Refer to Figure 1, place Steel Ring over Socket Cluster as arrow direction. (Refer to Figure 2)Match the holes on the Ring onto the Mounting Holes on the Side Arms.
- c. Using screwdriver, thread Lock Screws into the Mounting Holes and tighten until snug to secure the Steel Ring onto Side Arms.

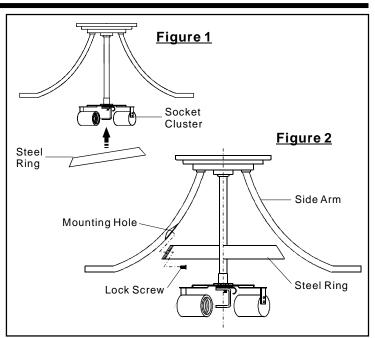

## STEP 2:


- a. Screw the Mounting Screws into the Crossbar, place the Lock Washers over the Mounting Screws and thread the Hex Nuts onto the Mounting Screws as shown. Secure the position of the Mounting Screws by tightening the Hex Nuts against the Crossbar.
- b. Secure the Crossbar to the Outlet Box with Outlet Box Screws.

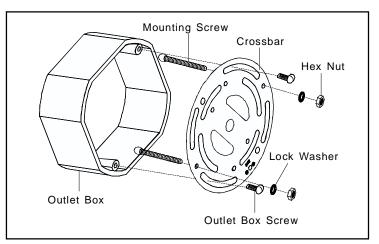

## STEP 3:

 $\ast$  Use Wire Connectors (not supplied) to connect the wires.


- a. Connect the House Ground Wire to the Fixture Ground Wire.
- b. Connect the House White Wire to the Fixture Supply Wire (White or Ribbed Side).
- c. Connect the House Black (or Red) Wire to the Fixture Supply Wire (Black or Smooth Side).
- d. Wrap each connection with approved electrical tape and carefully stuff all of the connected wires into the Outlet Box.

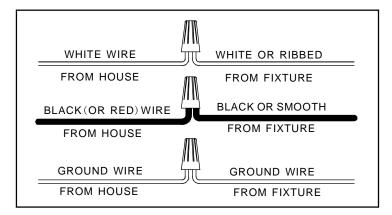

## INSTALLATION INSTRUCTIONS


#### STEP 4:

- a. Carefully tuck all wires into the wall mounted outlet box and position the fixture over the outlet box.
- b. Align the holes in the Ceiling Canopy with the Mounting Screws attached to the Crossbar.
- c. Pass the fixture over the Mounting Screws and secure by threading Mounting Balls onto end of screw. Tighten until snug.

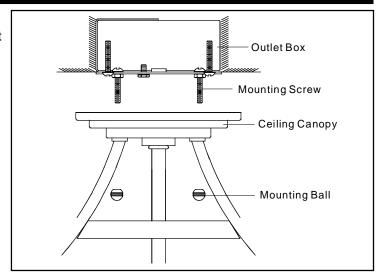

## STEP 5:

a. Thread the Beaded end of the Stem into the Coupling underside of the Socket Cluster. Hand tighten until snug.

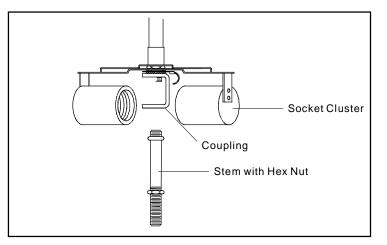


## STEP 6:

- a. Adjust the Hex Nut on the bottom end of the Stem to proper location for rest components.
- b. Place the following components over the end of the Stem in turn:
  Elat Washer, Pubber Washer, Shado, Pubber


Flat Washer, Rubber Washer, Shade, Rubber Washer and Flat Washer.

c. Thread Hex Nut onto the end of the Stem and tighten gently until snug to secure the above parts.

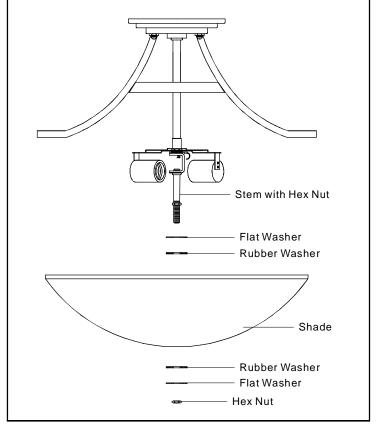

#### STEP 7:

a. Place the Cap over the end of the Stem and secure with the Finial. Hand tighten until snug.

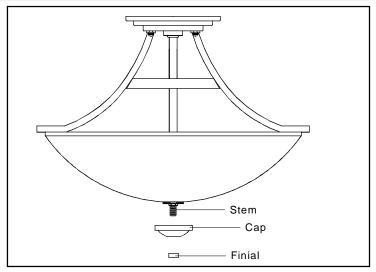

#### STEP 8:

a. Install correct Bulbs referring to fixture markings and/or labels for maximum wattage.

Your installation is completed now. Restore electricity. Retain this sheet for future reference.