

# **Installation And Safety Instructions**

071508

Line art shown may not exactly match the fixture enclosed. However, the installation instructions do apply to this fixture. Fill in Item Number on Carton and File This Sheet For Future Reference. ITEM#

#### **IMPORTANT SAFETY INSTRUCTIONS**

- Be sure the electricity to the system you are working on is turned off; either the fuse removed or the circuit breaker set at off.
- Use of other manufacturers components will void warranty, listing and create a potential safety hazard.
- If you are unclear as to how to proceed, contact a qualified electrician.
- You don't need special tools to install this fixture.
- Be sure to follow the steps in the order given.
- Proper wiring is essential for the safe operation of this fixture.
- Read instructions carefully.
- Save these instructions.

WARNING: TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PERSONAL INJURY, MOUNT TO OUTLET BOX OR SUPPORTING SYSTEM ABLE TO SUPPORT THE WEIGHT OF THE FIXTURE.

CAUTION: FIXTURES WITH PHOTO-CELLS SHOULD BE MOUNTED AT LEAST 48" FROM ALL SIDES TO AVOID REFLECTION OF LIGHT BACK ONTO PHOTO-CELL, CAUSING THE PHOTO-CELL TO MALFUNCTION OR FLICKER.

NOTE FOR FIXTURES THAT ARE SOLID BRASS OR SOLID COPPER: YOUR HANDCRAFTED, SOLID BRASS/SOLID COPPER LIGHTING FIXTURE HAS BEEN COATED WITH A DURABLE, BAKED ON ACRYLIC LACQUER WHICH GIVES MAXIMUM PROTECTION AGAINST THE WEATHER. IN TIME, HOWEVER, THE BRIGHTNESS OF THE BRASS WILL TARNISH GIVING WAY TO AN AUTHENTIC OLD WORLD BRASS FINISH. NOTE: TO KEEP YOUR SOLID POLISHED BRASS/COPPER FIXTURE LOOKING NEW FOR YEARS TO COME, REGULARLY APPLY A GOOD QUALITY NON-ABRASIVE CAR WAX TO ALL METAL SURFACES, GIVING THE FIXTURE AN EXTRA PROTECTIVE COATING. IF THIS ADDITIONAL CARE IS NOT TAKEN, YOUR FIXTURE WILL TURN INTO A PATINA FINISH OVER TIME

#### **ORDERING PARTS**

#### WET LOCATION


- NOTE: FOR FIXTURES LABELED FOR WET LOCATION AND USED OUTDOORS.
- **CAUTION:** To reduce the risk of electrical shock, provide a watertight seal between the fixture and the mounting surface by using a silicone or similar caulking.

#### **BEFORE YOU BEGIN**

Carefully remove the fixture from the carton and check that all parts are included, as shown in figure 1. Be careful not to misplace any of the screws or parts which are needed to install this fixture. Parts for this fixture can be ordered from place of purchase. Be sure to use exact wording from illustration when ordering parts.

#### CLEANING

To clean, wipe fixture with a soft cloth. Clean glass with a mild soap. Do not use abrasive materials such as scouring pads or powders, steel wool or abrasive paper.

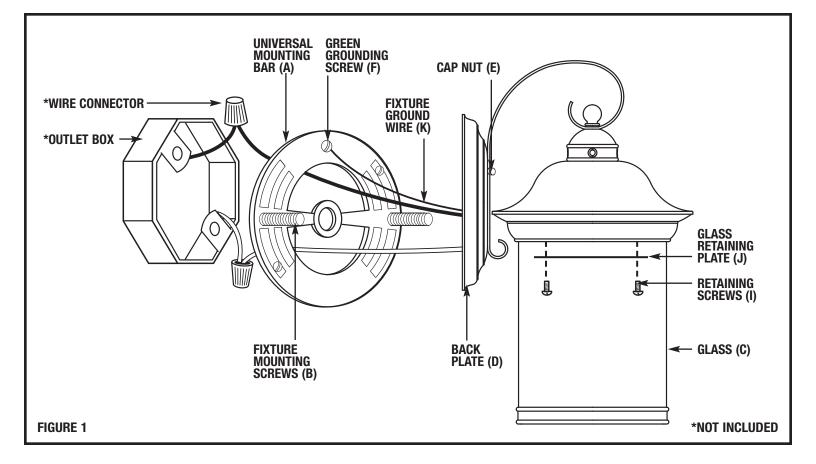

#### INSTALLATION

HC-919

### IMPORTANT: DO NOT ATTACH FIXTURE DIRECTLY TO OUTLET BOX.

### STEP 1:


Insert fixture mounting screws (I) in threaded holes of universal mounting bar (A). Run fixture mounting screws (I) all the way down to the heads.

### STEP 2:

Place universal mounting bar (A) against outlet box (not supplied) and secure in place using outlet box screws (not supplied). Be sure the fixture mounting screws (I) are perfectly horizontal so fixture hangs straight.

### STEP 3:

**A.** Take note of the color of the wire(s) on your fixture. Identify which group your fixture wire(s) falls into and connect the wires according to the directions below:

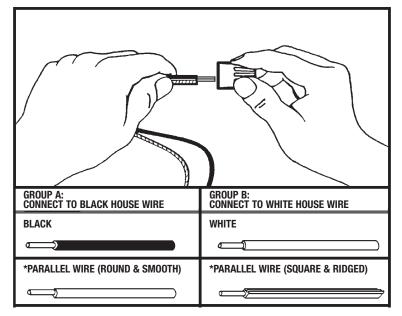

\*Note: When parallel wire is used, the tracer wire is square shaped or ridged and less tracer wire is round in shape or smooth

(Seen best when viewed from wire end). To separate wires, grasp the ends of each wire and pull apart.

**B.** Take your fixture wire(s) from group A and place evenly against the black wire from the outlet box. **DO NOT** twist wires together before using wire connectors.

**C.** Fit a wire connector (not supplied) over the wires and thread the connector clockwise until you feel a firm resistance.

**D.** Gently try to remove the wires from the connector, If you can remove the wires, carefully re-do steps B and C, as above and check again for a firm connection.

**E.** Connect the fixture wire from group B to the white wire from the outlet box in the same manner.



**GROUNDING INSTRUCTIONS:** The green grounding screw (F) is to be inserted into the hole with two raised dimples provided on the universal mounting bar (A). Wrap the fixture ground wire (K) and the ground wire from the outlet box (bare metal or green insulated wire) around the green grounding screw (F) on the universal mounting bar (A) and tighten to secure. **NEVER CONNECT GROUND WIRE TO BLACK OR WHITE POWER SUPPLY WIRES.** 

### FINAL ASSEMBLY

Make sure no bare wires can be seen outside wire connectors.

## STEP 5:

After wires are connected, tuck them carefully inside the outlet box. Position backplate (D) over mounting screws (B) and secure in place with cap nuts (E).

## STEP 6:

Raise glass (C) to fixture body and secure by placing glass holding plate (J) around socket and threading retaining screws (I) through glass holding plate.

### STEP 7:

Install self ballasted lamp (G) into socket (H) by twisting into place gently.

# FIXTURES WITH A ONE PIECE LAMP / BALLAST COMBINATION

