

# **Installation Guide**

#### Floor Mount Tub Filler F502-3-1


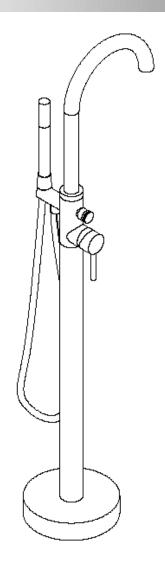



Fig A DIMENSIONS

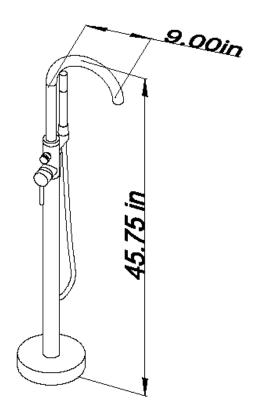

## SPECIFICATIONS AND STANDARDS

□ Recommended flow pressure between 15 and 75 psi. Above 90 psi it may be necessary to install a pressure reducer. Maximum operating temperature 176°F


1. Insert the plug and secure with the 4 bolts as shown below.

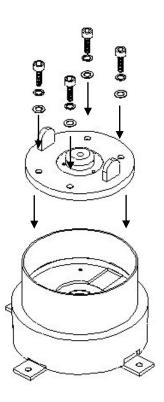

#### INSTALLATION STEPS

2. Install rough-in a minimum of 2", maximum of 3" below finished floor surface. If installing onto a wood sub-floor, install a wood support between the joists that is minimum 2" thick by 6" wide (2"x6" pre-cut lumber is not sufficient).


NOTE: the rough-in can be placed at any orientation as the plate that attaches the tub filler to the rough-in is adjustable.

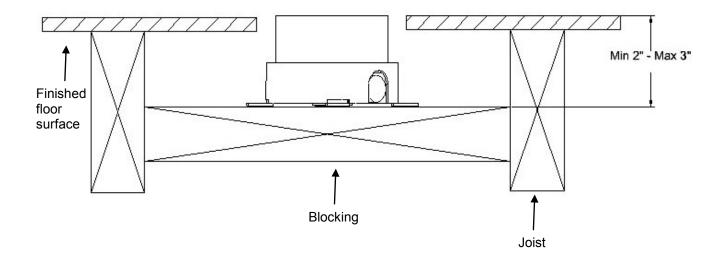

- 3. Ensure that the rough-in is level by u sing the bubble on the plug as reference and secure the rough-in to the floor.
- 4. Connect the water supply. Hot and cold inlets are clearly marked, ensure that hoses are connected correctly.
- 5. Turn on water supply and check for any leaks.
- 6. Install finished floor, cut off any excess plastic from the roughin so that it is flush with finished floor surface.

### **INSTALLATION STEPS**


7. Push escutcheon onto faucet body then attach plate to bottom of faucet.

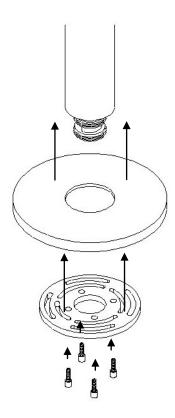

8. Remove plug from rough-in.

### **INSTALLATION STEPS**

9. Place the faucet into the rough-in, turn to correct orientation and secure with the bolts provided.

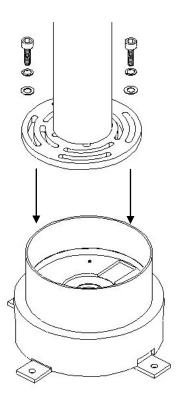

- 10. Push the escutcheon down to cover the rough-in.
- 11. Attach handshower.
- 12. Enjoy!

### CARE & MAINTENANCE

For best results, keep the following in mind to retain the high quality finish of your AR70S faucet:

- Use a soft, dampened sponge or cloth. On no account should you use an abrasive material such as a brush, scouring pad or steel wool to clean surfaces.
- Test your cleaning agent solution on an inconspicuous area before applying to the entire faucet.
- Wipe surfaces clean and rinse completely with water immediately after applying cleaning agent.
- An ideal cleaning technique is to rinse faucet thoroughly and blot dry any water from the surface after each use.

#### LIMITED LIFETIME WARRANTY

AR70S faucets are guaranteed for life against leaks and finishing defects for as long as the original purchaser owns it.

Damage caused by accident, misuse, abuse, improper installation, improper cleaning or alteration will void the warranty. This warranty does not cover replacement parts where damage is caused by normal wear and tear. Westover, Inc is not responsible for labor charges, installation or other incidental or consequential costs. Proof of purchase must be provided with all claims.

PLEASE REGISTER THIS PRODUCT ONLINE AT WWW.ARTOS-WESTOVER.COM

Item Nº Serial Nº