

Stingray 2x13W Compact Fluorescent Curved Series

PW602_213_

1.3



Wall Sconces

GENERAL PRODUCT INFORMATION:



This product can mount to either a 4" square electrical box with round plaster ring or an octagon electrical box.



This product is suitable for indoor dry locations only.

This instruction is for the following models:


- Stingray Pluto (PW6022_213_)
- Stingray Mercury (PW6024_213_)
- Stingray Saturn (PW6021_213_)
- Stingray Venus (PW6026_213_)

CAUTION - RISK OF FIRE


This product requires installation by a qualified electrician. Before installing be sure to read all instructions and **TURN THE POWER TO THE ELECTRICAL BOX OFF.**

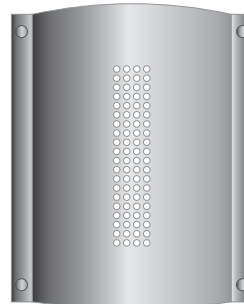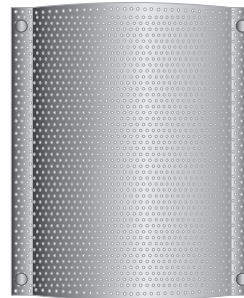


Install the Fixture

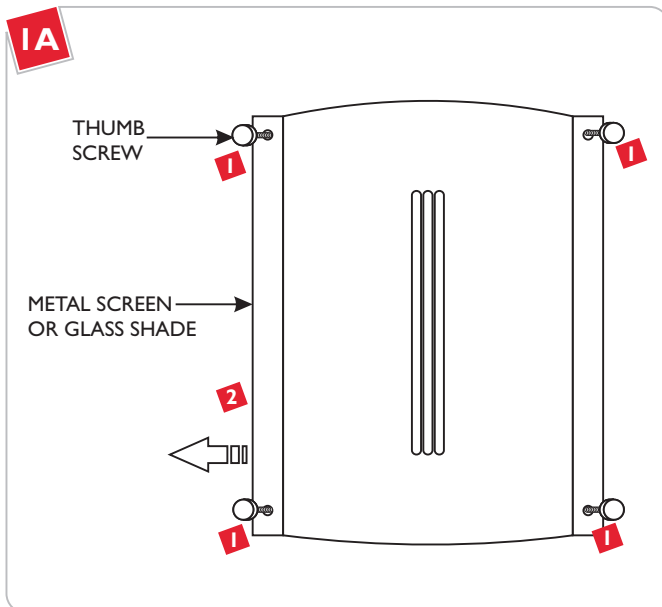


- 1 Unscrew and remove the four thumb screws.
- 2 Carefully remove the metal screen/glass shade.

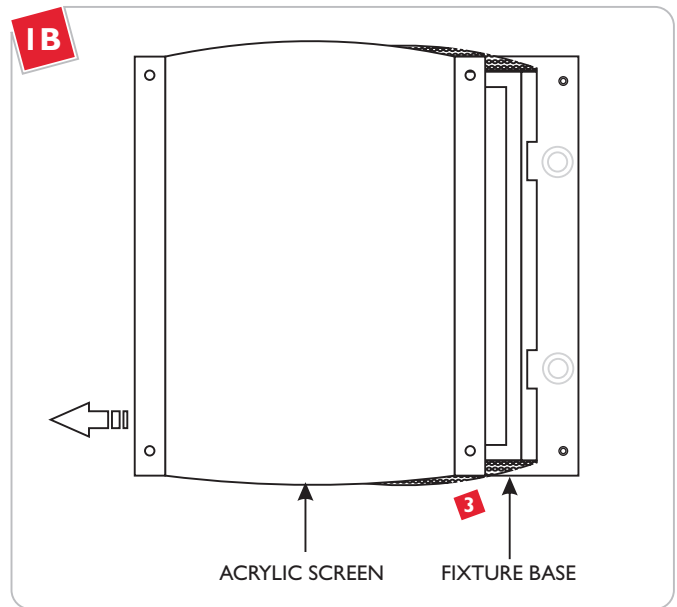


- 3 Lift the acrylic screen from the fixture base. **Omit this step for Stingray Venus.**

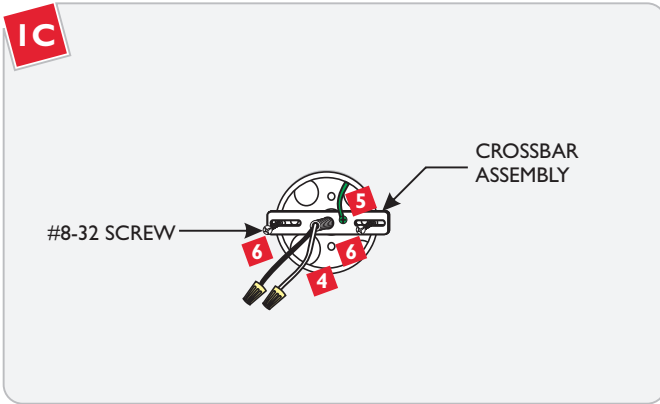


- 4 Feed the power line wires through the crossbar assembly nipple.
- 5 Ground the crossbar assembly in accordance with local electrical codes.
- 6 Mount the crossbar assembly to the electrical box with provided two #8-32 screws.

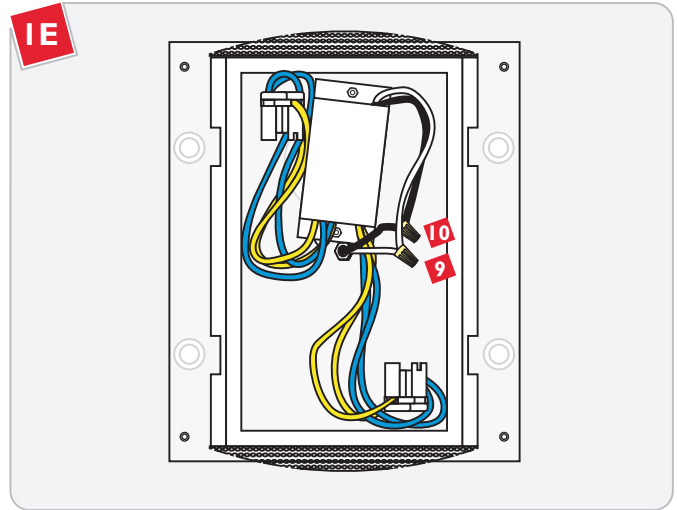

- 9 Connect the white ballast wire to the neutral power line wire with a wire nut
- 10 Connect the black ballast wire to the hot power line wire with a wire nut.

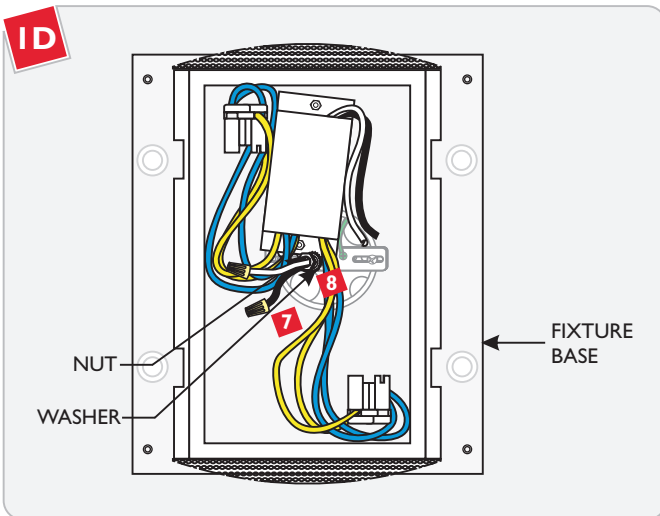

- 7 Feed the power line wires through the fixture base center hole, provided lock washer and nut.
- 8 Slide the fixture base onto the crossbar assembly nipple, align the fixture base and tighten the nut to secure it against the wall.

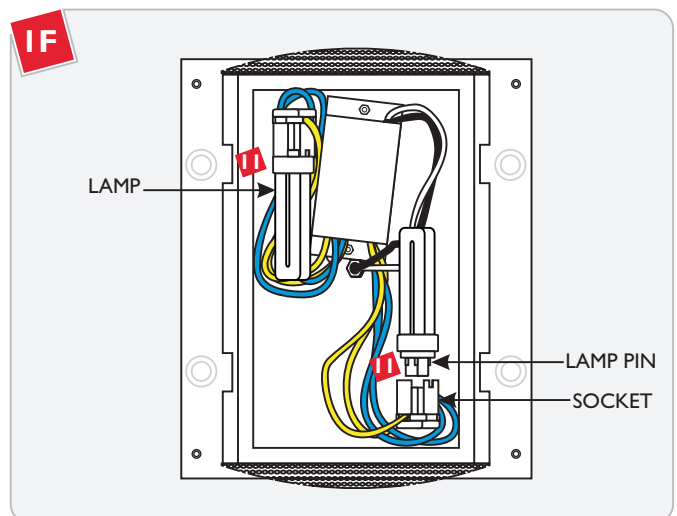

CAUTION: To reduce the risk of a burn or electric shock during relamping, disconnect the power to the fixture.


For The Fixtures With Magnetic Ballast, Use **MAX 13** Watt Type Twin Tube GX23 Base Compact Fluorescent Lamp With Each Socket.




For The Fixtures With Electronic Ballast, Use **MAX 13** Watt Type Quad Tube G24q-1 Base Compact Fluorescent Lamp With Each Socket.



- 11 Install each lamp by pushing the lamp pins completely into the socket holes.

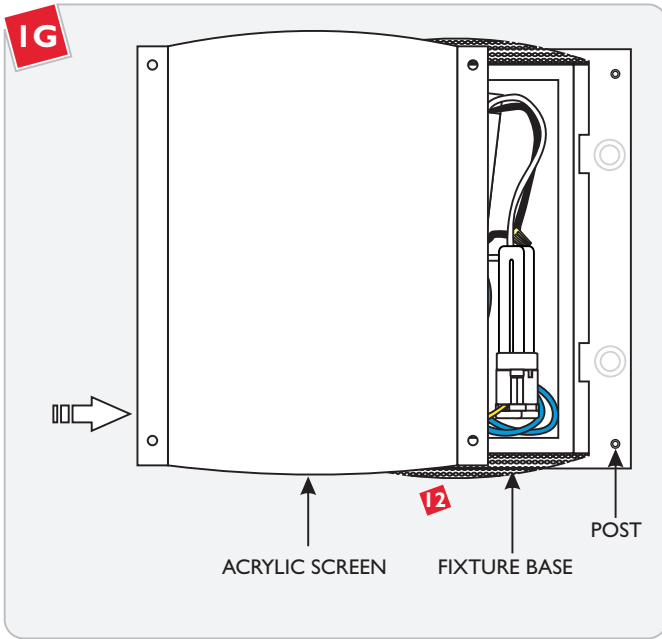

- 12** Replace the acrylic screen onto the fixture base. Make sure that the acrylic screen holes are properly set onto the fixture base posts. Hold the acrylic screen in place. **Omit this step for Stingray Venus.**

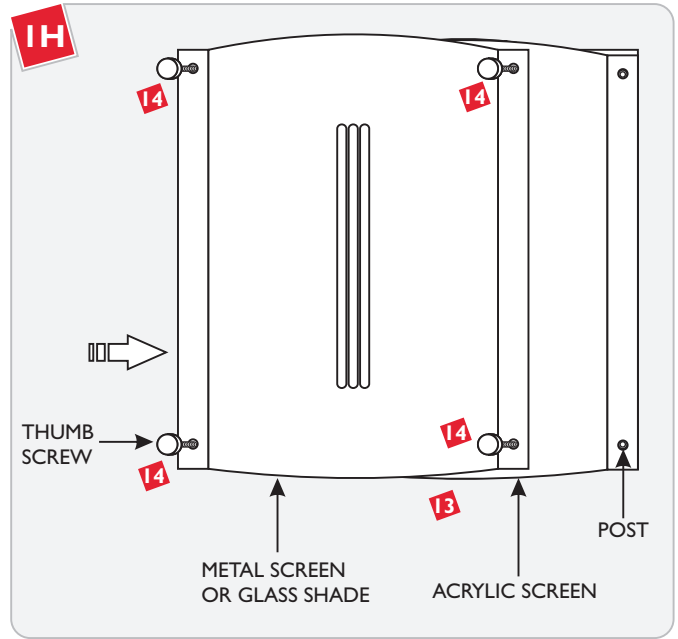

- 13** Replace the metal screen/glass shade. Make sure that the metal screen/glass shade holes are properly set onto the fixture base posts.
- 14** While holding the metal screen/glass shade in place, replace and tighten all four thumb screws.

NOTE: To replace the lamp, follow steps 1 through 3 on page 1, remove the old lamp(s), and then follow steps 11 through 14 on pages 2 and 3.

SAVE THESE INSTRUCTIONS!



7400 Linder Ave, Skokie, IL 60077

800.323.3226 - 847.626.6300

www.lblighting.com

© 2008 LBL Lighting. All rights reserved. The "LBL Lighting" graphic is a registered trademark of LBL Lighting. LBL Lighting reserves the right to change specifications for product improvements without notification.

A Generation Brands Company