



Read this manual completely before riding  
Your Electric Scooter

---

GE - E1050

## Product quality certification

### TABLE OF CONTENTS

TECHNICAL SPECIFICATION.....	1
WARNING.....	2
LIST OF PARTS.....	3
ASSEMBLING.....	4-6
RIDING THE SCOOTER.....	7
MAINTENANCE.....	8

Name		Purchase Date	
Telephone		Mobile Phone#	
Address			

Thanks for purchasing the Electric scooter product from our company, there is 6 months warranty from the date you purchase .Any un- void disaster,such as earth quake...etc to cause the damage of this vehicle will not be covered under the warranty. The Ruber tire and PU wheel and braking stopper is the consuming product and will not cover under the warranty.

HL CORP(SHEN ZHEN)/SPORTING GOODS DIVISION.  
THE 3RD INDUSTRIAL AREA, BITOU VILLAGE,  
SONG GANG TOWN, BAOAN DISTRICT,  
SHE NZHEN 518105 P. R. CHINA  
TEL:86-755-27130185 EXT 311  
FAX:86-755-27130380  
E-MAIL:sales-e@hlcorp.com.cn

## Maintenance

Battery:(for professional use only)

The TRX scooter is powered by three 12V/7AH rechargeable batteries.

For prolong battery life, you must recharge the battery after use. If you must replace the batteries, they are located in the battery compartment under the footrest. To get to them, remove the compartment by loosening the screws.

To remove the batteries disconnect the wires from the battery terminals.

Replace the batteries with new ones and reconnect. Follow the instructions of your new batteries as to whether or not they have to be charged prior to use.

## Trouble shooting guide

Problem	Cause	Solution
The power light by the thumb throttle does not light up when the scooter is on.	1.Battery is discharged. 2.Loose connection inside the scooter.	1.Recharge your scooter. 2.Remove the screws from deck and take it off. Visually inspect all wire connections making sure there are no loose wires, reconnect those that are.
The power lights by thumb throttle light up but scooter still does not work.	The thumb throttle is not operating properly.	Replace the thumb throttle.
Checking noise coming from motor.	Axle in motor has come Loose.	Replace the motor.
Pressed the brake, the scooter stops too slowly.	The brake needs tightened.	Adjust the brake by loosen the bolt on front brake wheel and pull the cable and tightening the bolt.
My scooter is going slower and slower.	1.Low battery. 2.Battery is defective.	1.Recharge your battery for 6-8 hours. 2.Replace battery.

# TECHNICAL SPECIFICATION

## GE-E1050

Motor power:150W side motor x2

Battery:12V/7AH x3

Charger:100~240V(50~60HZ) 1.5A

Charge time:6~8hours

Wheel:16"rubber tire(Front)

8"airless tire(Rear)

Max.speed:12MPH

Average travel distance:12~18miles

Max. Load capacity:220lbs

Product size:

36~3/4" x20~3/4" x44~3/4"~47 ~1/2"

N.W.: 58.7 lbs

G.W.: 66.1 lbs

**CAUTION-ELECTRICALLY  
OPERATED PRODUCT**

## WARNING & SAFETY INSTRUCTION

The battery scooter is not a toy and should not be operated by any one under 12 years old.

The maximum weight capacity is 220 lbs

Only one person at a time should ride.

Check and secure all fasteners before every ride.

Check the air pressure of the front tire before each ride.

Check to make sure the battery is properly charged and installed.

Adults must assist children in the initial adjustment procedures to unfold scooter, adjust handlebar and steering column to proper height.

Do not ride at night.

Always wear protective gear including knee and elbow pads and approved safety helmet when riding the scooter. Always wear shoes.

Ride on smooth, paved surfaces away from motor vehicles.

Avoid sharp bumps, drainage grates, and sudden surface changes.

Avoid streets and surfaces with water, sand, gravel, dirt, leaves, and other debris.

Wet weather impairs traction, braking, and visibility.

Obey all local traffic and scooter riding laws and regulations.

Watch out for pedestrians.

Avoid excessive speed associated with downhill rides.

Brake will get hot from continuous use. Do not touch after braking.

The power switch lock must be in the "o" off position when the scooter is being charged.

Charge the battery after each use.

Do not use or place the battery near extreme heat or fire.

Do not expose the charger to water.

Replace worn or broken parts immediately.

The product should be periodically examined for conditions that may result in the risk of fire, electric shock and injury to persons.

The product should not be used until properly repaired.

Charger should be connected to scooter by an adult.

## RIDING THE TRX SCOOTER

1. Once you have completed the initial charge you are ready to ride. Remember, this is not a toy. The scooter can reach speeds up to 12mph, depending on the terrain and the weight of the rider. You must wear a helmet and protective pads. You must also be aware of all local laws and ordinances, that govern and/or restrict the use of powered scooters. The laws and ordinances vary greatly from municipality to municipality. It is your responsibility to know and abide by your local restrictions.

2. To ride, press the power switch button to the "-" on position.




3. Hold onto the handlebar with both hands. Your left hand will control the brake and your right thumb will control the thumb throttle. As you depress the throttle lever with your thumb, your speed will increase. Release the thumb throttle and apply the brake to stop the scooter. You will control the speed of the scooter by using both the throttle and the brake. When the brake handle is squeezed it cuts all power to the throttle.

4. You may use PU wheel (the smaller middle rear wheel) to balance the TRX scooter when you want to ride raising the front wheel.


Warning: Never try stunts beyond your skill level. Never ride too fast for your skill level.

## Handlebar

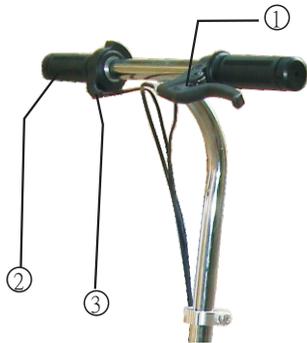


- 1.Brake
- 2.Battery gauge
- 3.Thumb throttle

## Tool bag

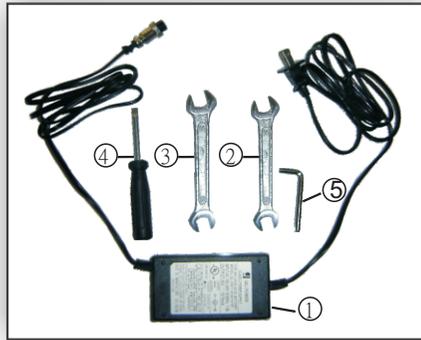


- 1.Charger
- 2.Wrench(12-14mm)
- 3.Wrench(13-15mm)
- 4.Screw driver
- 5.Allen wrench(6mm)

## Fuse(inside battery bag)



Note: For professional reference only


## LIST OF PARTS

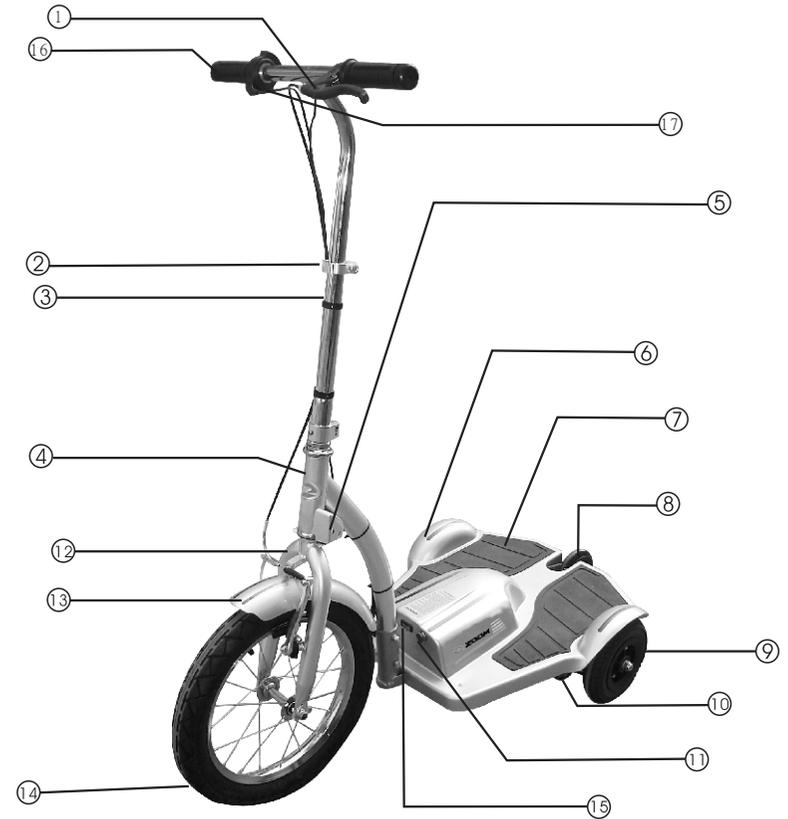

- |                   |                 |                  |
|-------------------|-----------------|------------------|
| 1.Handlebar       | 2.Quick release | 3.T tube         |
| 4.Head tube       | 5.Sensor        | 6.Battery box    |
| 7.Deck            | 8.PU wheel      | 9.Rear wheel     |
| 10.Motor          | 11.Charger plug | 12.Front fork    |
| 13.Front fender   | 14.Front wheel  | 15.ON-OFF Switch |
| 16.Thumb throttle | 17.Brake        |                  |

## ASSEMBLING THE SCOOTER

1. Unpack the scooter carefully, to make sure no parts are misplaced. Place the scooter on a flat, level surface.

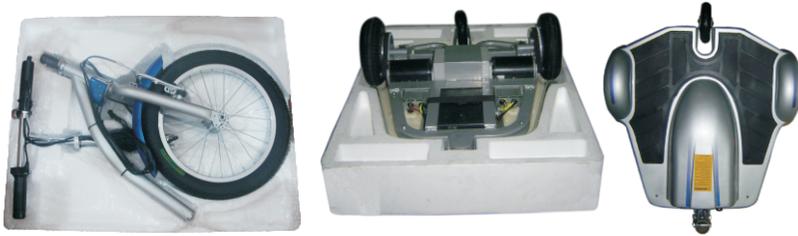


2. Remove the bolts and nuts from the opening which is used to secure the lower tube.
3. Place the lower head tube into the top opening and slip the bolt through and tighten accordingly.




4. Tighten the bolts and nuts by the allen wrench provided in the tool kit.
5. Plug the connectors properly.
6. Insert all the wires into the hole and fixed with the small black button.



6. Ensure that the handlebar is facing front before tightening using the allen wrench provided.

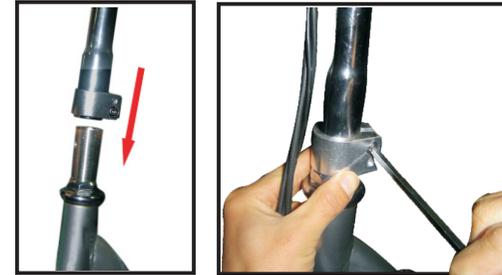

7. Adjust the brake by loosening the bolt on front brake wheel and pull the cable and retightening the bolt.

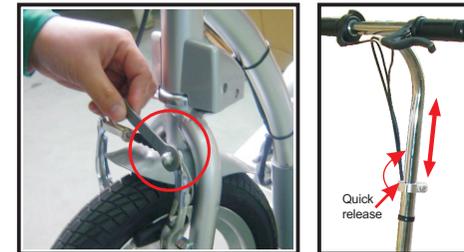

Note: Handlebar height can be adjusted by opening the quick release. Adjust handlebar to desired height and close quick release.

## CHARGING THE BATTERIES

1. Before you ride the scooter for the first time, you must completely charge the batteries for 6-8 hours.
2. To charge the batteries, plug the charger into the charger socket located on side of the body of footboard. Then plug the charger into a wall outlet.
3. Press the power switch button to the "o" off positing before charging the batteries.
4. The green indicator light will be blink while charging and will turn to solid green when fully charged.

